



BAG indicator illuminates. This is normal operation, and does not indicate an SIR system malfunction.


5. Remove the AIR BAG Fuse from the IP fuse block.

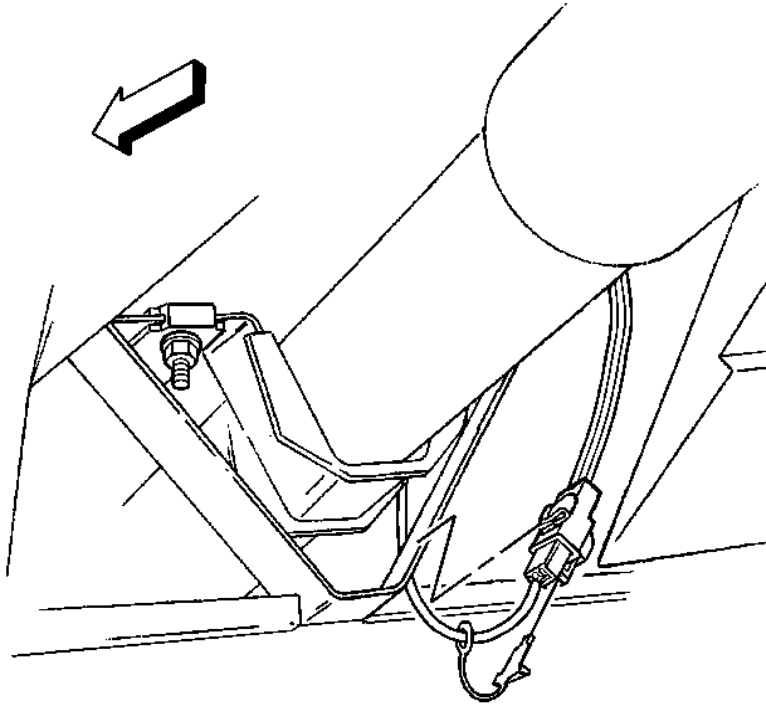


6. Remove the left instrument panel insulator. Refer to [Closeout/Insulator Panel Replacement - Left](#) in Instrument Panel, Gages, and Console.
7. Remove the connector position assurance (CPA) from the inflatable restraint steering wheel module coil connector located at the base of the steering column.

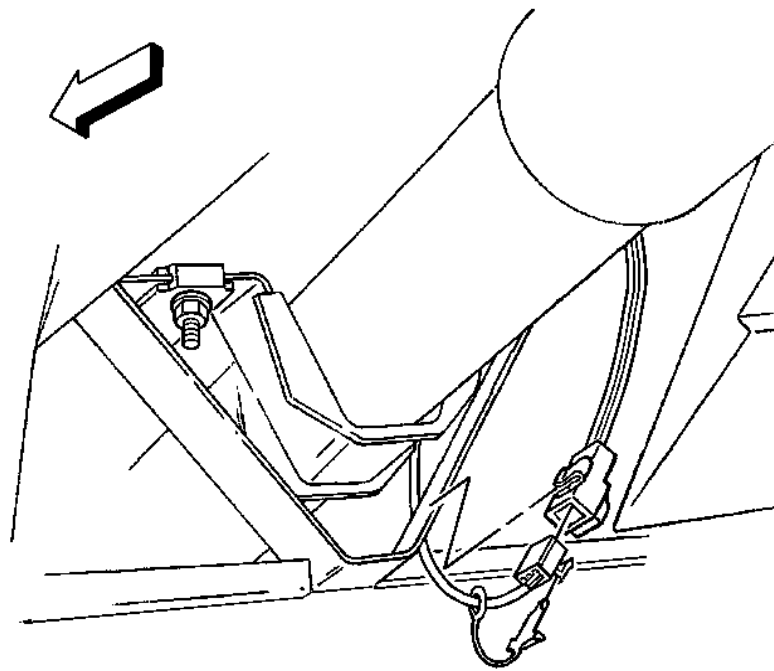

8. Disconnect the steering wheel module coil connector located at the base of the steering column.

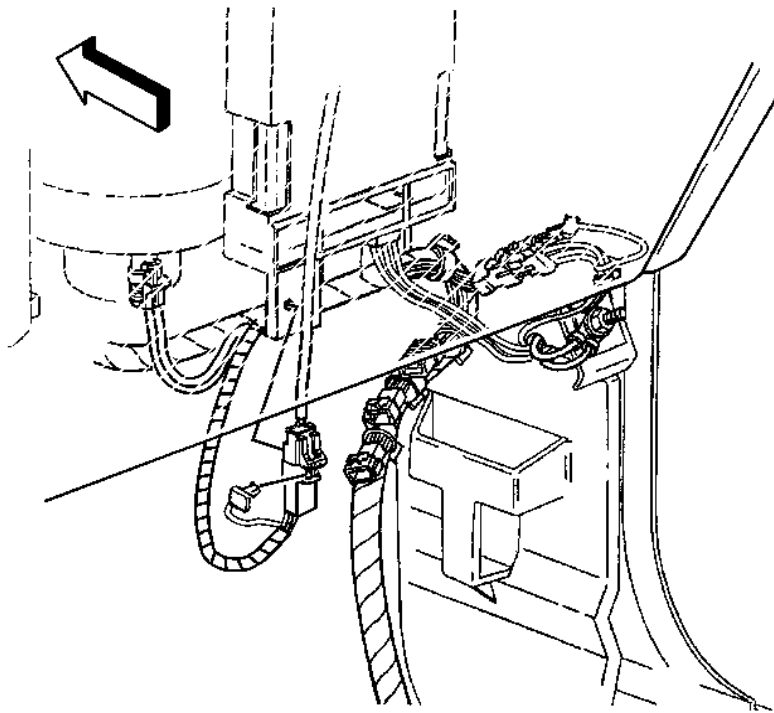

9. Remove the right instrument panel insulator. Refer to [Closeout/Insulator Panel Replacement - Right](#) in Instrument Panel, Gages, and Console.
10. Remove the CPA from the inflatable restraint IP module connector located behind the IP compartment door.

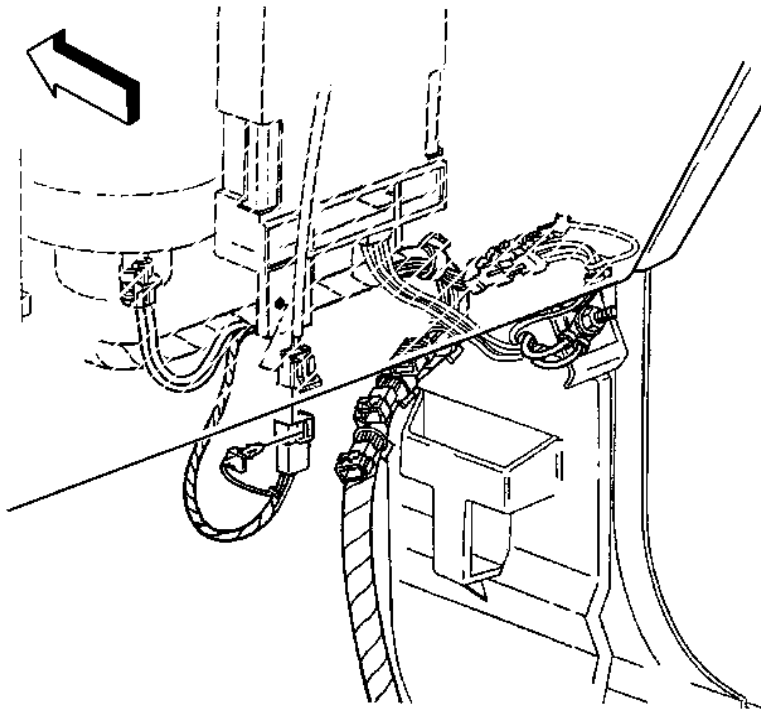

11. Disconnect the IP module connector located behind the IP compartment door.

Document ID# 679172
2001 Pontiac Firebird