



- | | |
|---|---|
| 1 CAP, REAR PARKING BRAKE LEVER PIVOT PIN | 18 SEAL, REAR BRAKE CALIPER PISTON |
| 2 CLIP, REAR PARKING BRAKE LEVER SPRAG | 19 PISTON, REAR BRAKE CALIPER |
| 3 PIN, REAR PARKING BRAKE LEVER PIVOT | 20 BOOT, REAR BRAKE CALIPER PISTON |
| 4 SPRING, REAR CALIPER PARKING BRAKE LEVER RETURN | 21 RETAINER, ACTUATING COLLAR BOOT |
| 5 LEVER, REAR PARKING BRAKE ACTUATOR | 22 PUSHROD |
| 6 VALVE, REAR BRAKE BLEEDER | 23 SPRING, PRELOAD |
| 7 CAP, REAR BRAKE BLEEDER VALVE | 24 COLLAR, ACTUATING |
| 8 BRACKET, PARKING BRAKE CABLE | 25 BOOT, ACTUATING COLLAR |
| 9 BOLT, REAR BRAKE CALIPER | 26 SPRING, REAR CALIPER PARKING BRAKE COLLAR RETURN |
| 10 SHIM, REAR DISC BRAKE PAD ANTI-SQUEAL | 27 BUSHING |
| 11 SCREW, PARKING BRAKE LEVER ADJUSTER | 28 ROD, CLAMP |
| 12 NUT, REAR PARKING BRAKE LEVER PIVOT PIN | 29 PAD, REAR DISC BRAKE INNER |
| 13 BOLT, BRAKE CALIPER GUIDE PIN | 30 PAD, REAR DISC BRAKE OUTER |
| 14 CALIPER, REAR BRAKE | 31 RETAINER, ACTUATING COLLAR BOOT |
| 15 PIN, REAR BRAKE CALIPER GUIDE | 42 SENSOR, WEAR INDICATOR |
| 16 BOOT, REAR BRAKE CALIPER GUIDE PIN | 43 SPRING, SHOE RETAINING |
| | 44 PIN, SPRING RETAINER |

03-18-91
FV00368