


## Body Control Module Component Views

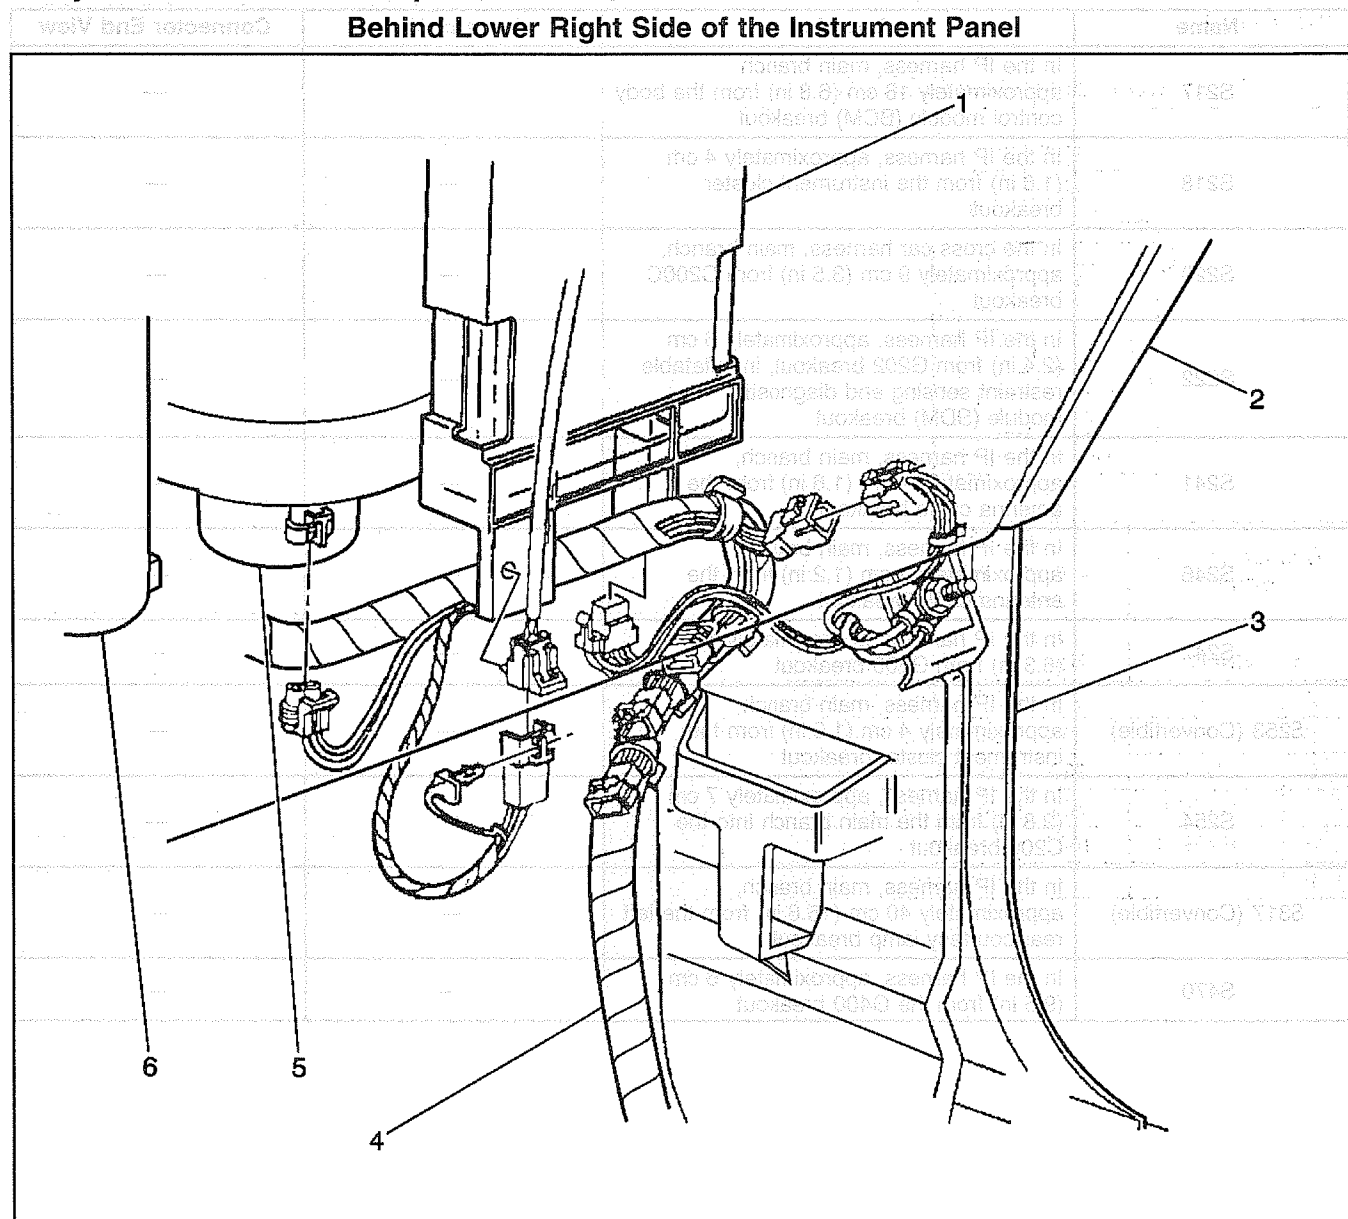

## Legend

- |                               |                                     |
|-------------------------------|-------------------------------------|
| (1) Body Control Module (BCM) | (4) Instrument Panel Wiring Harness |
| (2) Instrument Panel          | (5) Blower Motor                    |
| (3) Right A Pillar            | (6) HVAC Module                     |

Component Locator

Body Control Module Components

| Name  | Location   | Locator View   | Connector End View   |
|---|--|--|--|
| Body Control Module (BCM)                       | Under the right side of the IP near the blower motor   | <i>Body Control Module Component Views</i>   | <i>Body Control Module Connector End Views</i>   |
| Courtesy Lamp, Left Rear (Convertible)          | Mounted in the left sail panel   | —  | —  |
| Courtesy Lamp, Right Rear (Convertible)         | Mounted in the right sail panel  | —  | —  |
| Dome Lamp (Coupe)                               | On the inside of the roof, near the hatch  | —  | —  |
| Folding Top Relay                               | Behind the IP, mounted to the right side of the inflatable restraint instrument panel module bracket | <i>Theft Deterrent System Component Views in Theft Deterrent</i>                                     | —  |
| Folding Top Switch                              | On the left side of the upper console  | <i>Power Roof Systems Component Views in Roof</i>  | <i>Power Roof Systems Connector End Views in Roof</i>  |
| Front Side Door Lock                            | Inside the rear of the door  | <i>Power Door Systems Component Views in Doors</i>   | <i>Body Control Module Connector End Views</i>   |
| Fusable Links                                   | Forward of the left front wheelhouse, behind the underhood electrical center 2                       | —  | —  |
| Ignition Switch                                 | Mounted near the base of the steering column   | <i>Engine Electrical Component Views in Engine Electrical</i>  | <i>Engine Electrical Connector End Views in Engine Electrical</i>  |
| Inflatable Restraint Steering Wheel Module Coil | On the top of the steering column  | <i>SIR Component Views in SIR</i>  | —  |
| Inside Rearview Mirror                          | Mounted to the inside center of the windshield   | <i>Lighting Systems Component Views in Lighting Systems</i>  | <i>Lighting Systems Connector End Views in Lighting Systems</i>  |
| Instrument Cluster                              | On the left side of the IP   | <i>Instrument Panel, Gauges, and Console Component Views in Instrument Panel, Gauges and Console</i> | <i>Instrument Panel, Gauges, and Console Connector End Views in Instrument Panel, Gauges and Console</i> |
| IP Compartment Lamp                             | Inside the top center of the IP compartment  | <i>Instrument Panel, Gauges, and Console Component Views in Instrument Panel, Gauges and Console</i> | —  |
| IP Dimmer Switch                                | Left of the steering wheel, part of the headlamp switch  | <i>Instrument Panel, Gauges, and Console Component Views in Instrument Panel, Gauges and Console</i> | <i>Lighting Systems Connector End Views in Lighting Systems</i>  |
| IP Fuse Block                                   | On the left end of the IP carrier  | <i>Instrument Panel, Gauges, and Console Component Views in Instrument Panel, Gauges and Console</i> | —  |
| Power Window Control Module                     | Mounted to the center of the dash mat, above the floor tunnel  | <i>Power Door Systems Component Views in Doors</i>   | <i>Power Door Systems Connector End Views in Doors</i>   |