

Hazard Lamp Flasher

The hazard warning flashers are part of the turn signal circuit. The hazard warning switch is on the right side of the steering column. Pressing in on the hazard warning switch button causes the following lamps to flash:

- The front turn signal lamps
- The rear turn signal lamps
- The front sidemarker lamps

Pulling on the hazard warning switch knob will turn off the hazard warning flashers.

The hazard warning flashers will work with the ignition switch in any position. When the hazard warning flashers are on, the turn signals do not work.

Headlamps

The headlamps are controlled by the headlamp switch. The headlamp switch is located in the headlamp and instrument panel lamp dimmer switch to the left of the steering column. The headlamps will come on with the ignition switch in any position. The headlamps are turned on by rotating the headlamp switch completely to the right. The headlamps are turned off by turning the headlamp switch completely to the left.

The following headlamps beams are controlled by the multi-function lever (turn signal lever) that is located on the left side of the steering column:

- The headlamp low-beam
- The headlamp high-beam

Once the headlamps are on, the headlamp beam can be changed as described below:

- From high-beam to low-beam
- From low-beam to high-beam

Change the headlamp beam by pulling the lever toward the driver seat until the switch clicks. An indicator lamp on the instrument cluster will come on when the high-beam headlamps are on.

Important: Some state and local laws specify requirements for headlamp aim. You must follow these laws.

Aim the headlamps for proper illumination of the road. Inspect the headlamp aim when one of the following situations occurs:

- A new headlamp is installed.
- Service repairs are made to the front end area that may have disturbed the headlamp or the headlamp mounting.

High-Mount Stoplamp

The high-mount stoplamp is located in the center of the rear end spoiler. The high-mount stoplamp illuminates whenever the brake pedal is pushed down. The lamp is powered separately from the taillamps through a circuit in the stoplamp switch.

Parking and Turn Signal Lamps

When the turn signals are activated, the appropriate front parking lamp flashes to signal a turn. The turn signal works only when the following conditions apply:

- The ignition switch is on.
- The hazard lamp flashers are turned off.

The turn signals are controlled by the multi-function lever. The multi-function lever is located on the left side of the steering column. Moving the lever up or down (past the detent) will activate the turn signals. When the turn is complete the following actions will occur:

- The multi-function lever will return to the horizontal position.
- The turn signals will stop flashing.

Move the signal only to the first detent and hold it there during the following actions:

- Changing lanes
- Shallow turns where the steering wheel does not turn far enough to cancel the signal

When you release the lever, the lever will return to the horizontal and the turn signal will cancel.

Rear License Lamp

The rear license lamp will come on when the headlamps are on. The rear license lamp is mounted on the rear bumper fascia above the license plate.

Rear Sidemarker Lamps

The rear sidemarker lamps are mounted on the rear bumper fascia. The rear sidemarker lamps will come on when the headlamps are on. The rear sidemarker lamps also have reflectors that shine when the reflectors are struck by light. The reflectors will shine whether or not the vehicle's lamps are on.

Taillamps

The following lamps are part of the taillamp:


- The taillamps
- The back-up lamps
- The turn signal lamps

Turning on the headlamps will also turn on the taillamps. When the brake pedal is pushed down, the taillamps will glow brighter in order to function as stoplamps.

If the brake pedal is held down when a turn is signaled, the following situations will occur:

- One side will flash
- The other side will stay on brightly

Headlights DRL Schematics (Domestic) (Cell 102: Headlamps (Chevrolet))

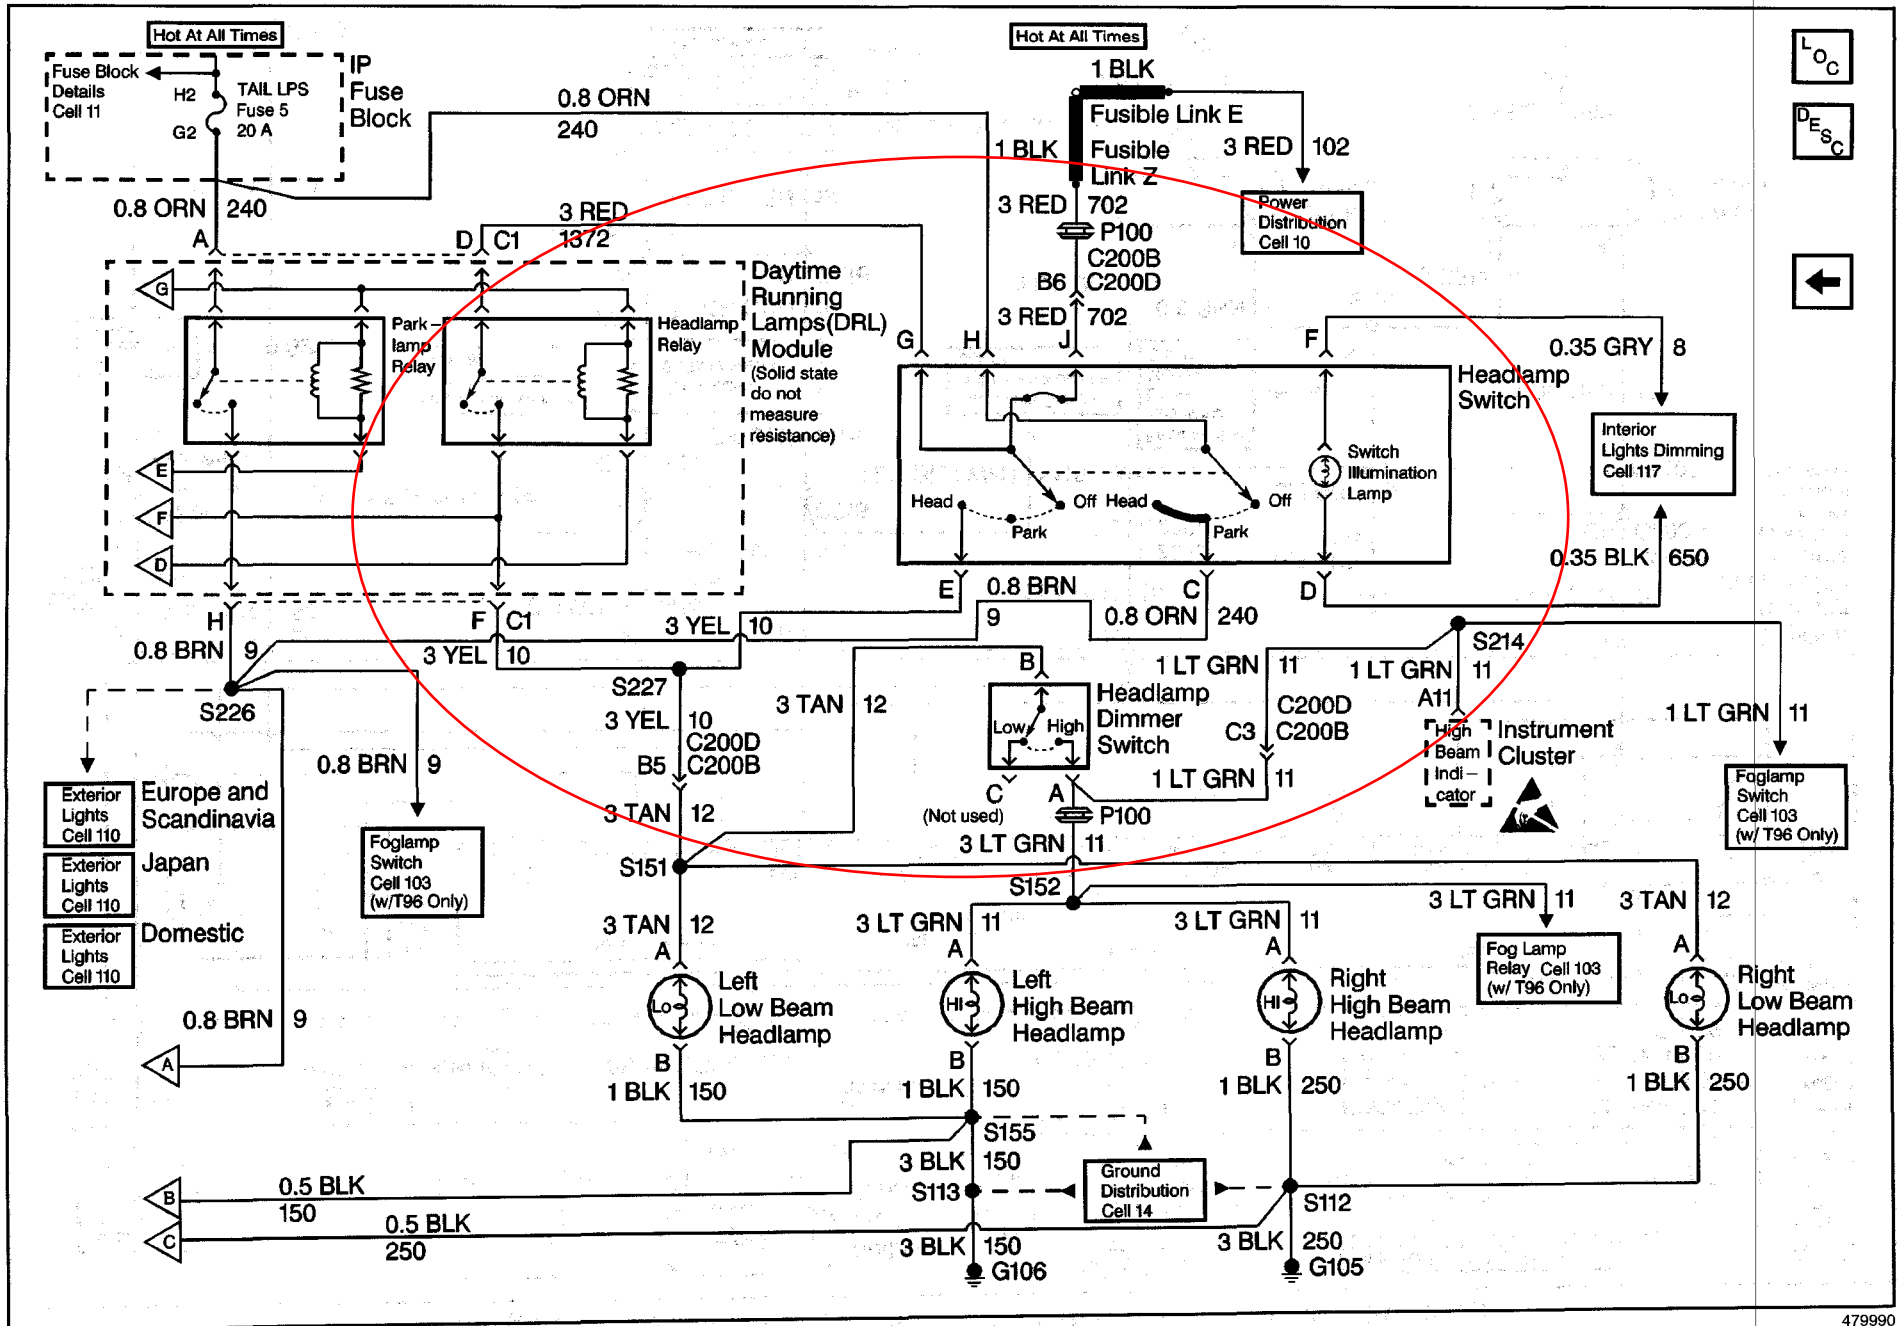

LOC
DESC
←