



# ABS Schematics (5.7L With Traction Control 4 of 5)

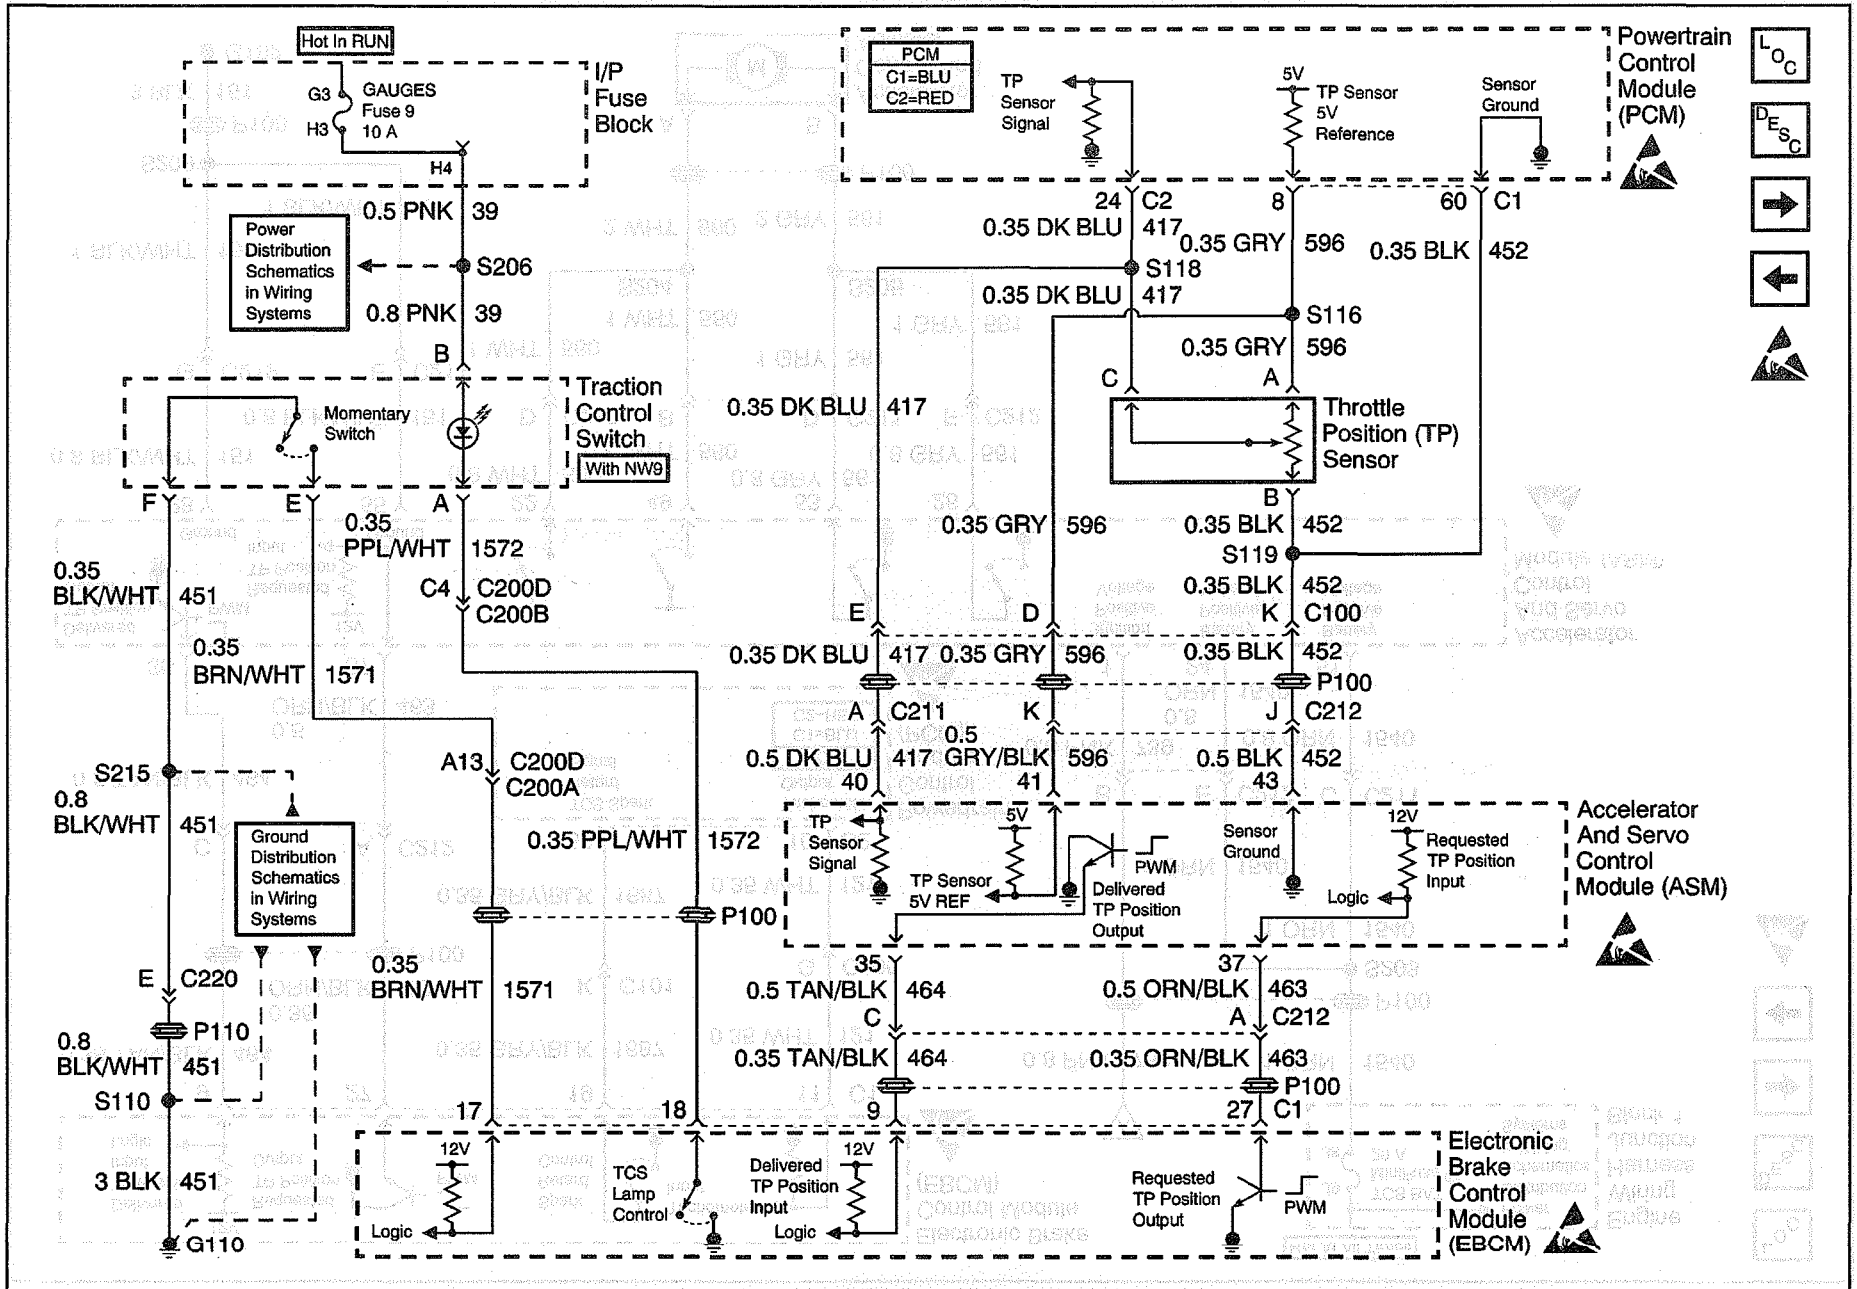


Traction Control Switch

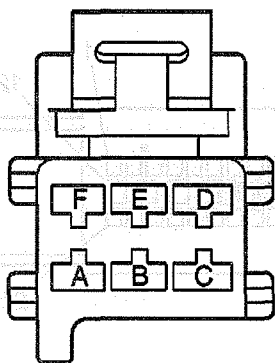

304345

<b>Connector Part Information</b>		<ul style="list-style-type: none"> <li>• 1217-7195</li> <li>• 6 Way F Metri-Pack 150 Series (BLK).</li> </ul>	
Pin	Wire Color	Circuit No.	Function
A	PPL/WHT	1572	Traction control lamp control
B	BRN	141	Fused ignition feed
C	GRY	8	Switch illumination lamp feed
D	—	—	Not used
E	BRN/WHT	1571	Traction control switch signal
F	BLK/WHT	451	Ground


Wheel Speed Sensor, Left Front

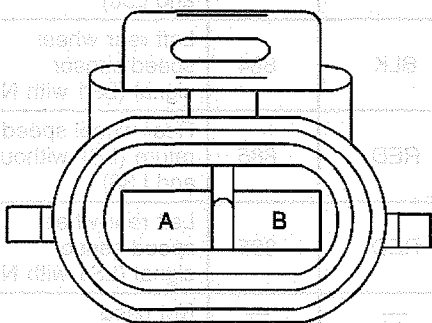

35437

<b>Connector Part Information</b>		<ul style="list-style-type: none"> <li>• 1205-2644</li> <li>• 2 Way F Metri-Pack 150 Sealed (GRY)</li> </ul>	
Pin	Wire Color	Circuit No.	Function
A	YEL	873	Left Front Wheel Speed Sensor Signal - Low
B	LT BLU	830	Left Front Wheel Speed Sensor Signal - High


Wheel Speed Sensor, Left Rear (With NW9)

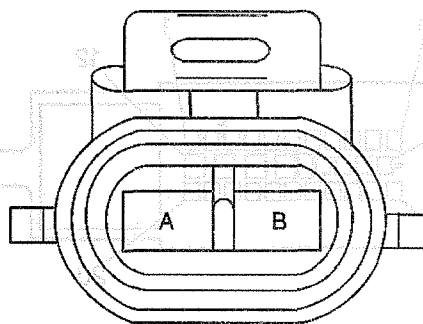

35437

<b>Connector Part Information</b>		<ul style="list-style-type: none"> <li>• 1205-2644</li> <li>• 2 Way F Metri-Pack 150 Sealed (GRY)</li> </ul>	
Pin	Wire Color	Circuit No.	Function
A	RED	885	Left Rear Wheel Speed Sensor Signal - Low
B	BLK	884	Left Rear Wheel Speed Sensor Signal - High

Wheel Speed Sensor, Right Front

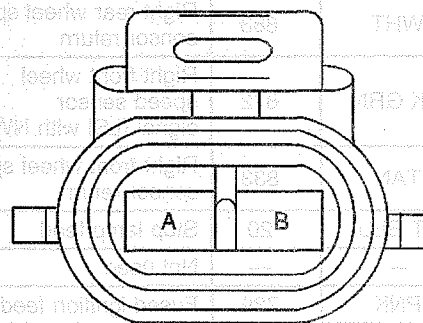

35437

<b>Connector Part Information</b>		<ul style="list-style-type: none"> <li>• 1205-2644</li> <li>• 2 Way F Metri-Pack 150 Sealed (GRY)</li> </ul>	
Pin	Wire Color	Circuit No.	Function
A	YEL	833	Right Front Wheel Speed Sensor Signal - Low
B	LT BLU	872	Right Front Wheel Speed Sensor Signal - High