


## Engine Block Plugs/Sensors

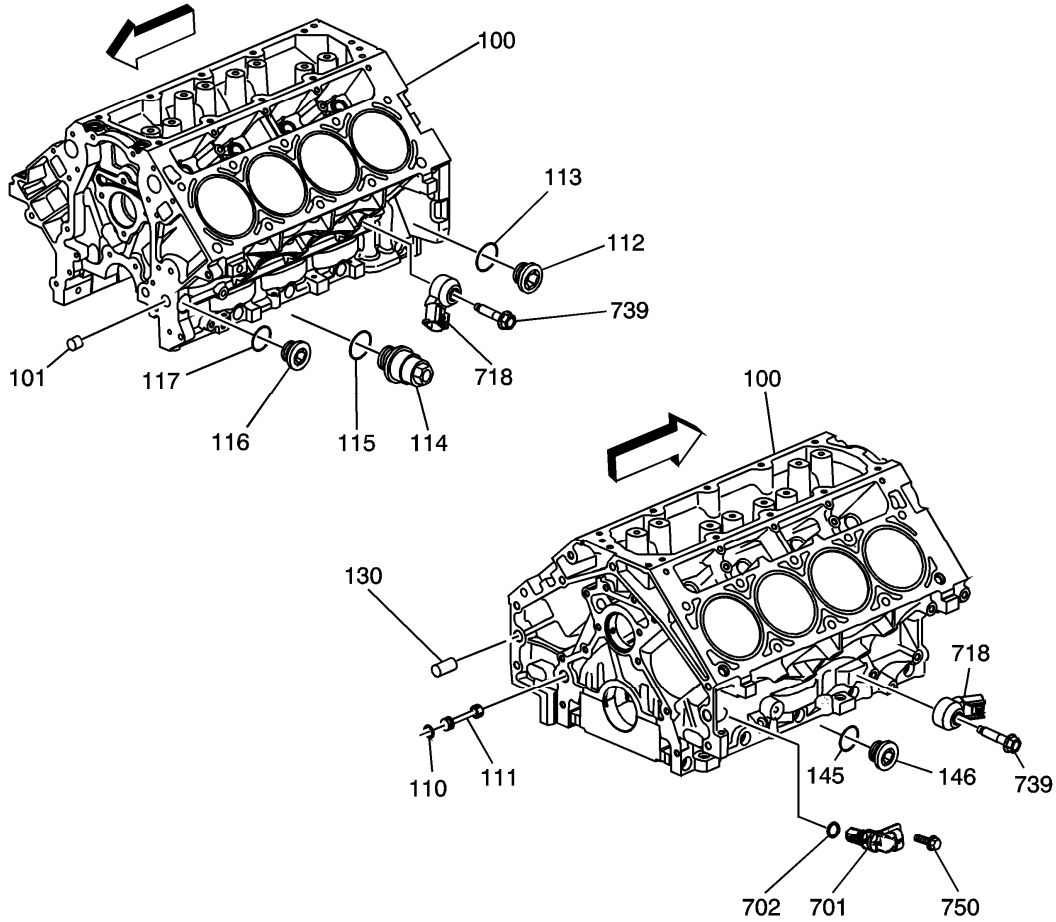

- (100) Engine Block
- (100) Engine Block
- (101) Oil Gallery Plug - Front
- (110) O-Ring
- (111) Oil Gallery Plug - Rear
- (112) Oil Gallery Plug - Side
- (113) Washer
- (114) Engine Coolant Heater
- (115) Washer
- (116) Oil Gallery Plug - Side

- (117) Washer
- (130) Transmission Housing Locating Pin
- (145) Washer
- (146) Engine Block Coolant Drain Hole Plug
- (701) Crankshaft Position (CKP) Sensor
- (702) O-Ring
- (718) Knock Sensor
- (718) Knock Sensor
- (739) Bolt
- (739) Bolt
- (750) CKP Sensor Bolt