


Oil Pump Assembly

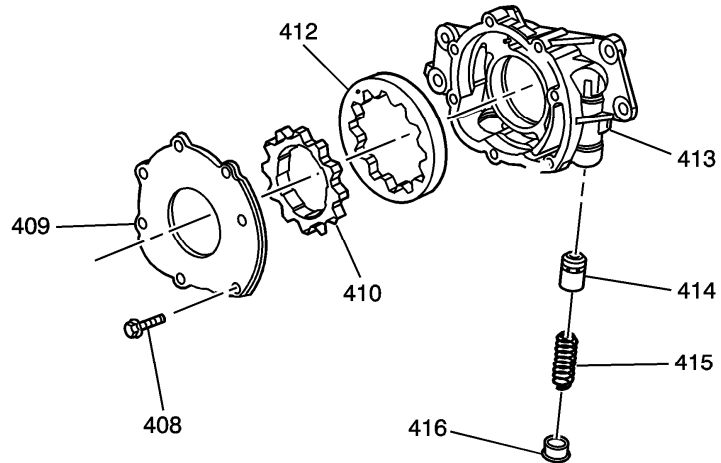

- (408) Bolt
- (409) Oil Pump Housing Cover
- (410) Oil Pump Drive Gear
- (412) Oil Pump Driven Gear
- (413) Oil Pump
- (414) Oil Pump Pressure Relief Valve
- (415) Oil Pump Pressure Relief Valve Spring
- (416) Oil Pump Housing Plug