



Connector 1

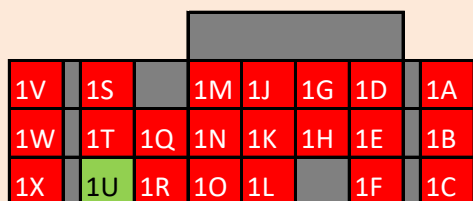


1A	Not used
1B	R/B Throttle body
1C	R Throttle body
1D	L Secondary shutter valve switch
1E	Not used
1F	Y/B Knock sensor
1G	B Shielded wire to knock sensor
1H	Not used
1I	Not used
1J	G/R Throttle body
1K	Not used
1L	L/Y Secondary shutter valve
1M	B/L Throttle body
1N	Not used
1O	R/L Secondary air injection solenoid valve
1P	Not used
1Q	G Throttle body
1R	Not used
1S	R/W Auxiliary port valve motor
1T	Y/R Knock sensor
1U	BR Engine coolant temp sensor ground
1V	L/O Front O2 sensor
1W	L/B Variable dynamic effect intake air solenoid valve
1X	Not used

Connector 2

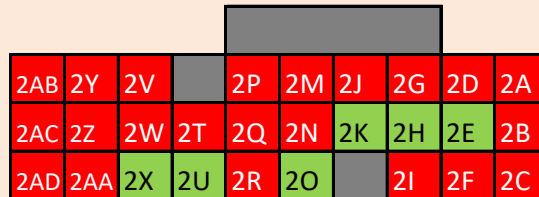


2A	R Rear O2 sensor
2B	V Front O2 Sensor
2C	P Front O2 Sensor
2D	Fuel Injector rear secondary
2E	LG Oil pressure switch
2F	G/Y Throttle body
2G	G/R Fuel injector front secondary
2H	Shielded wire to eccentric shaft position sensor
2I	BR/R Generator
2J	LG/B Fuel injector rear primary
2K	G/W Engine coolant temp sensor
2L	Not used
2M	LG/R Fuel Injector front primary
2N	B/Y Metering oil pump
2O	L/R Neutral switch
2P	R/Y Purge solenoid valve
2Q	Y Rear O2 sensor
2R	R/W Oil level switch
2S	Not used
2T	W/G Generator
2U	Y/B Eccentric shaft position sensor
2V	L/Y Metering oil pump
2W	B/O Metering oil pump
2X	Y/R Eccentric shaft position sensor
2Y	R/G Metering oil pump
2Z	Y/G Ignition coil
2AA	G Ignition coil
2AB	B/L Metering oil pump
2AC	L/O Ignition coil
2AD	W Ignition coil

Connector 3

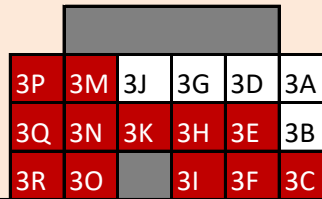

3A	L/B Fuel injector front primary 2
3B	R/G Auxilliray port valve motor
3C	Not used
3D	W/G Fuel injector rear primary 2
3E	Not used
3F	Not used
3G	G/B Auxiliary port valve motor
3H	Not used
3I	Not used
3J	L/R Auxiliary port valve motor
3K	Not used
3L	Not used
3M	Not used
3N	Not used
3O	Not used
3P	Not used
3Q	Not used
3R	Not used

Connector 4

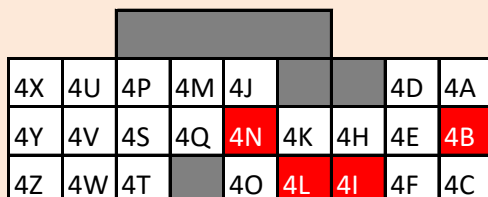

4A	B Ground for various items
4B	Not Used
4C	W/B Drive by wire relay
4D	Y/B Evaporative system leak detection pump
4E	G/Y Main EGI relay
4F	V Clutch pedal position sensor
4G	Not Used
4H	R/L Evaporative system leak detection pump
4I	Not Used
4J	B Ground for various items
4K	B/L Barometric pressure sensor (constant voltage {VREF})
4L	Not Used
4M	LG Fuel pump speed relay
4N	Not Used
4O	L/R Secondary air injection pump relay
4P	R/G Brake switch
4Q	B/W Ignition relay (condensor then ground)
4R	Not Used
4S	G/B Steering angle sensor + others
4T	V/W Coolant level switch
4U	B/G Sensor ground (mass air flow, barometric pressure sensor, cruise control switch, transmission
4V	L/W Steering angle sensor + others
4W	LG/B Refrigerant pressure sensor
4X	R/Y Pedal position sensor
4Y	G/R Pedal position sensor
4Z	R/B Refrigerant pressure switch

Connector 5

5AF		5AC	5Z	5U	5R	5Q	5L			5D	5A
5AG	5AD	5AA	5X	5V	5S	5P	5M	5J	5H	5E	5B
5AH	5AE	5AB		5W	5T		5N	5K	5I	5F	5C

5A	W/G Starter relay	AE	GY Pedal position sensor
5B	Not Used	AF	B/L Same as 5AC
5C	R/W Pedal position sensor	AG	Not Used
5D	B Ground	AH	Not Used
5E	Not Used		
5F	W/R Pedal position sensor		
5G	Not Used		
5H	L Drive by wire relay		
5I	Not Used		
5J	L/R 30A BTN		
5K	R/B		
5L	Not Used		
5M	Not Used		
5N	Y/R		
5O	B Ground		
5P	L/B Fuel pump relay		
5Q	Not Used		
5R	B Ground		
5S	B/R		
5T	B/O Ground		
5U	B/W		
5V	G/Y Cruise control		
5W	R/L A/C amplifier		
5X	R/G Cooling fan relay No.1		
5Y	Not Used		
5Z	Not Used unless 13B High power		
5AA	G/B A/C relay		
5AB	L/G/B Peda; position sensor		
5AC	B/L Fuel pump speed ctl relay, MAF sensor, cooling fan relay secondary air inj pump, EGI 1/2/inj		
5AD	L/W Cooling fan relay No.2		