



## Connector 1

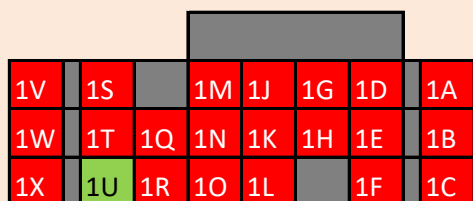

1A	Not used
1B	R/B Throttle body
1C	R Throttle body
1D	L Secondary shutter valve switch
1E	Not used
1F	Y/B Knock sensor
1G	B Shielded wire to knock sensor
1H	Not used
1I	Not used
1J	G/R Throttle body
1K	Not used
1L	L/Y Secondary shutter valve
1M	B/L Throttle body
1N	Not used
1O	R/L Secondary air injection solenoid valve
1P	Not used
1Q	G Throttle body
1R	Not used
1S	R/W Auxiliary port valve motor
1T	Y/R Knock sensor
1U	BR Engine coolant temp sensor ground
1V	L/O Front O2 sensor
1W	L/B Variable dynamic effect intake air solenoid valve
1X	Not used

**Connector 2**

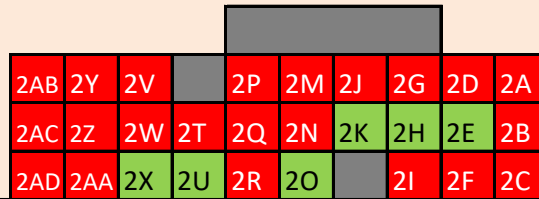


2A	R Rear O2 sensor
2B	V Front O2 Sensor
2C	P Front O2 Sensor
2D	Fuel Injector rear secondary
2E	LG Oil pressure switch
2F	G/Y Throttle body
2G	G/R Fuel injector front secondary
2H	Shielded wire to eccentric shaft position sensor
2I	BR/R Generator
2J	LG/B Fuel injector rear primary
2K	G/W Engine coolant temp sensor
2L	Not used
2M	LG/R Fuel Injector front primary
2N	B/Y Metering oil pump
2O	L/R Neutral switch
2P	R/Y Purge solenoid valve
2Q	Y Rear O2 sensor
2R	R/W Oil level switch
2S	Not used
2T	W/G Generator
2U	Y/B Eccentric shaft position sensor
2V	L/Y Metering oil pump
2W	B/O Metering oil pump
2X	Y/R Eccentric shaft position sensor
2Y	R/G Metering oil pump
2Z	Y/G Ignition coil
2AA	G Ignition coil
2AB	B/L Metering oil pump
2AC	L/O Ignition coil
2AD	W Ignition coil

**Connector 3**




3A	L/B Fuel injector front primary 2
3B	R/G Auxilliray port valve motor
3C	Not used
3D	W/G Fuel injector rear primary 2
3E	Not used
3F	Not used
3G	G/B Auxiliary port valve motor
3H	Not used
3I	Not used
3J	L/R Auxiliary port valve motor
3K	Not used
3L	Not used
3M	Not used
3N	Not used
3O	Not used
3P	Not used
3Q	Not used
3R	Not used

### Connector 4

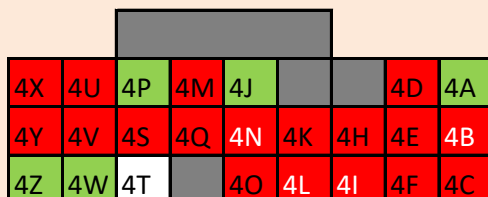

4A	B Ground for various items
4B	Not Used
4C	W/B Drive by wire relay
4D	Y/B Evaporative system leak detection pump
4E	G/Y Main EGI relay
4F	V Clutch pedal position sensor
4G	Not Used
4H	R/L Evaporative system leak detection pump
4I	Not Used
4J	B Ground for various items
4K	B/L Barometric pressure sensor (constant voltage {VREF})
4L	Not Used
4M	LG Fuel pump speed relay
4N	Not Used
4O	L/R Secondary air injection pump relay
4P	R/G Brake switch
4Q	B/W Ignition relay (condensor then ground)
4R	Not Used
4S	G/B Steering angle sensor + others
4T	V/W Coolant level switch
4U	B/G Sensor ground (mass air flow, barometric pressure sensor, cruise control switch, transmission)
4V	L/W Steering angle sensor + others
4W	LG/B Refrigerant pressure sensor
4X	R/Y Pedal position sensor
4Y	G/R Pedal position sensor
4Z	R/B Refrigerant pressure switch

### Connector 5

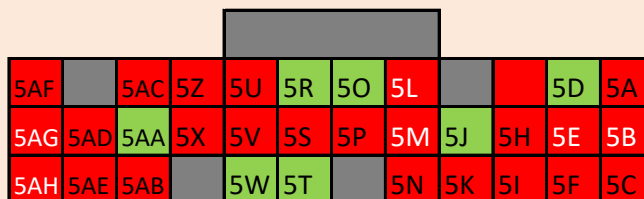

5A	W/G Starter relay	AE	GY Pedal position sensor
5B	Not Used	AF	B/L Same as 5AC
5C	R/W Pedal position sensor	AG	Not Used
5D	B Ground	AH	Not Used
5E	Not Used		
5F	W/R Pedal position sensor		
5G	Not Used		
5H	L Drive by wire relay		
5I	Not Used		
5J	L/R 30A BTN		
5K	R/B Mass Air flow sensor		
5L	Not Used		
5M	Not Used		
5N	Y/R Mass air flow sensor		
5O	B Ground		
5P	L/B Fuel pump relay		
5Q	Not Used		
5R	B Ground		
5S	B/R Barometric pressure sensor		
5T	B/O Ground		
5U	B/W Mass air flow sensor		
5V	G/Y Cruise control		
5W	R/L A/C amplifier		
5X	R/G Cooling fan relay No.1		
5Y	Not Used		
5Z	Not Used unless 13B High power		
5AA	G/B A/C relay		
5AB	L/G/B Pedal; position sensor		
5AC	B/L Fuel pump speed ctl relay, MAF sensor, cooling fan relay secondary air inj pump, EGI 1/2/inj		
5AD	L/W Cooling fan relay No.2		