

2004 Pontiac GTO

SYSTEM WIRING DIAGRAMS Pontiac - GTO

SYSTEM WIRING DIAGRAMS

Pontiac - GTO

AIR CONDITIONING

2004 Pontiac GTO

SYSTEM WIRING DIAGRAMS Pontiac - GTO

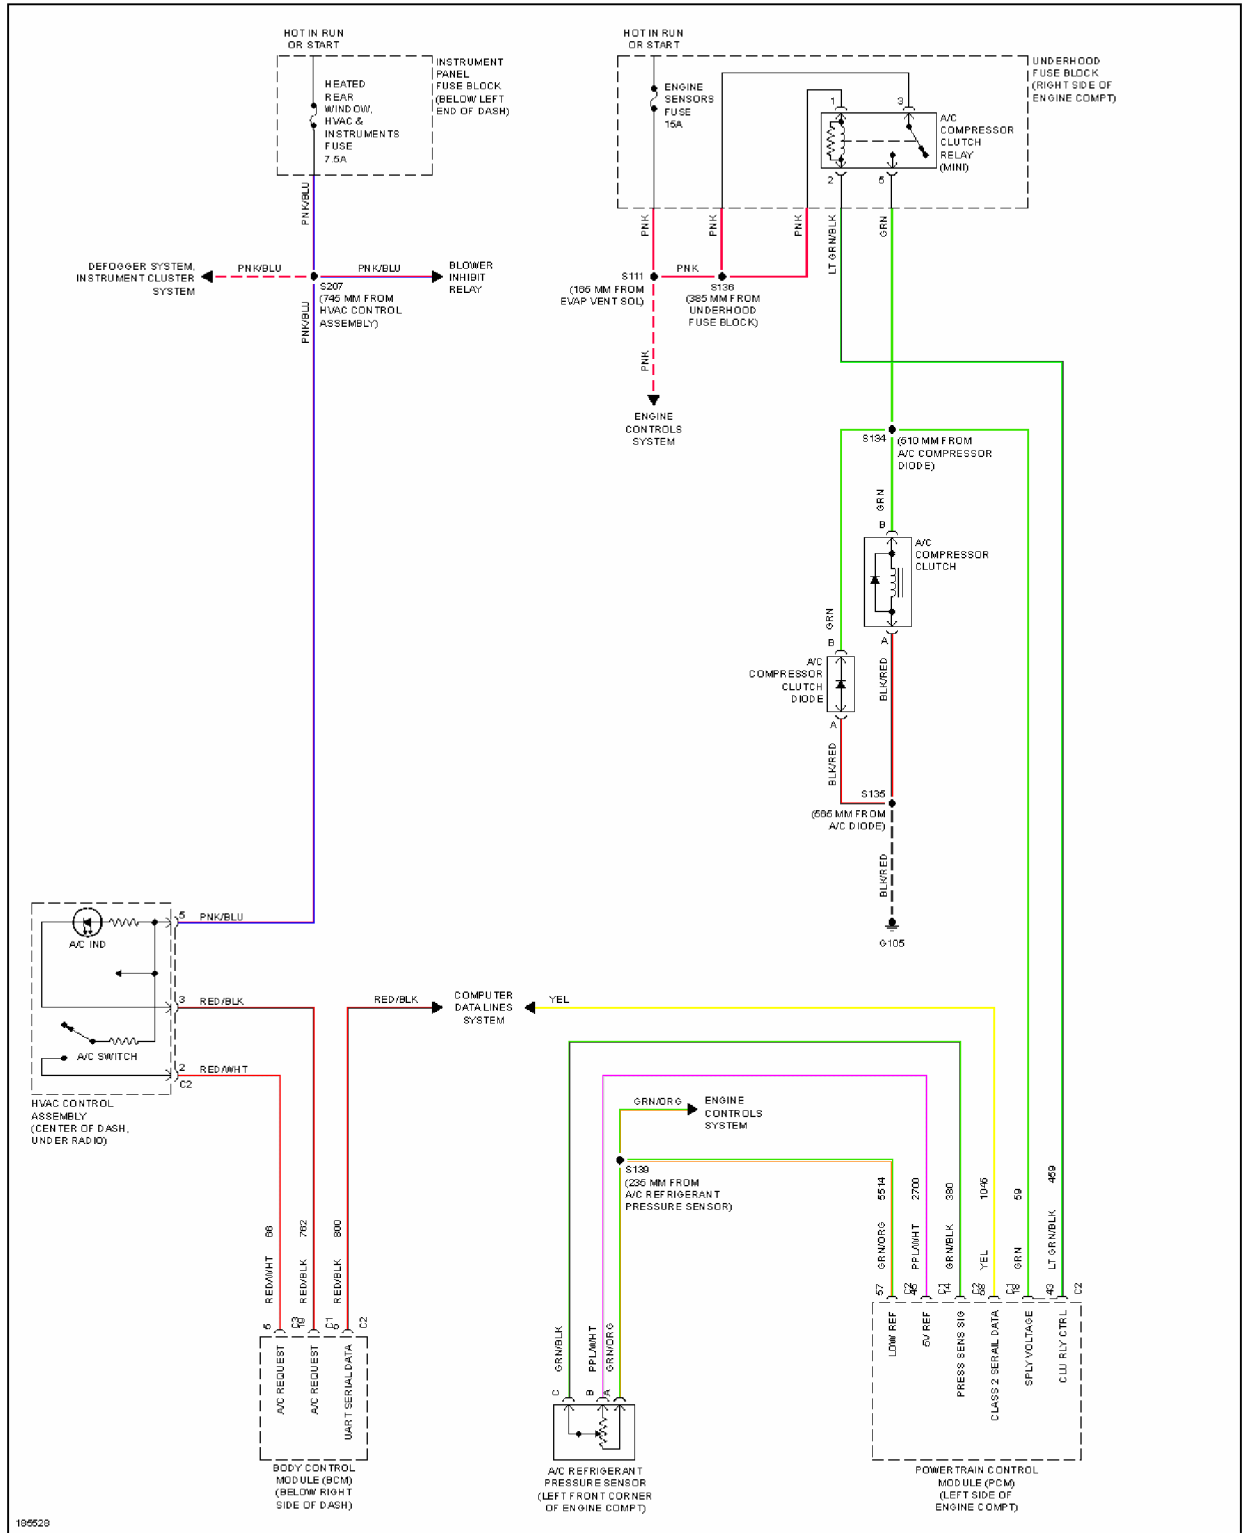


Fig. 1: Compressor Circuit

2004 Pontiac GTO

SYSTEM WIRING DIAGRAMS Pontiac - GTO

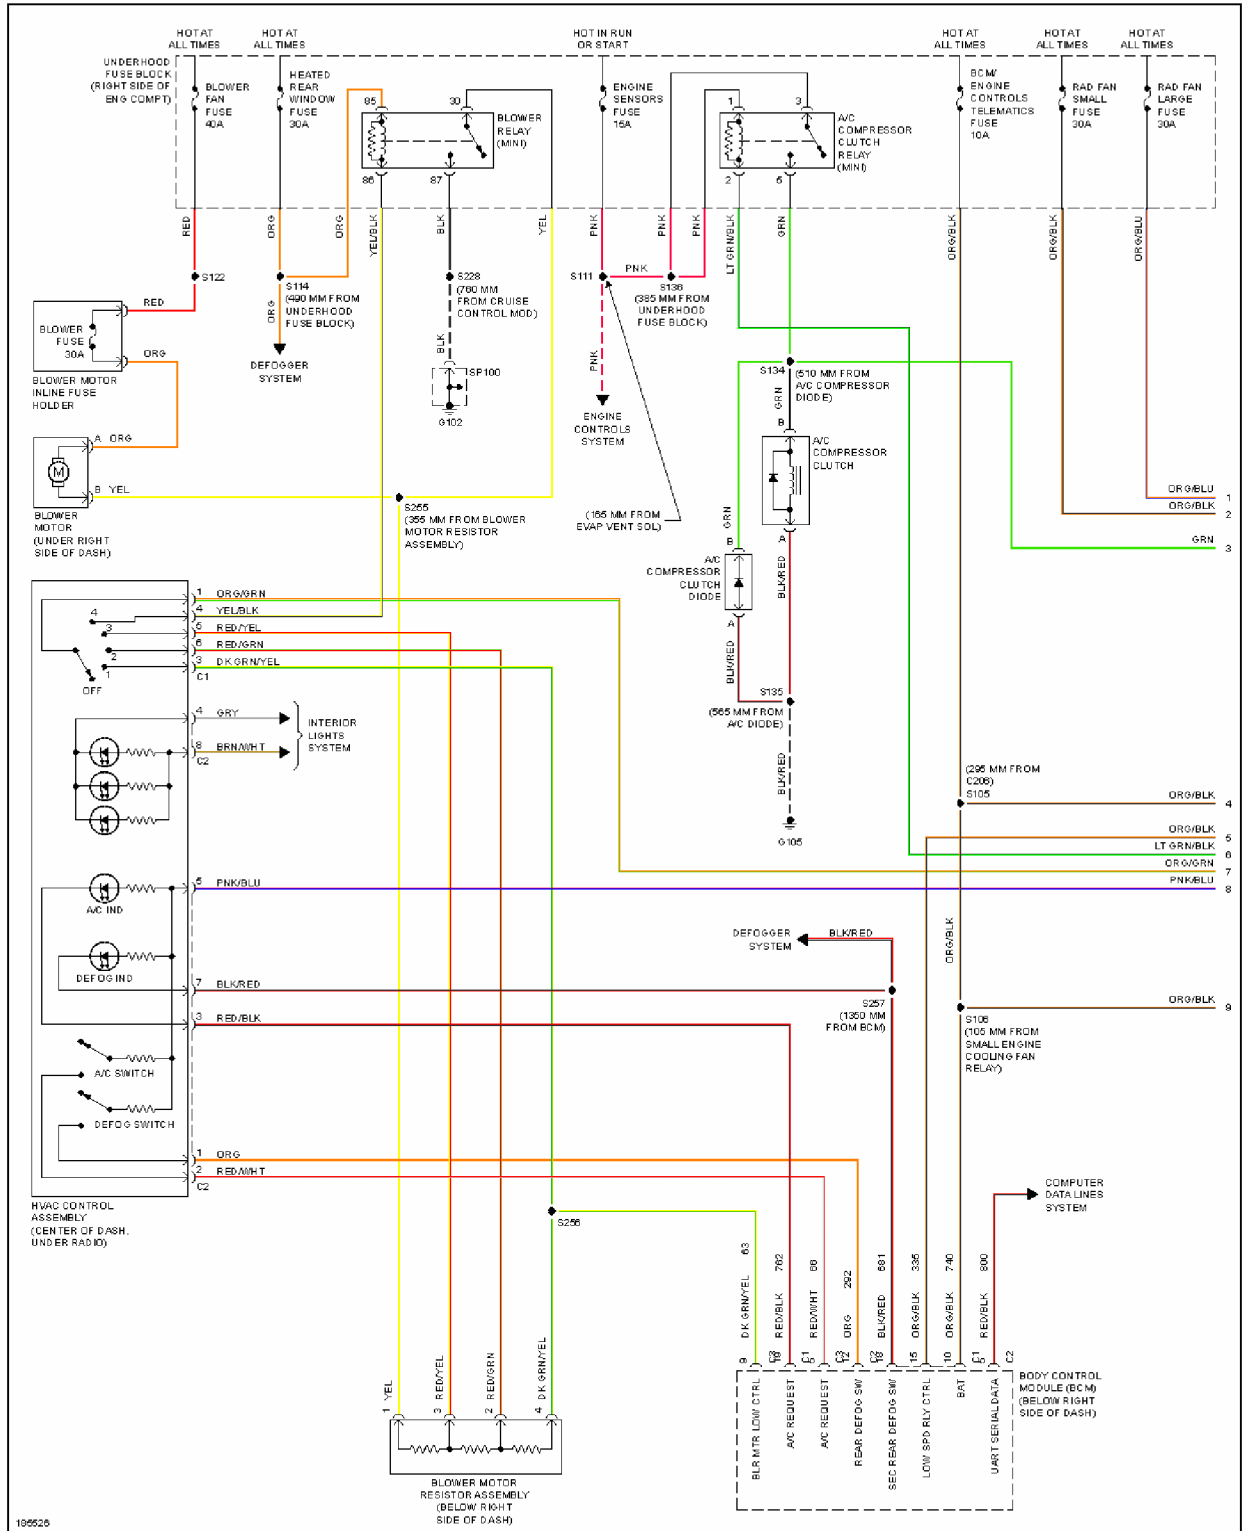


Fig. 2: Manual A/C Circuit (1 of 2)

2004 Pontiac GTO

SYSTEM WIRING DIAGRAMS Pontiac - GTO

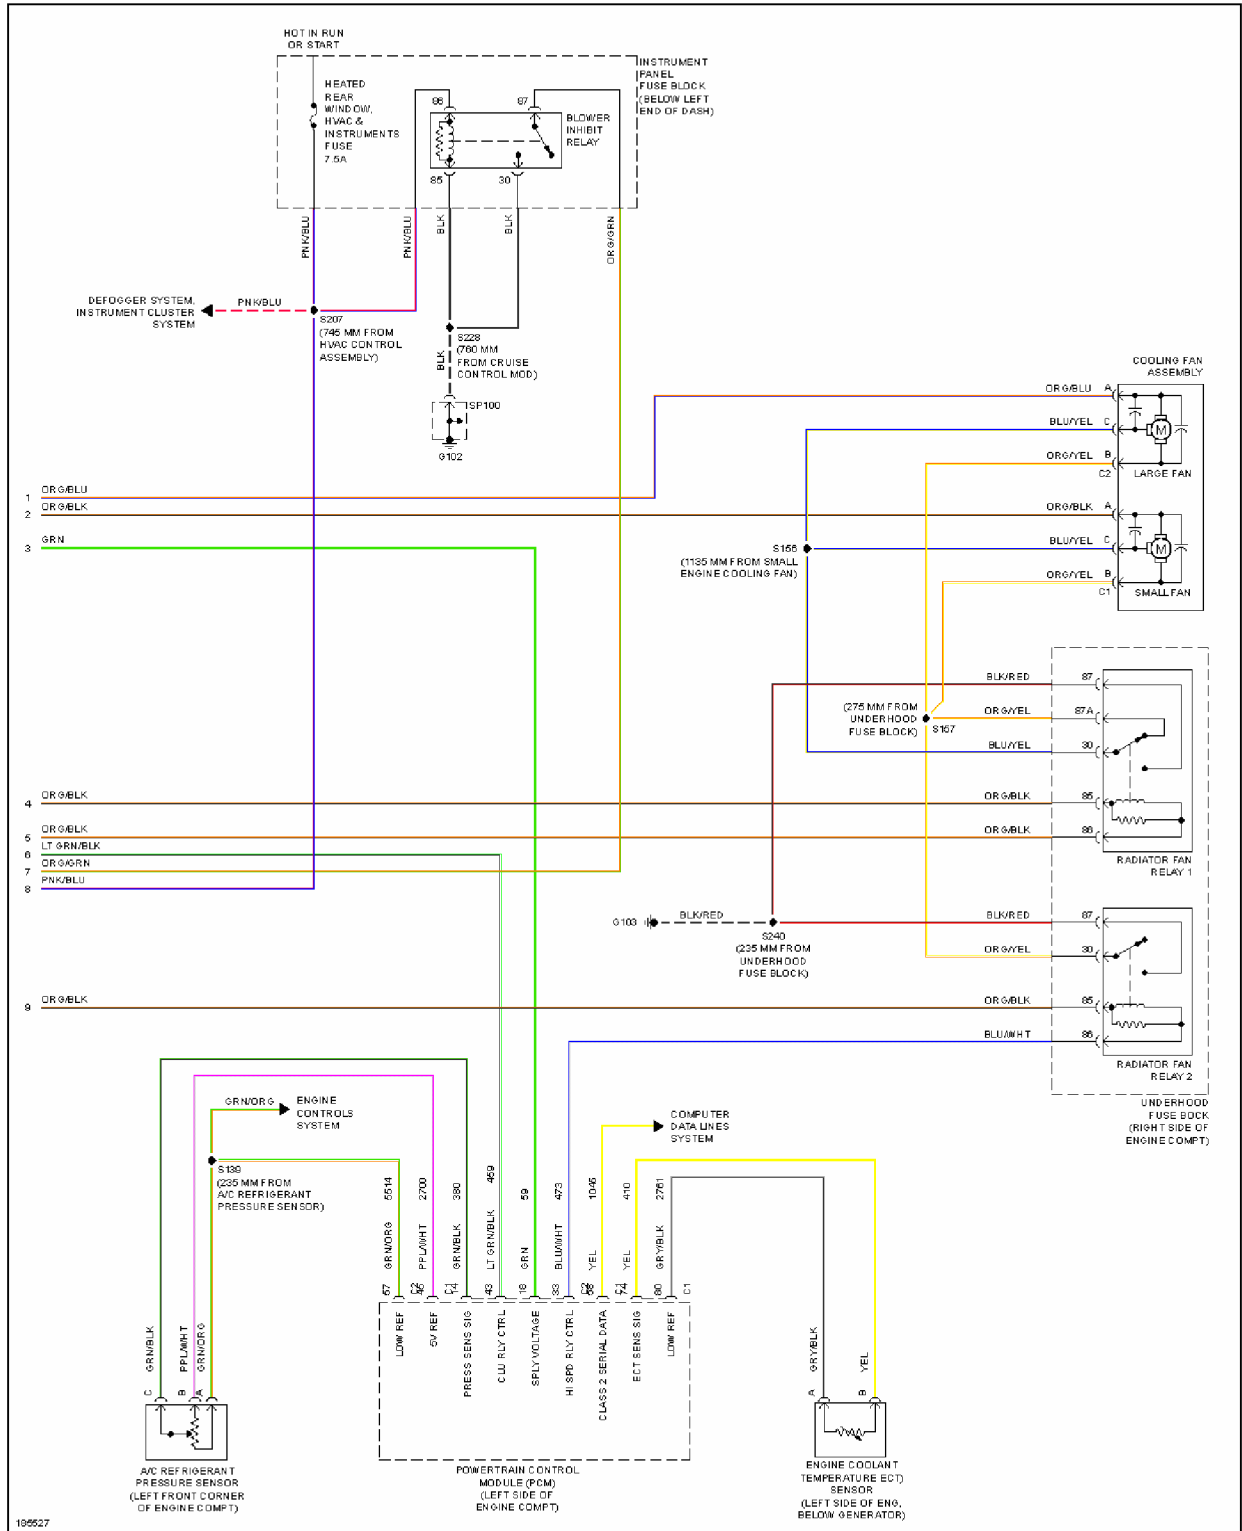


Fig. 3: Manual A/C Circuit (2 of 2)

ANTI-LOCK BRAKES

2004 Pontiac GTO

SYSTEM WIRING DIAGRAMS Pontiac - GTO

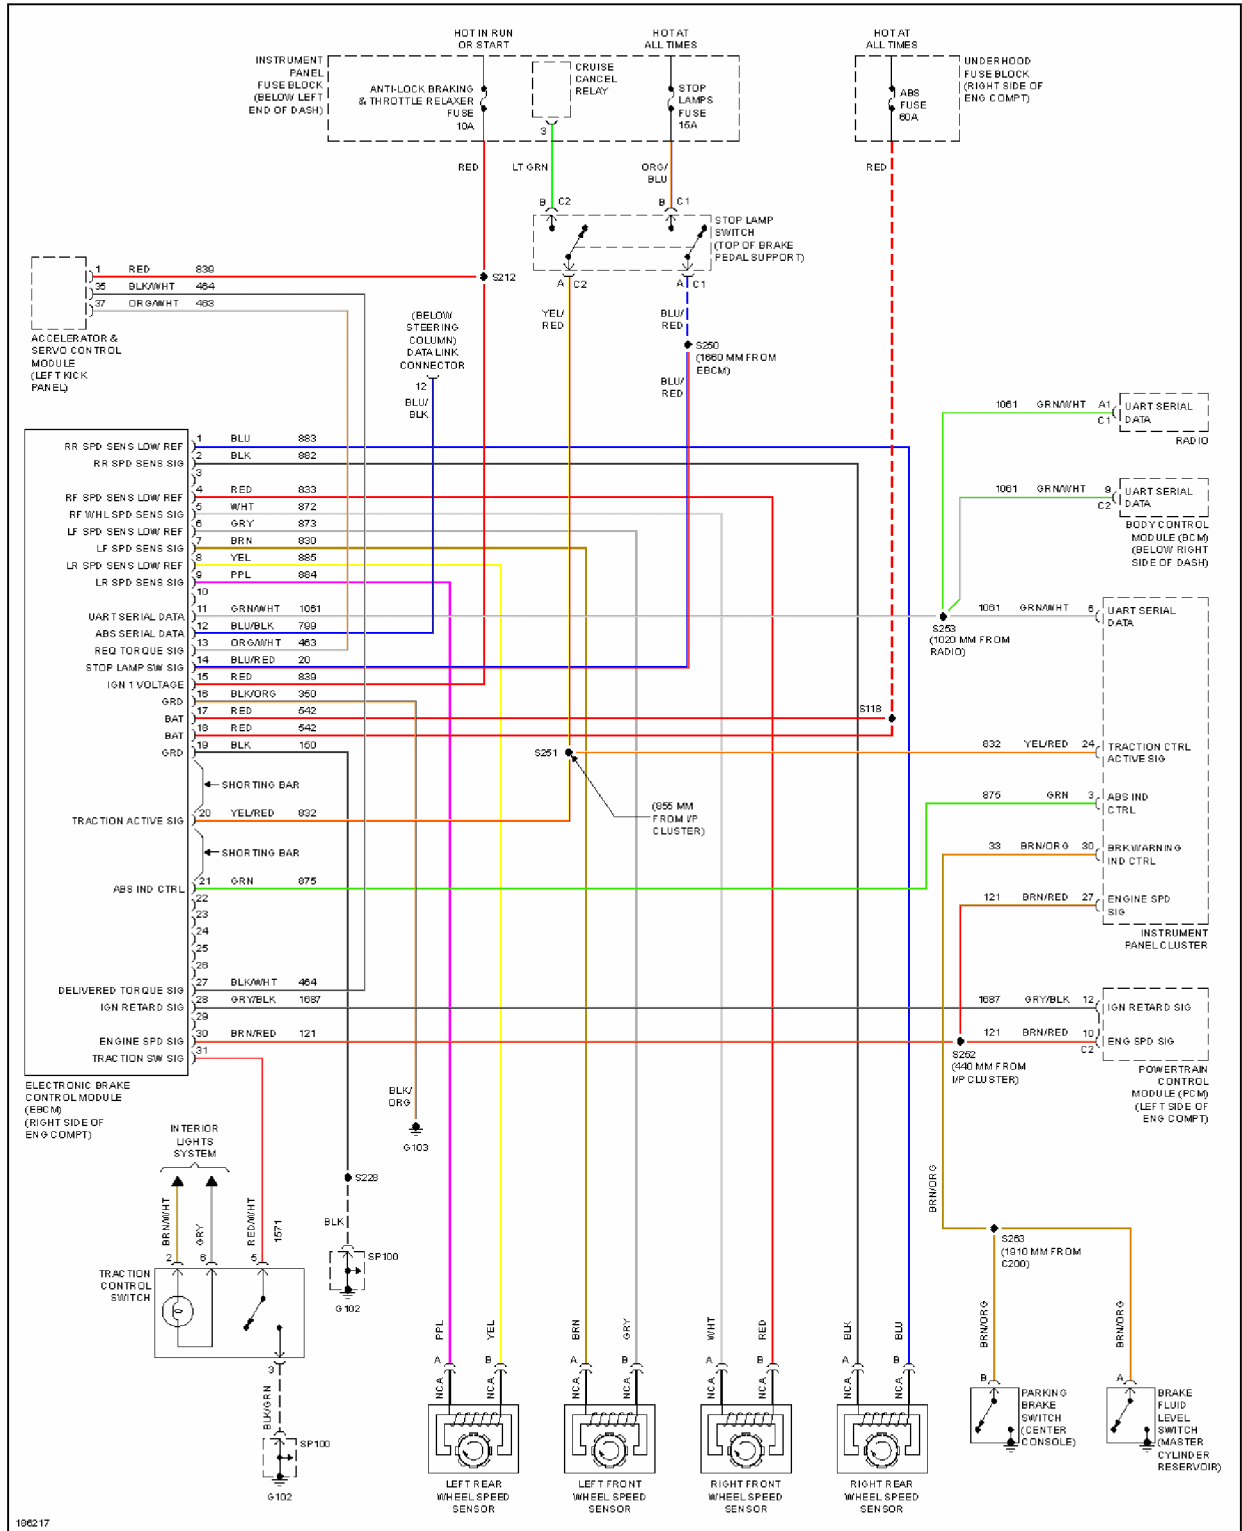


Fig. 4: Anti-lock Brakes Circuit

ANTI-THEFT

2004 Pontiac GTO

SYSTEM WIRING DIAGRAMS Pontiac - GTO

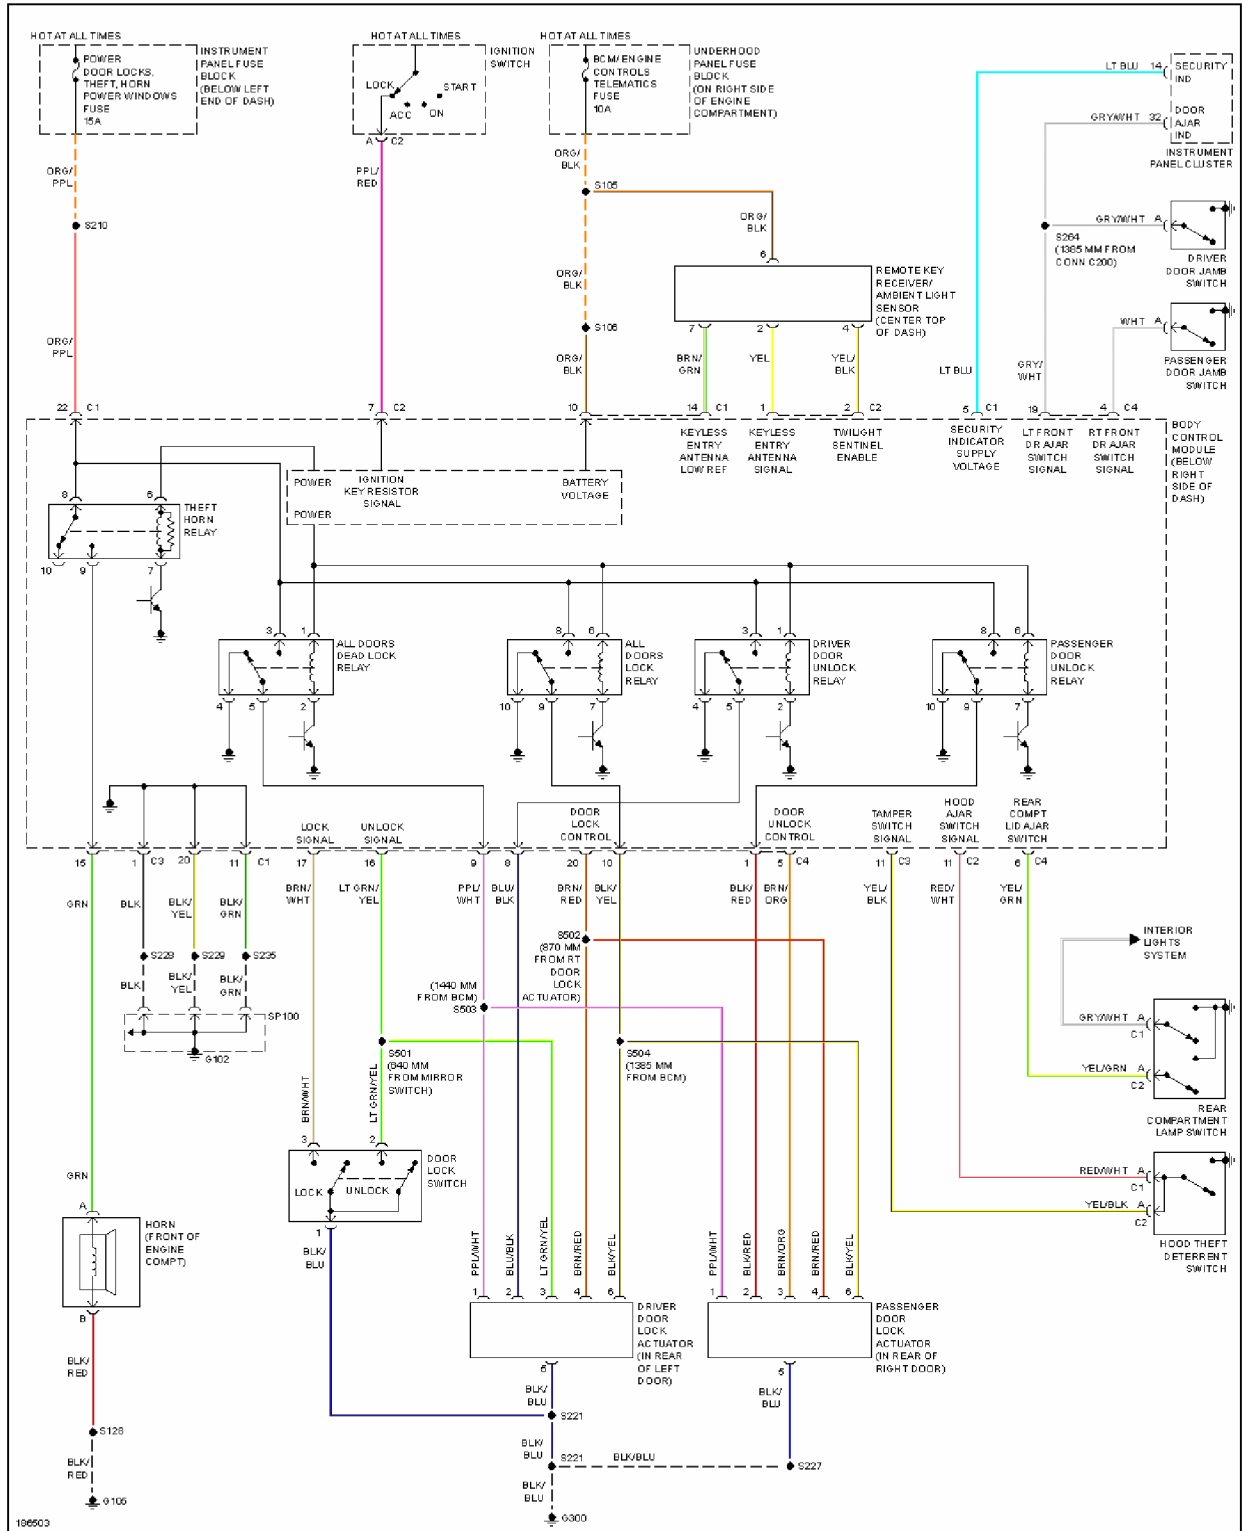


Fig. 5: Power Door Locks Circuit

BODY CONTROL MODULES

2004 Pontiac GTO

SYSTEM WIRING DIAGRAMS Pontiac - GTO

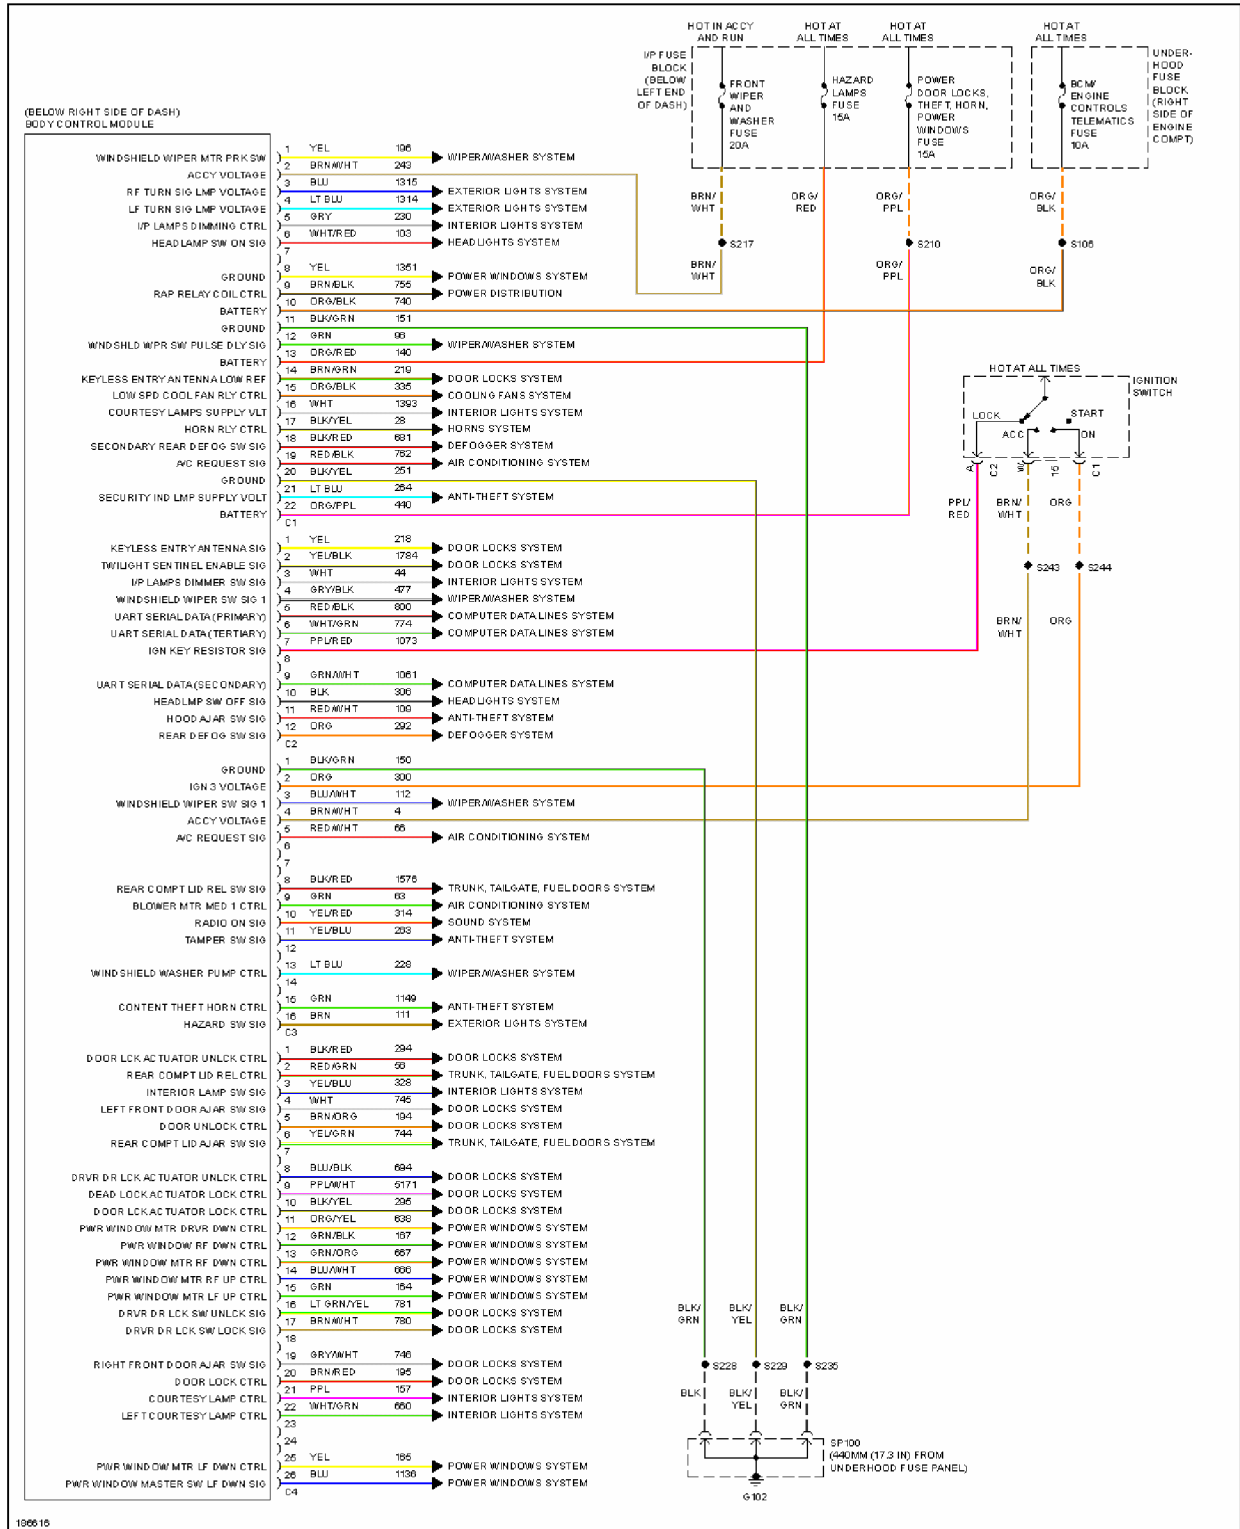


Fig. 6: Body Control Modules Circuit

COMPUTER DATA LINES

2004 Pontiac GTO

SYSTEM WIRING DIAGRAMS Pontiac - GTO

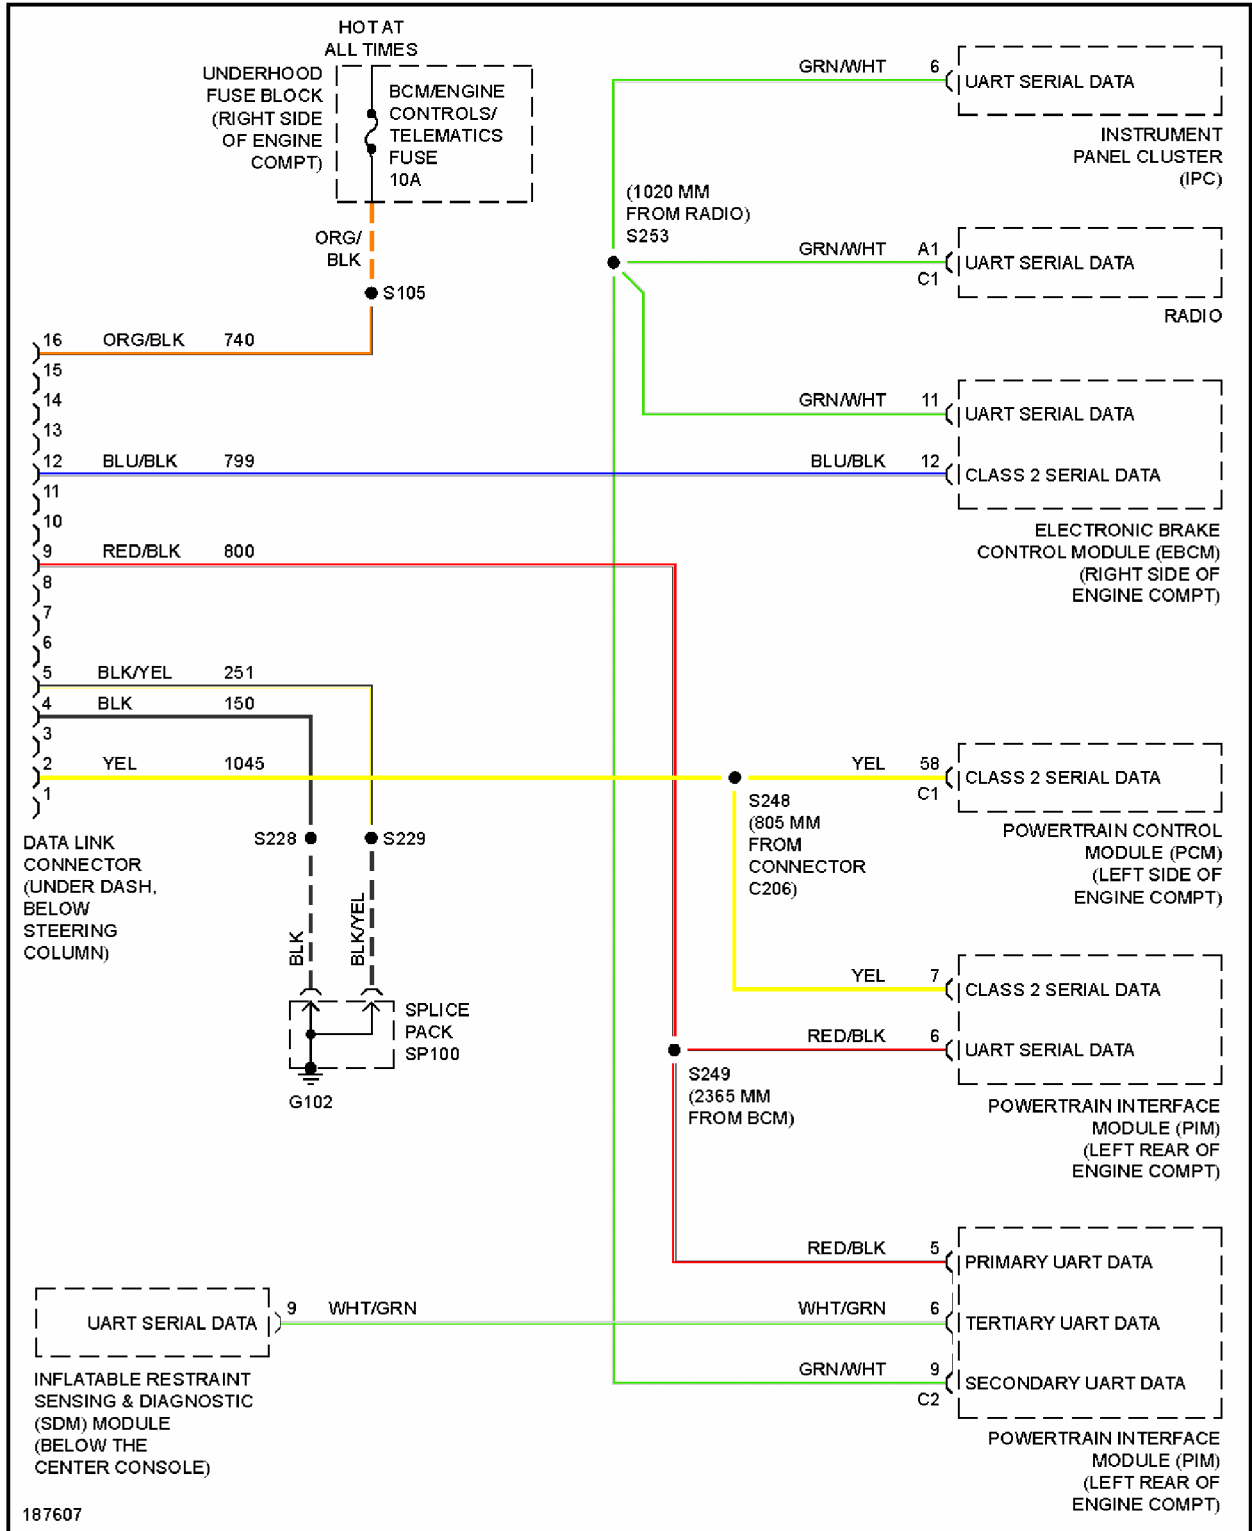


Fig. 7: Computer Data Lines Circuit

COOLING FAN

2004 Pontiac GTO

SYSTEM WIRING DIAGRAMS Pontiac - GTO

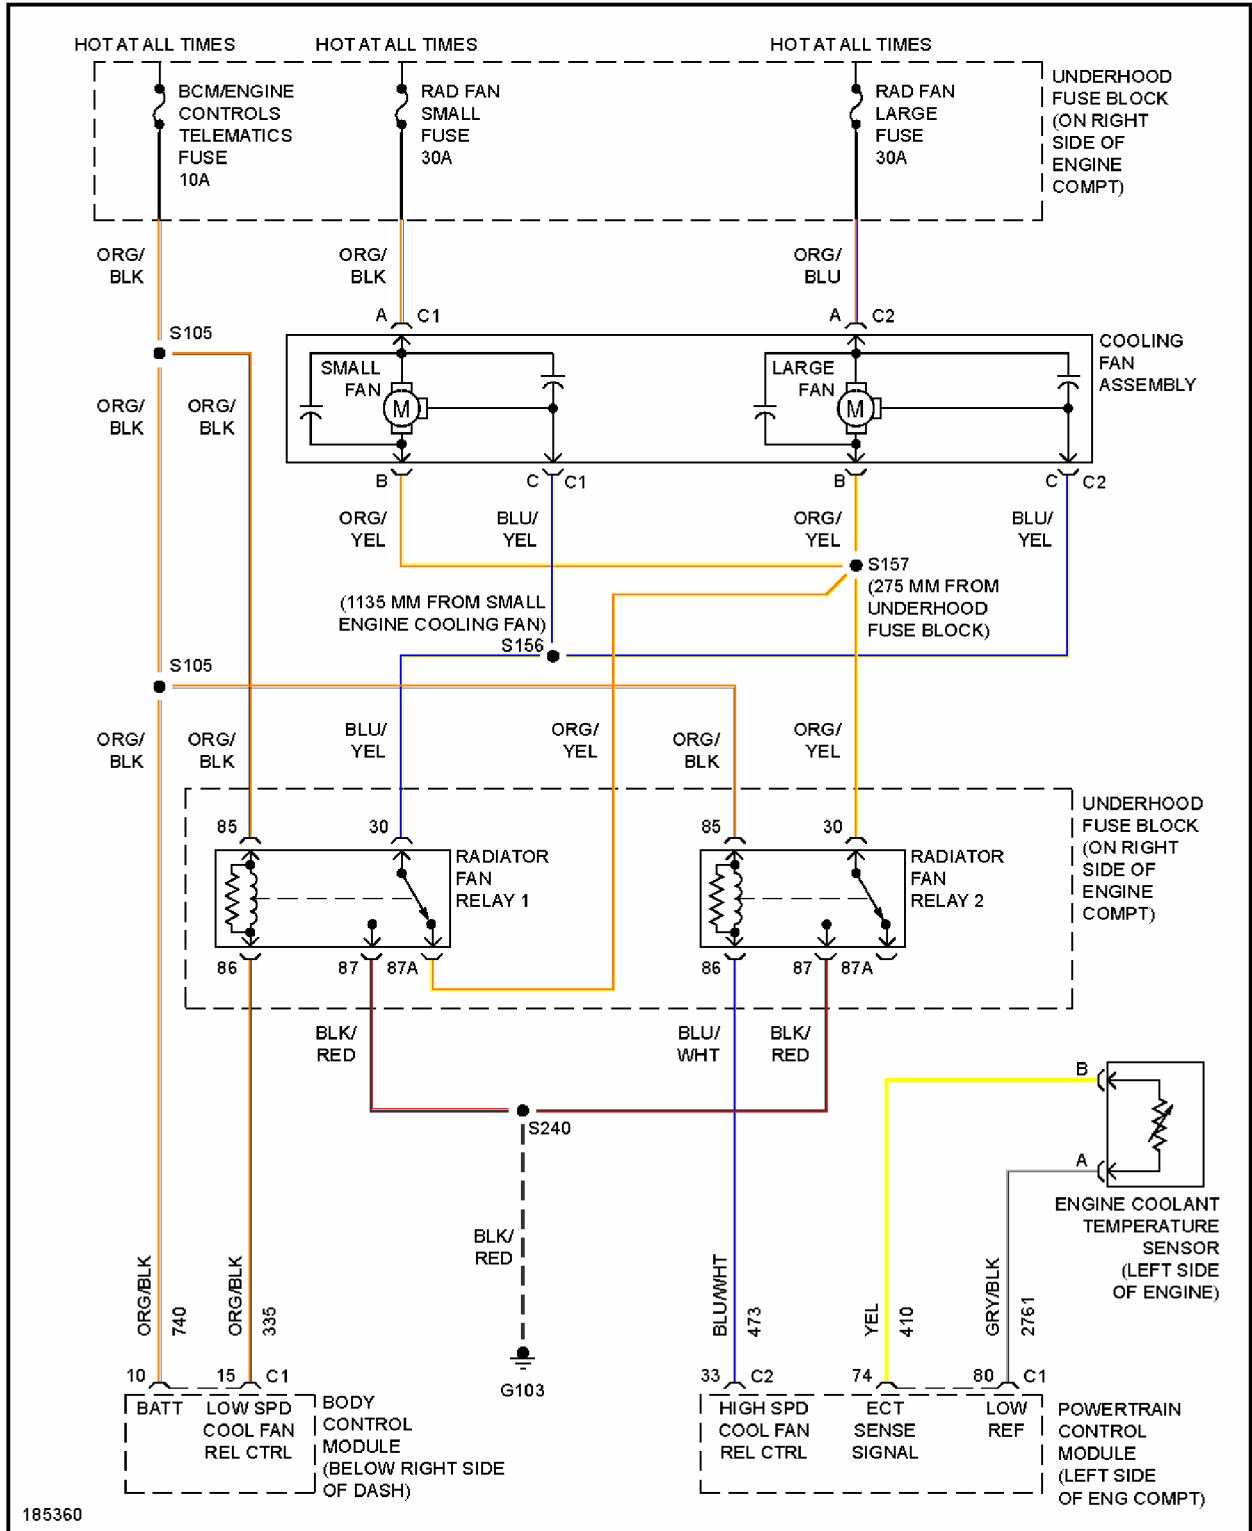


Fig. 8: Cooling Fan Circuit

CRUISE CONTROL

2004 Pontiac GTO

SYSTEM WIRING DIAGRAMS Pontiac - GTO


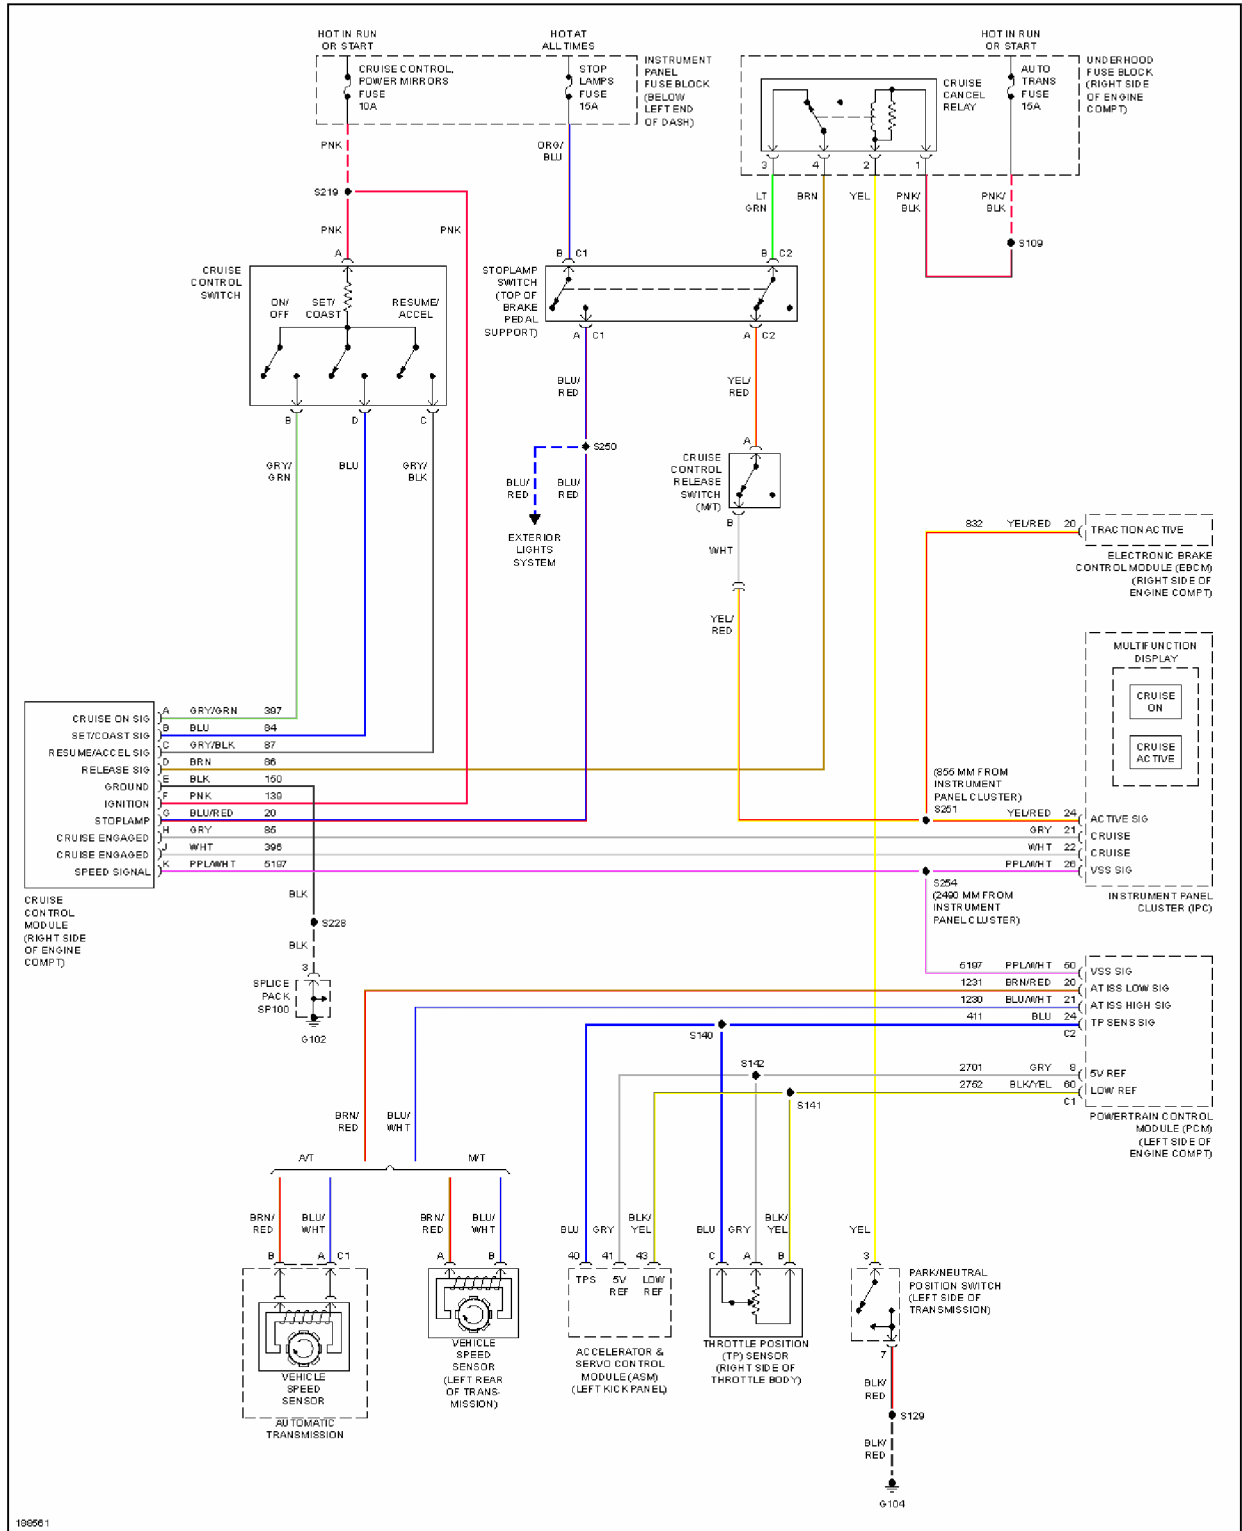


Fig. 9: Cruise Control Circuit

DEFOGGERS

2004 Pontiac GTO

SYSTEM WIRING DIAGRAMS Pontiac - GTO

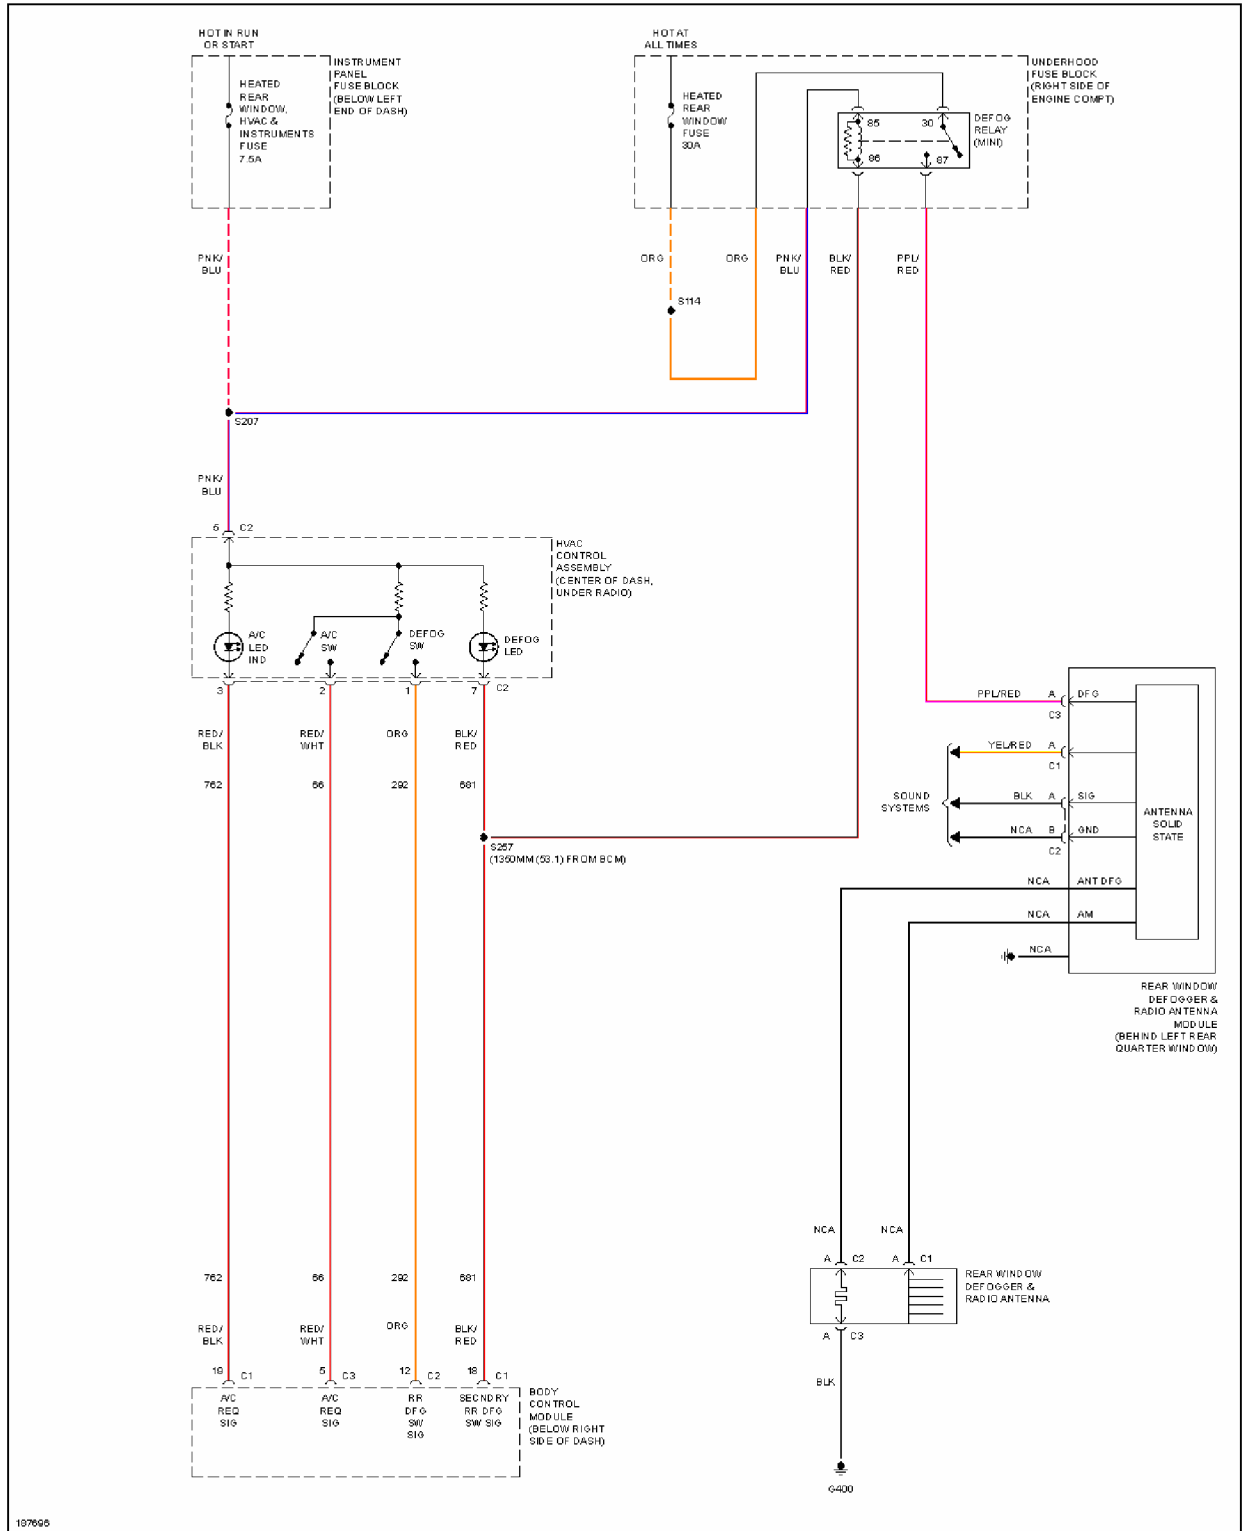

197695

Fig. 10: Defoggers Circuit

2004 Pontiac GTO

SYSTEM WIRING DIAGRAMS Pontiac - GTO

5.7L VIN G

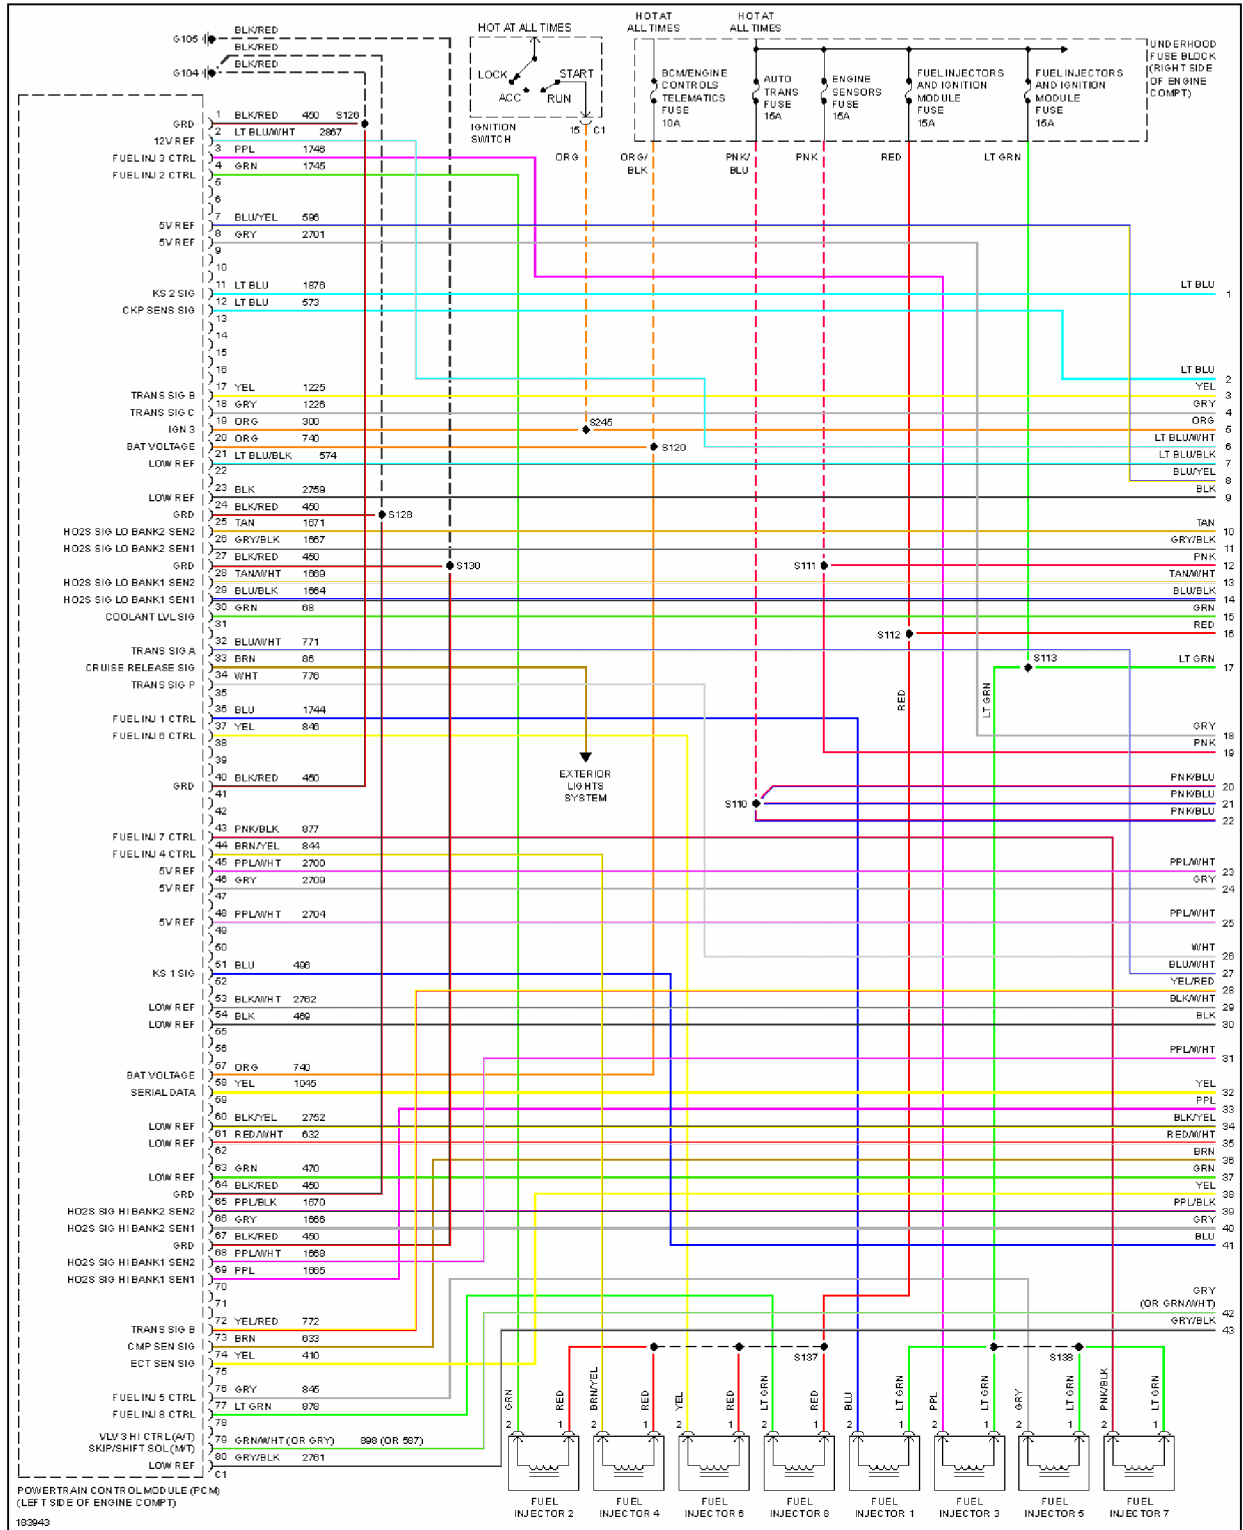


Fig. 11: 5.7L VIN G, Engine Performance Circuit (1 of 5)

2004 Pontiac GTO

SYSTEM WIRING DIAGRAMS Pontiac - GTO

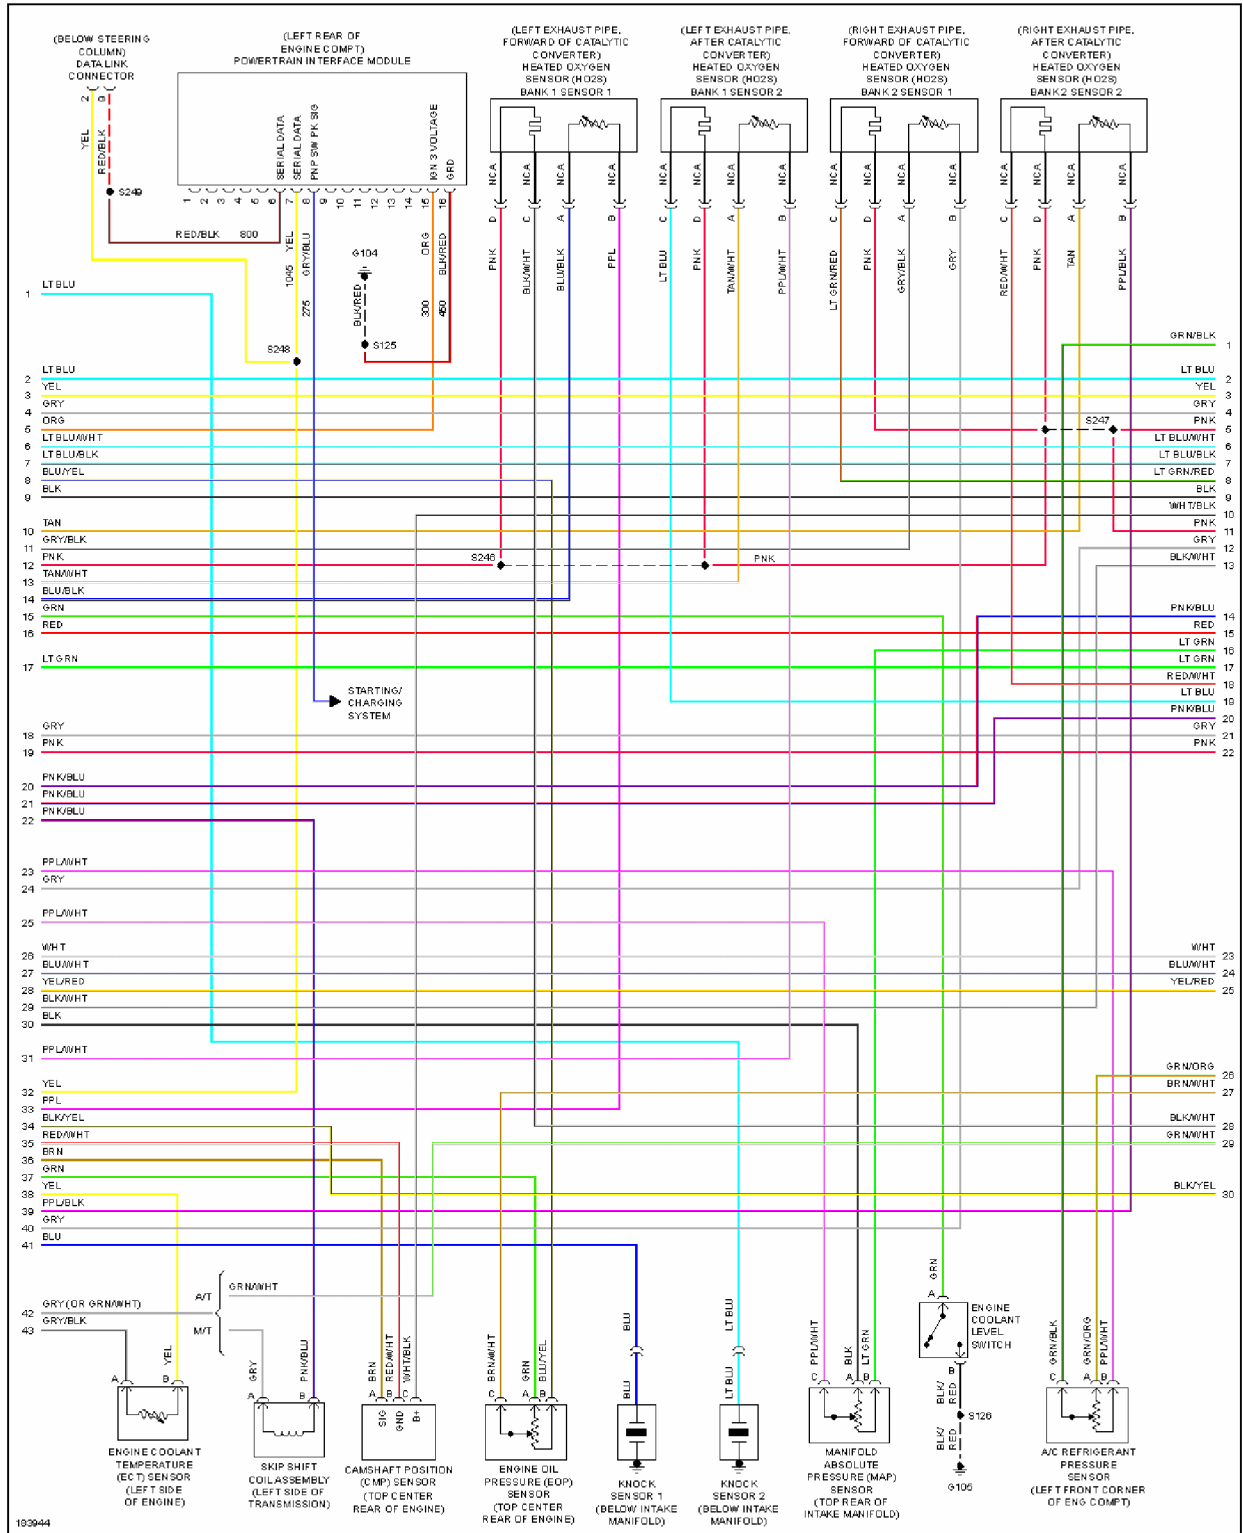


Fig. 12: 5.7L VIN G, Engine Performance Circuit (2 of 5)

2004 Pontiac GTO

SYSTEM WIRING DIAGRAMS Pontiac - GTO

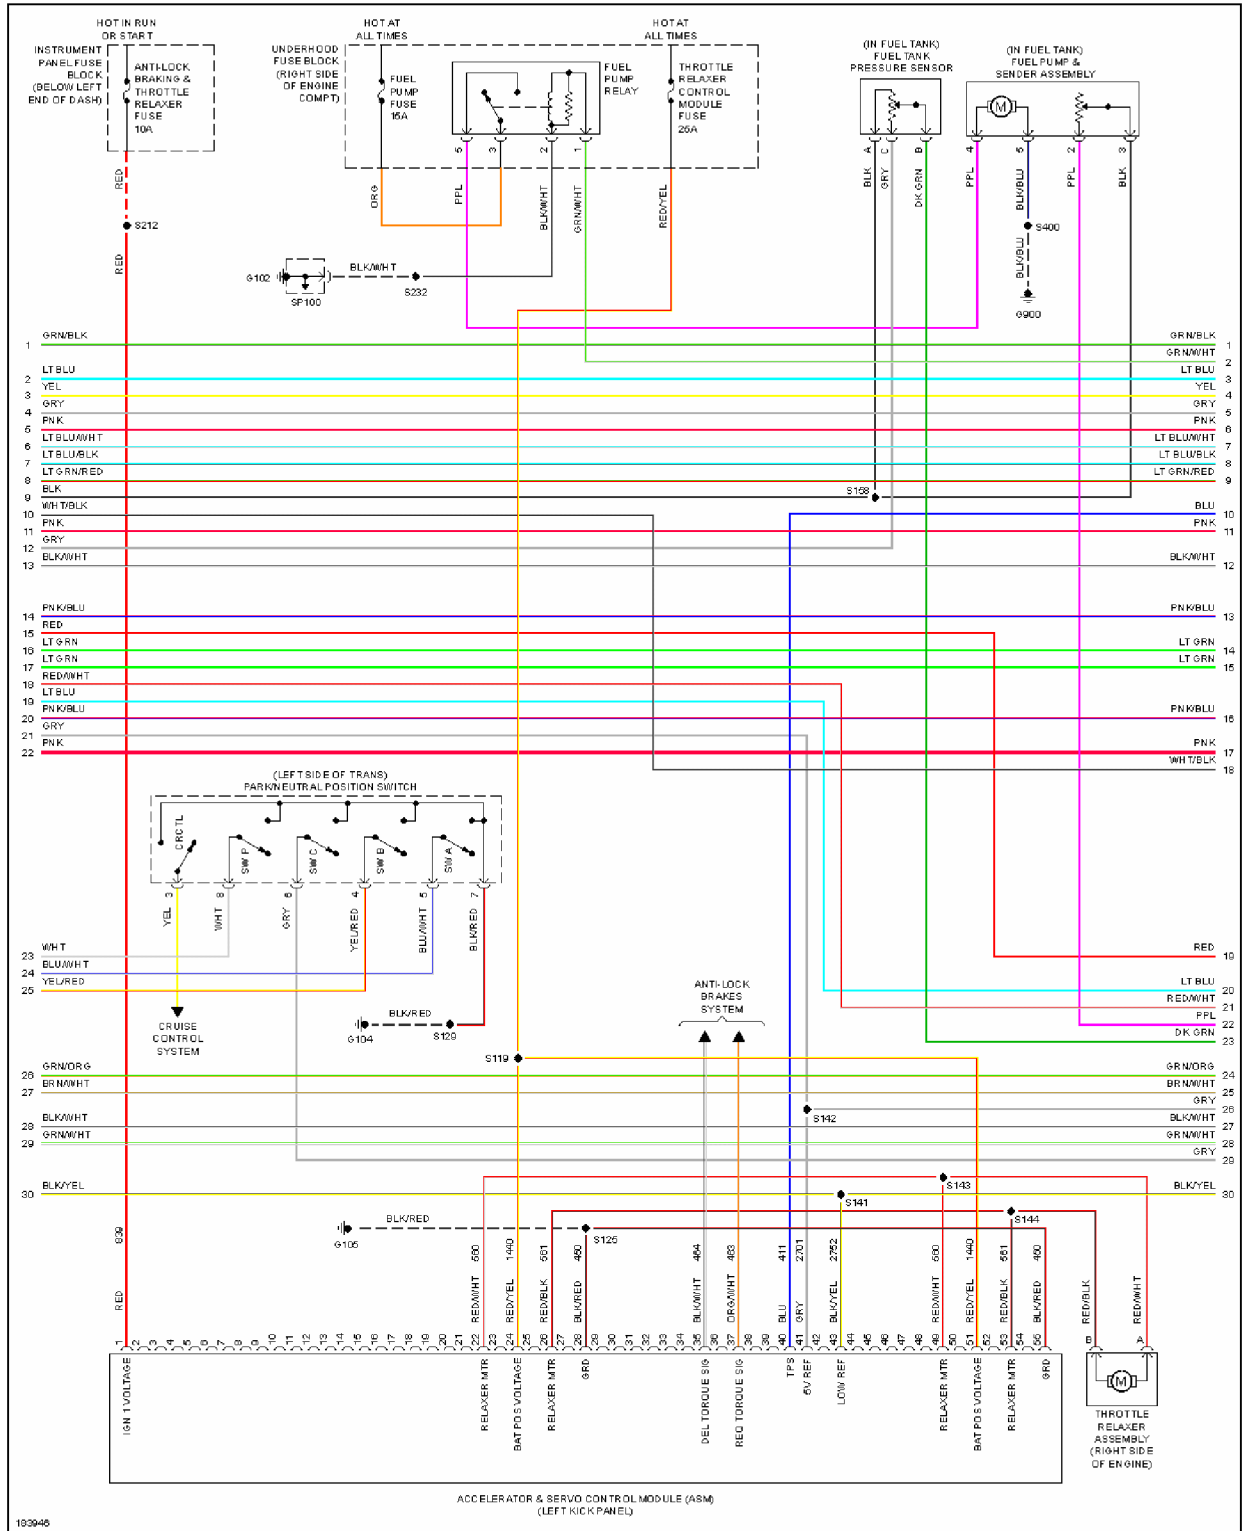


Fig. 13: 5.7L VIN G, Engine Performance Circuit (3 of 5)

2004 Pontiac GTO

SYSTEM WIRING DIAGRAMS Pontiac - GTO

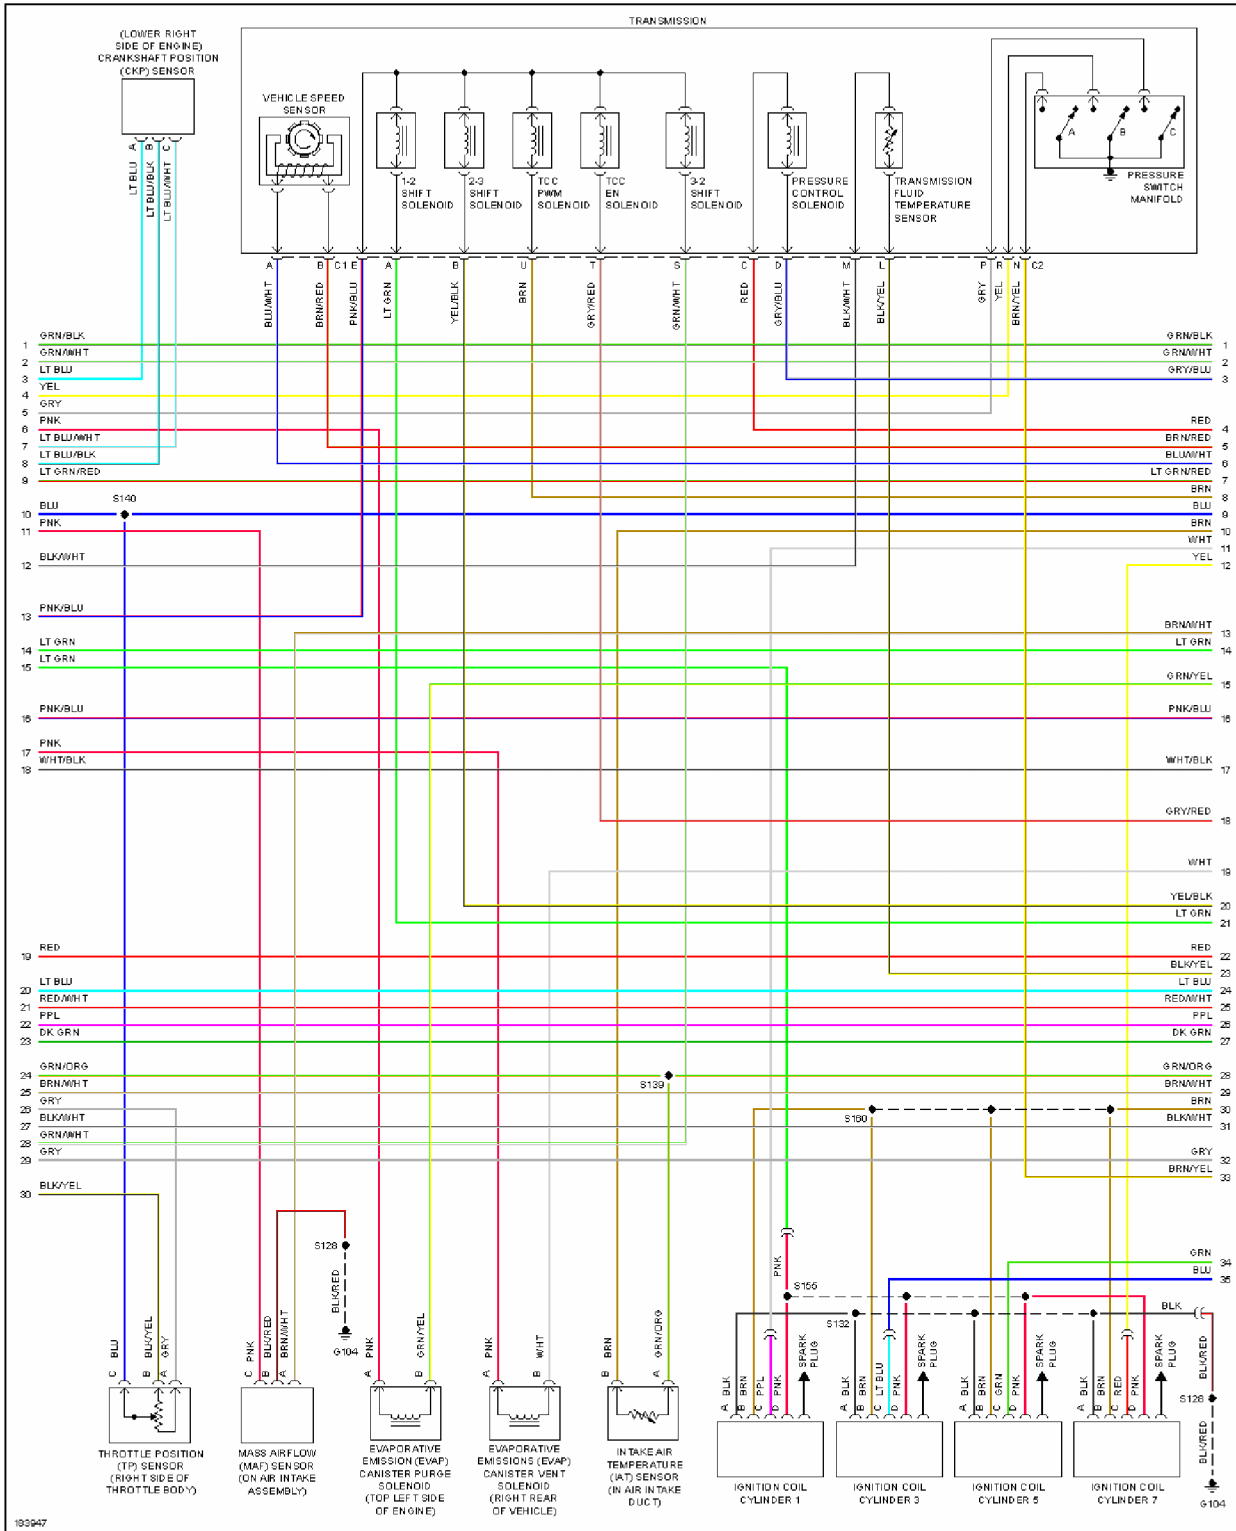


Fig. 14: 5.7L VIN G, Engine Performance Circuit (4 of 5)

2004 Pontiac GTO

SYSTEM WIRING DIAGRAMS Pontiac - GTO

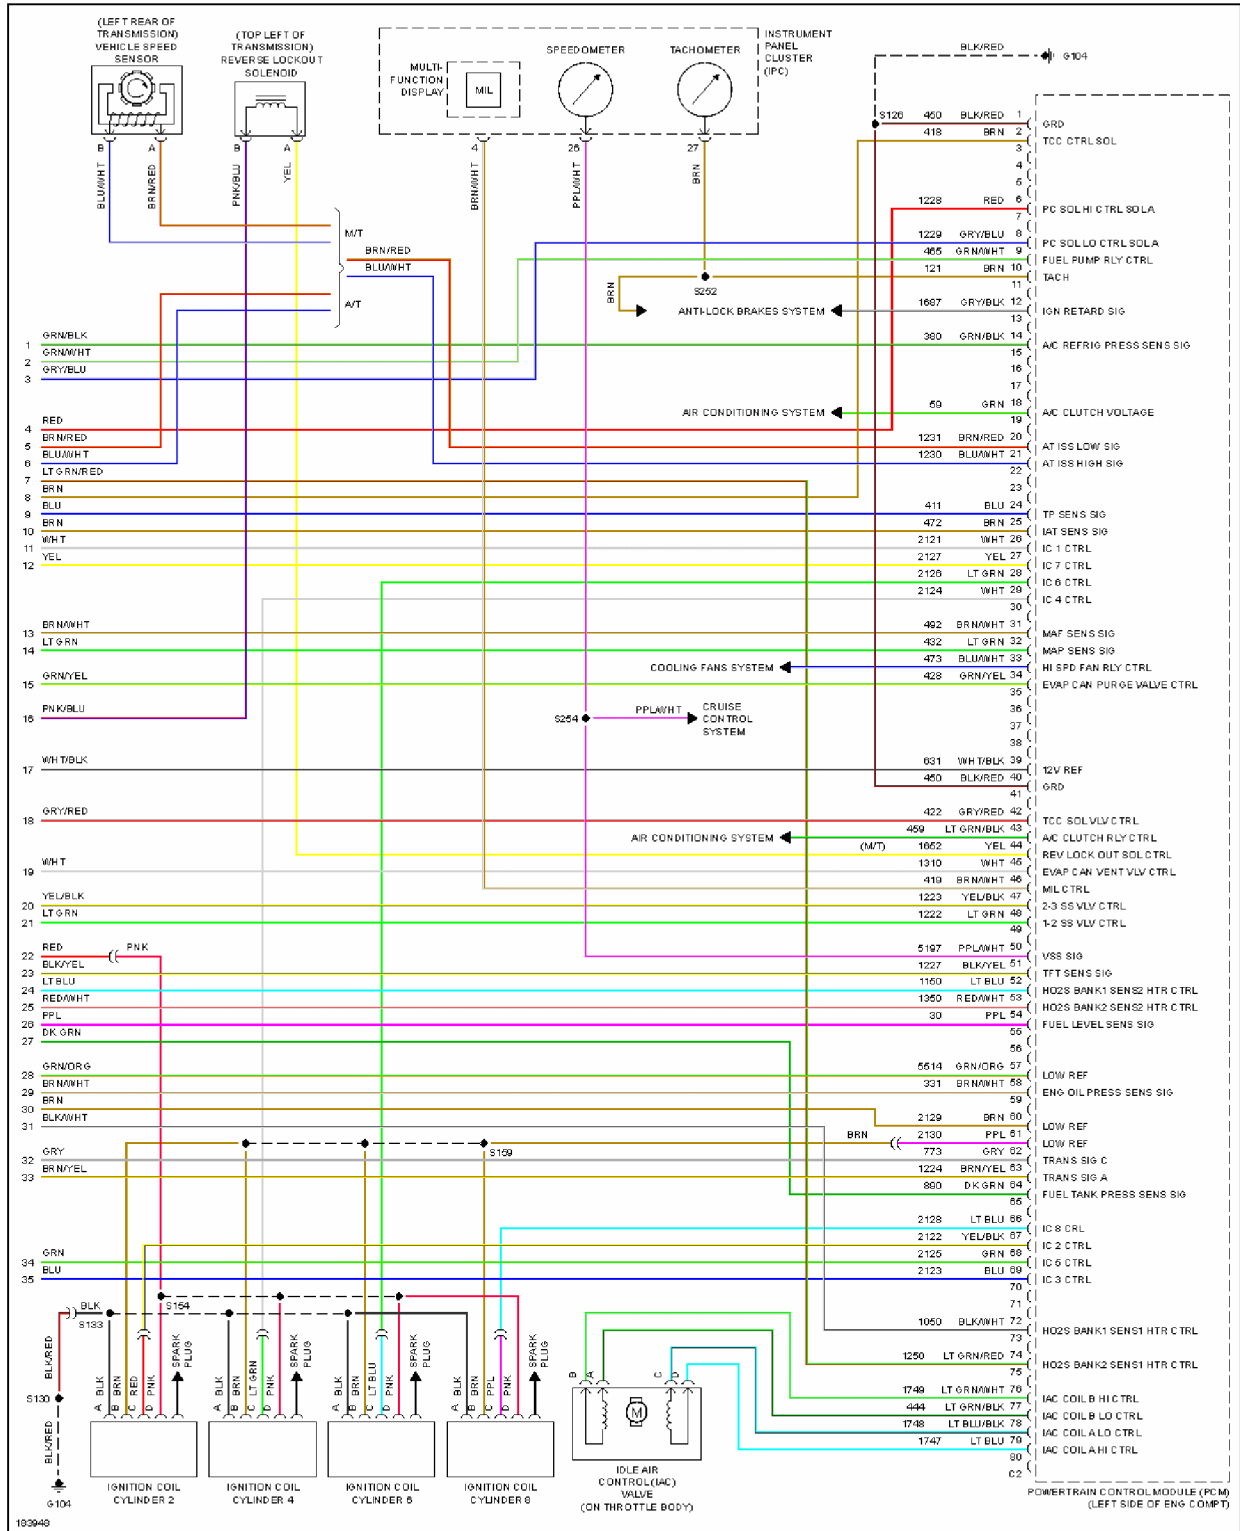


Fig. 15: 5.7L VIN G, Engine Performance Circuit (5 of 5)

EXTERIOR LIGHTS

2004 Pontiac GTO

SYSTEM WIRING DIAGRAMS Pontiac - GTO

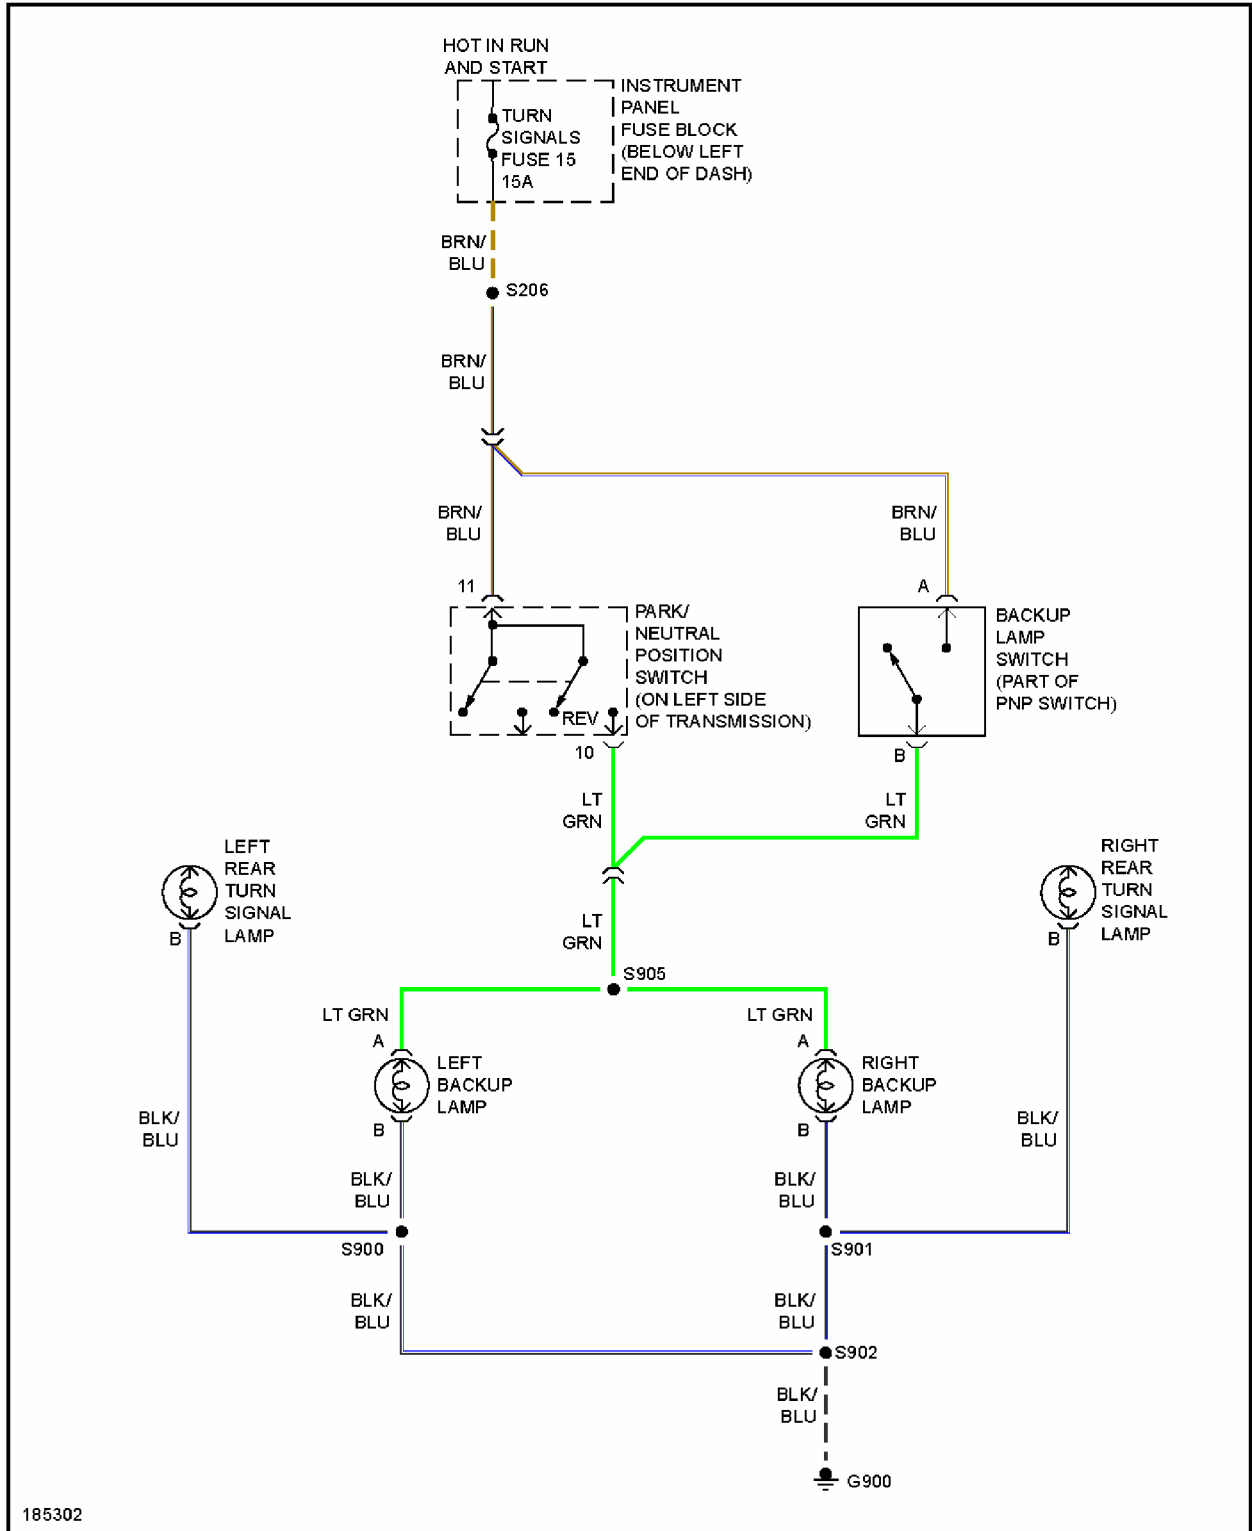


Fig. 16: Back-up Lamps Circuit

2004 Pontiac GTO

SYSTEM WIRING DIAGRAMS Pontiac - GTO

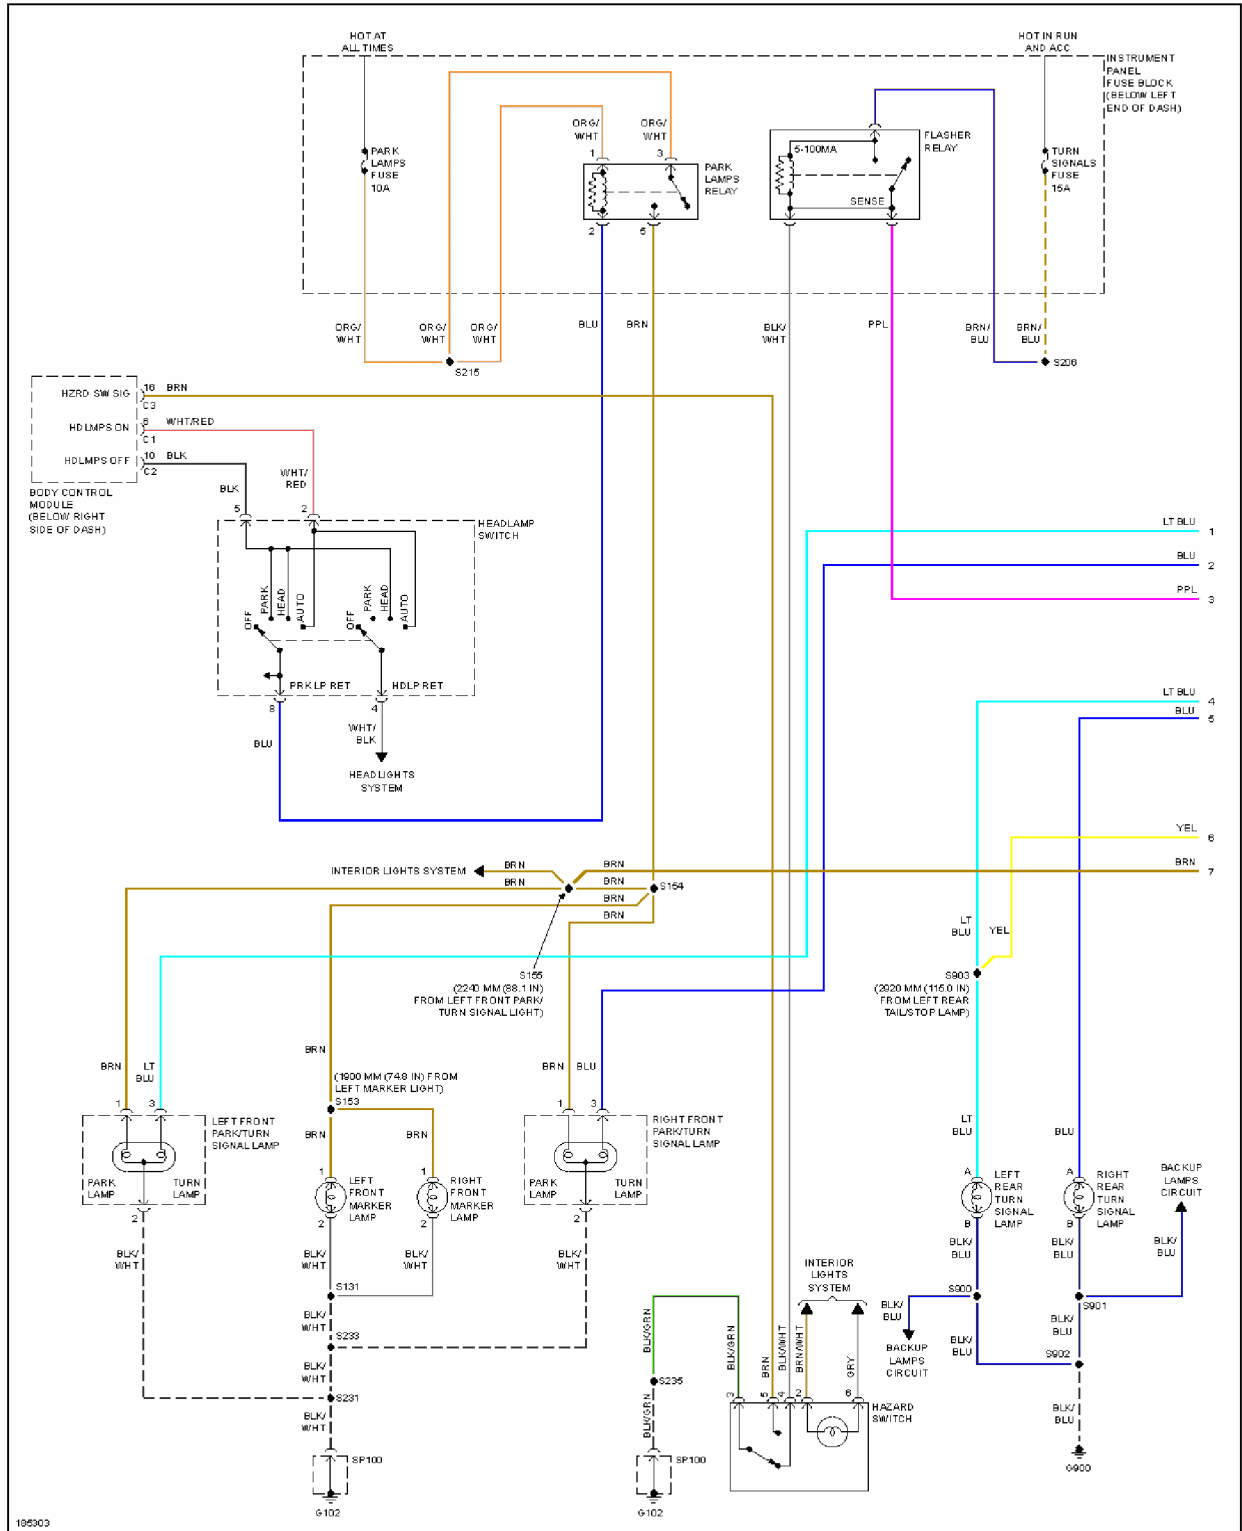


Fig. 17: Exterior Lamps Circuit (1 of 2)

2004 Pontiac GTO

SYSTEM WIRING DIAGRAMS Pontiac - GTO

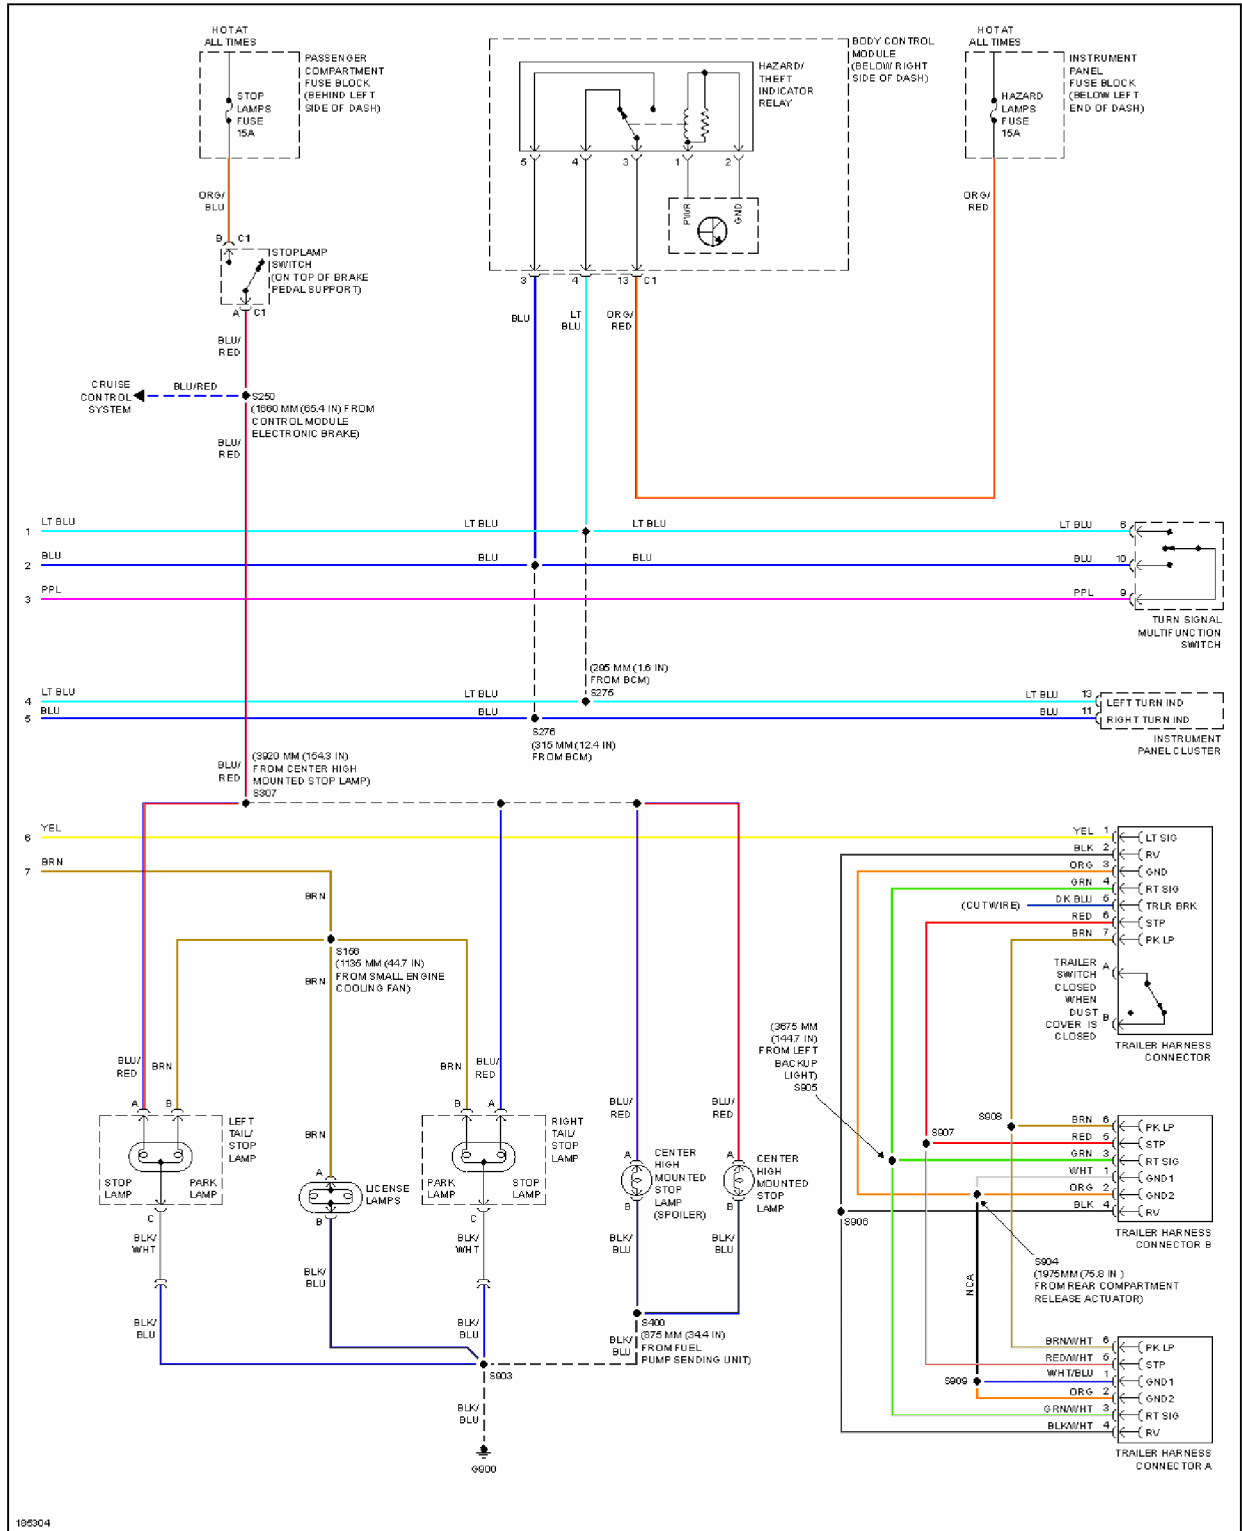


Fig. 18: Exterior Lamps Circuit (2 of 2)

GROUND DISTRIBUTION

2004 Pontiac GTO

SYSTEM WIRING DIAGRAMS Pontiac - GTO

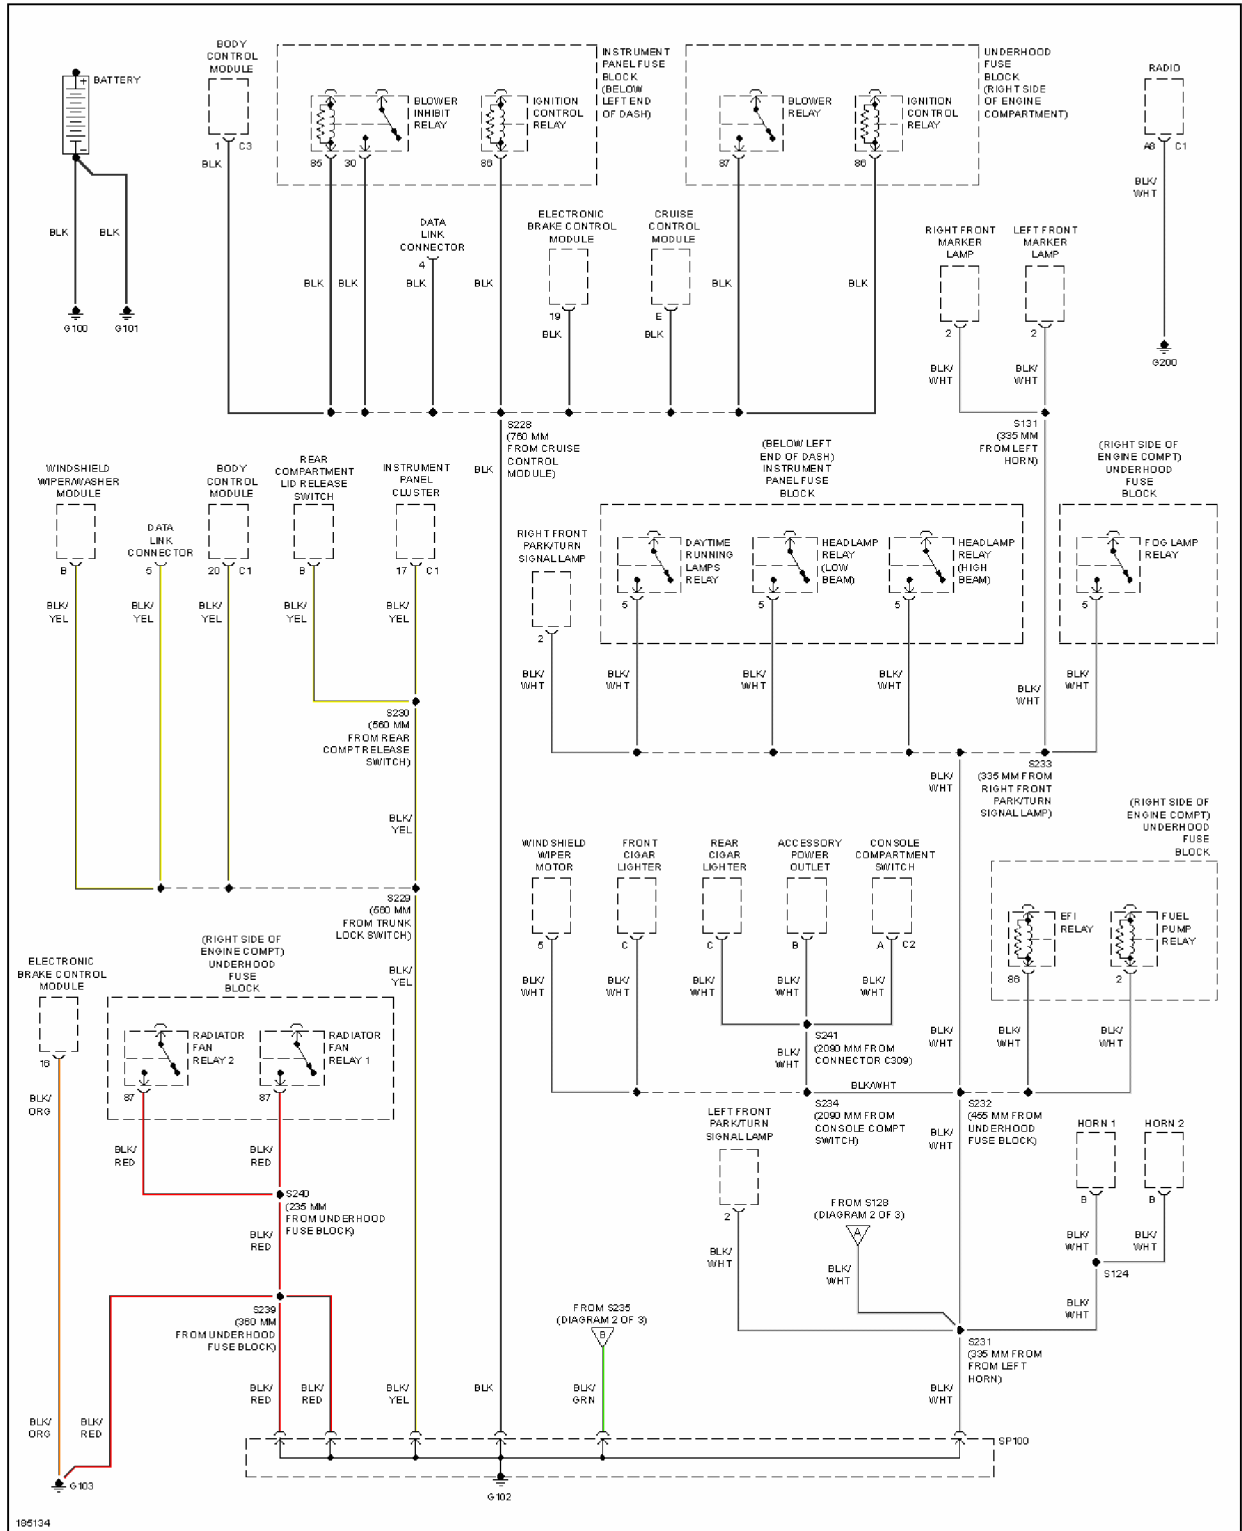


Fig. 19: Ground Distribution Circuit (1 of 3)

2004 Pontiac GTO

SYSTEM WIRING DIAGRAMS Pontiac - GTO

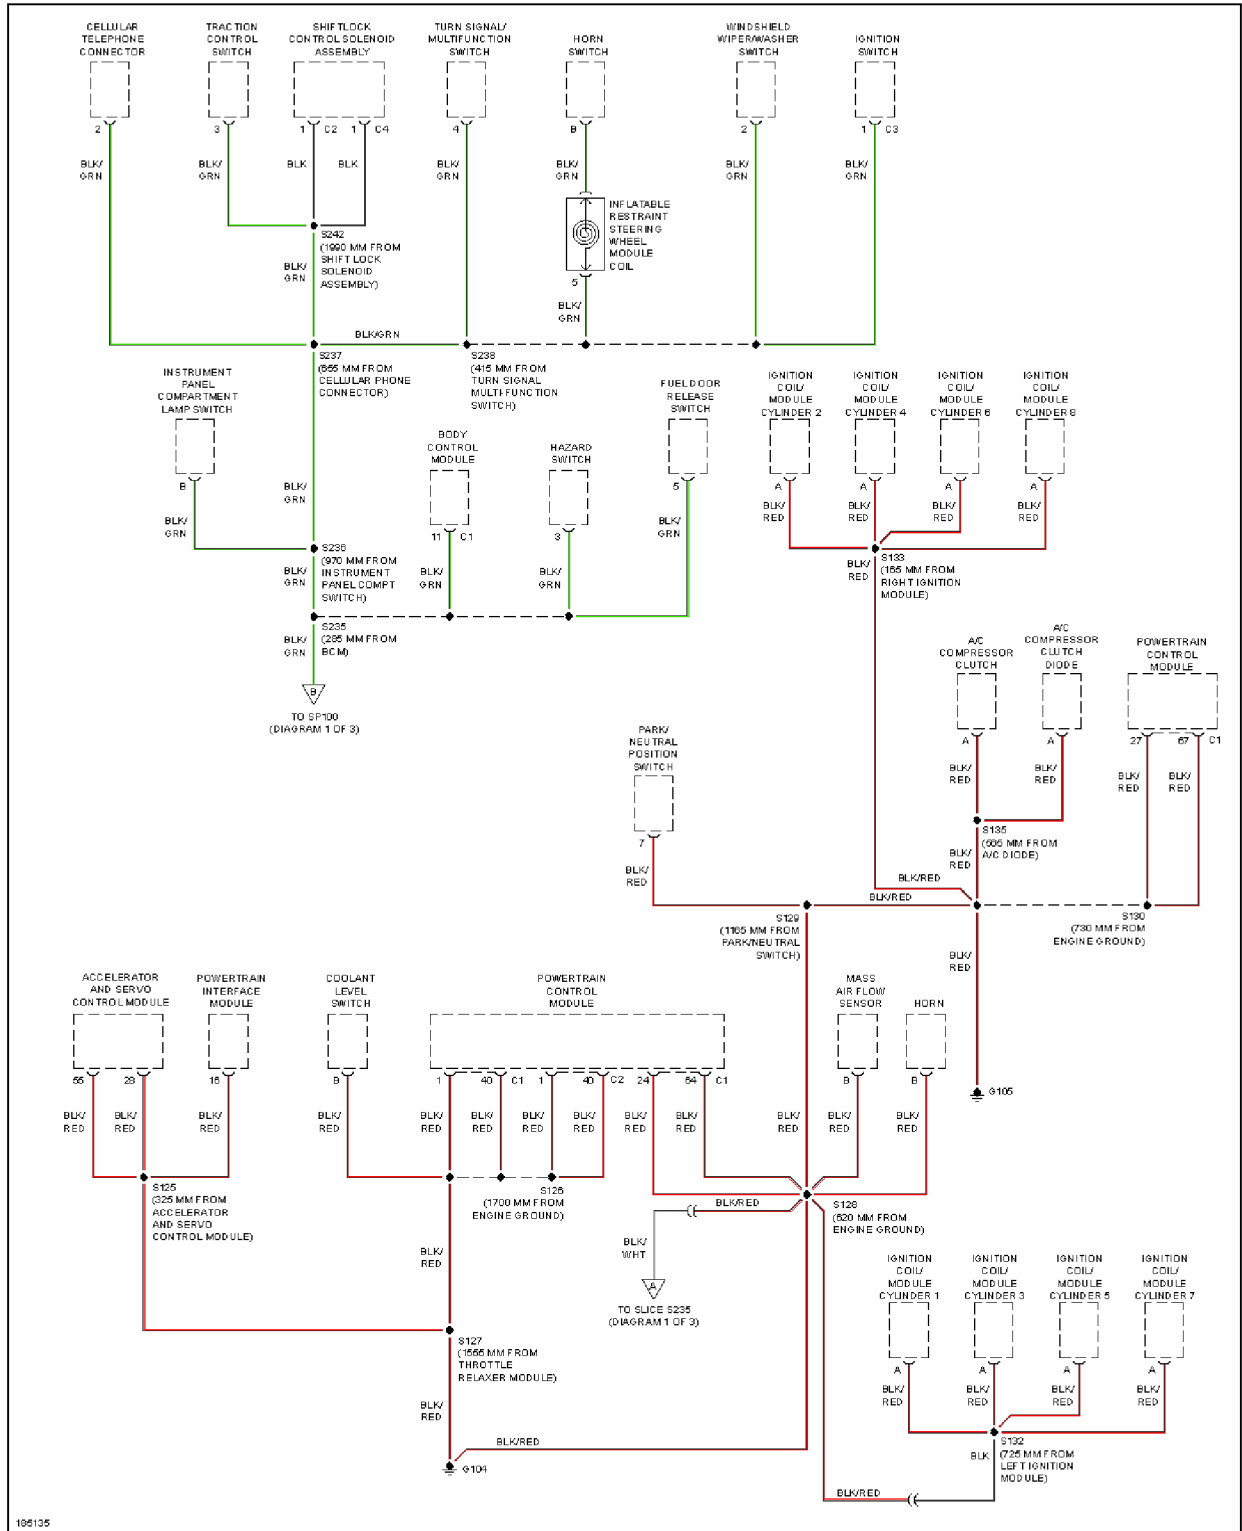


Fig. 20: Ground Distribution Circuit (2 of 3)

2004 Pontiac GTO

SYSTEM WIRING DIAGRAMS Pontiac - GTO

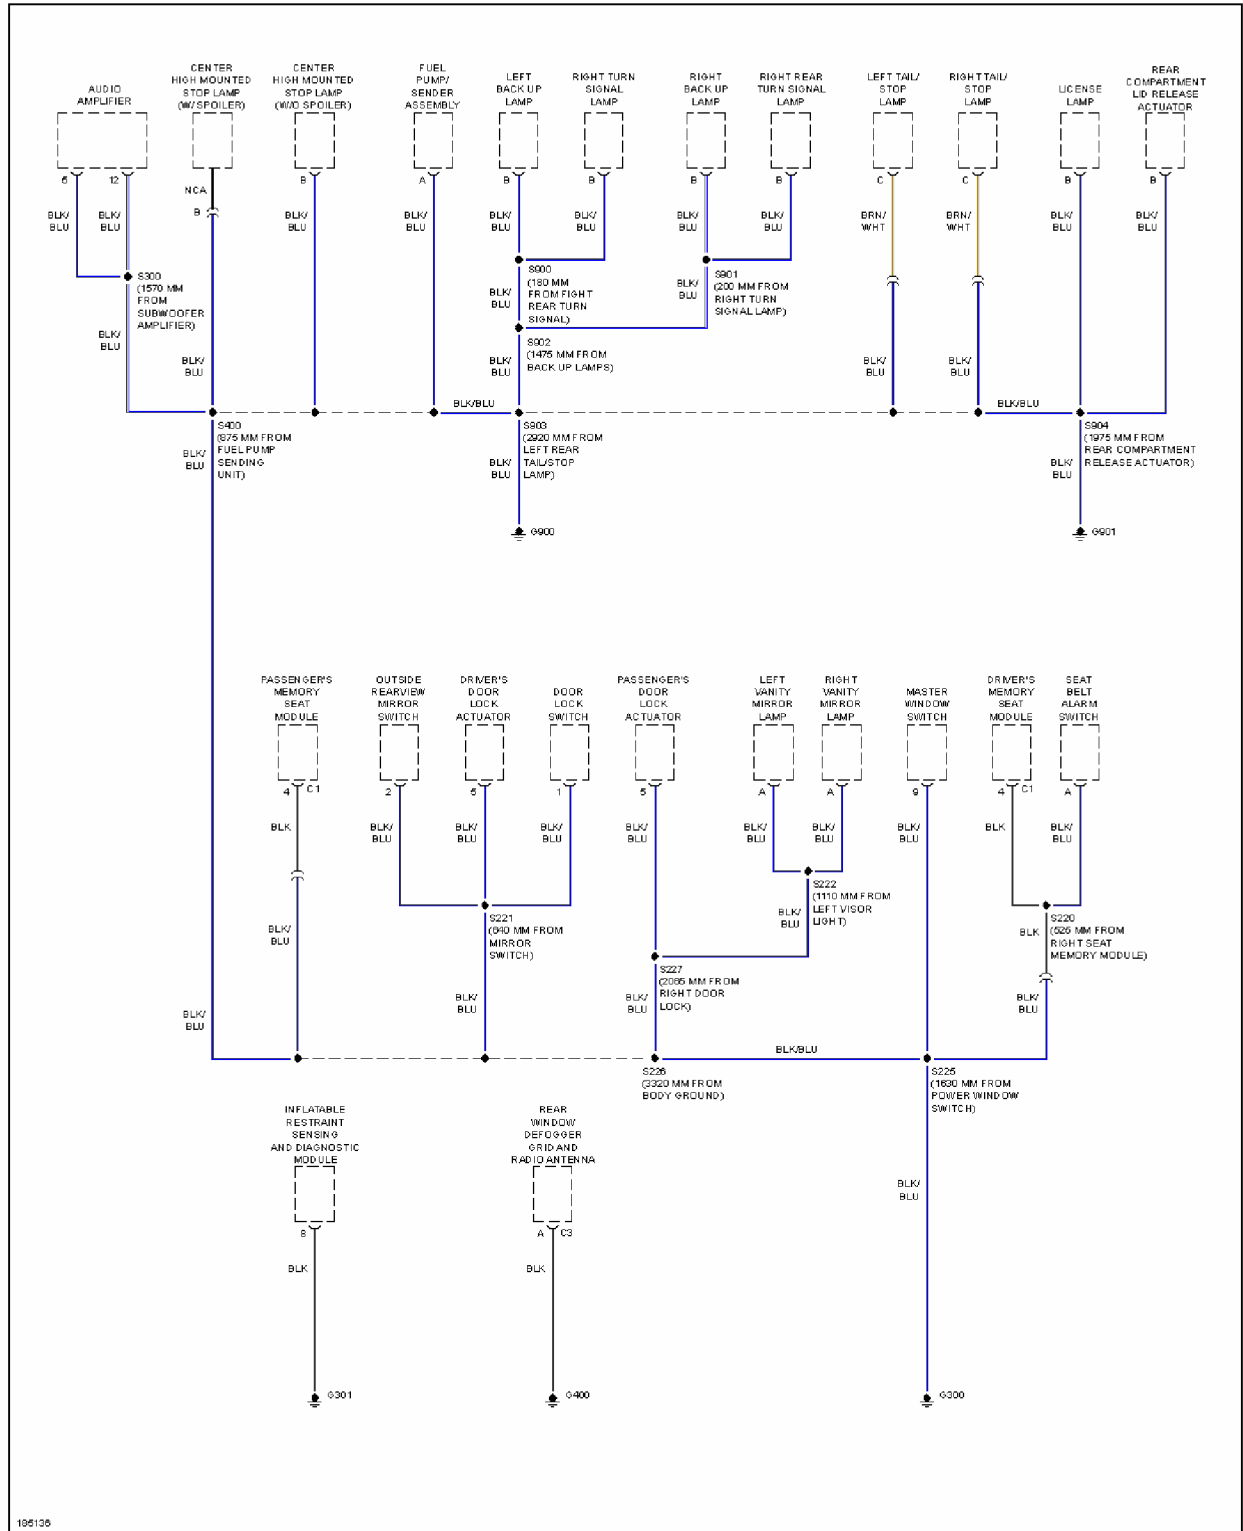


Fig. 21: Ground Distribution Circuit (3 of 3)

HEADLIGHTS

2004 Pontiac GTO

SYSTEM WIRING DIAGRAMS Pontiac - GTO

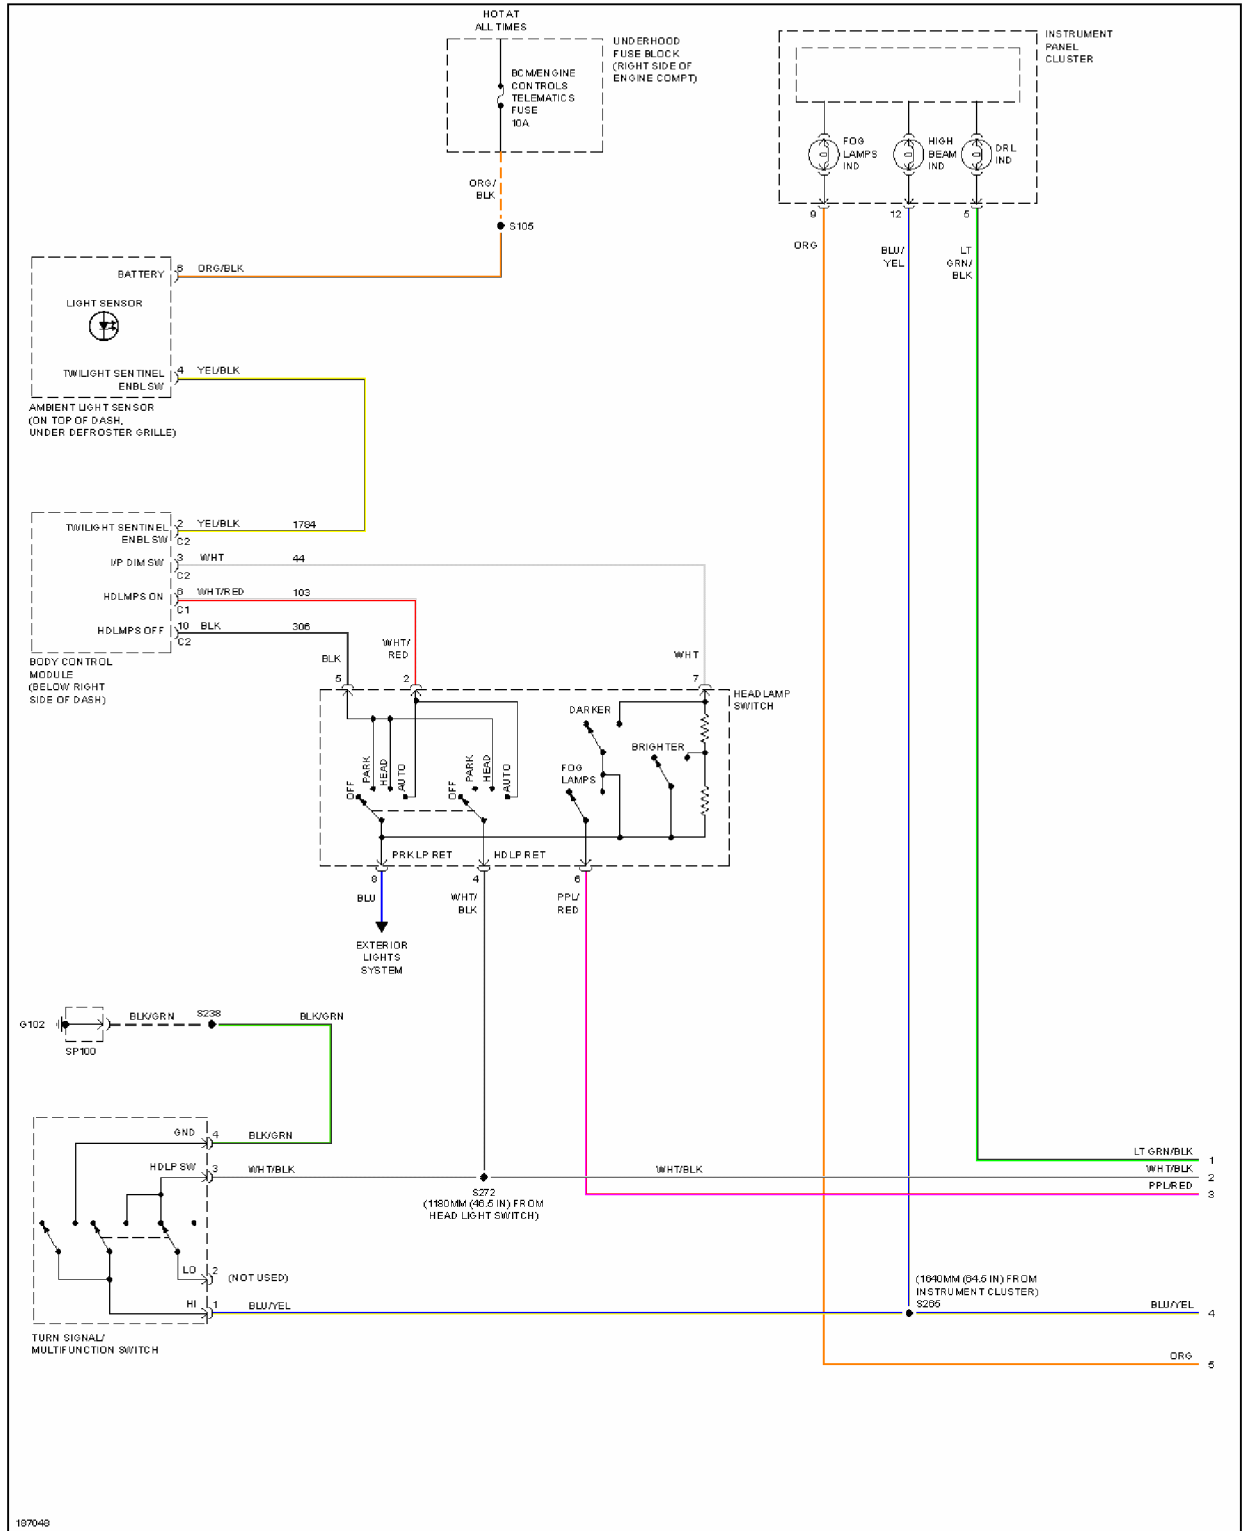


Fig. 22: Headlights Circuit (1 of 2)

2004 Pontiac GTO

SYSTEM WIRING DIAGRAMS Pontiac - GTO

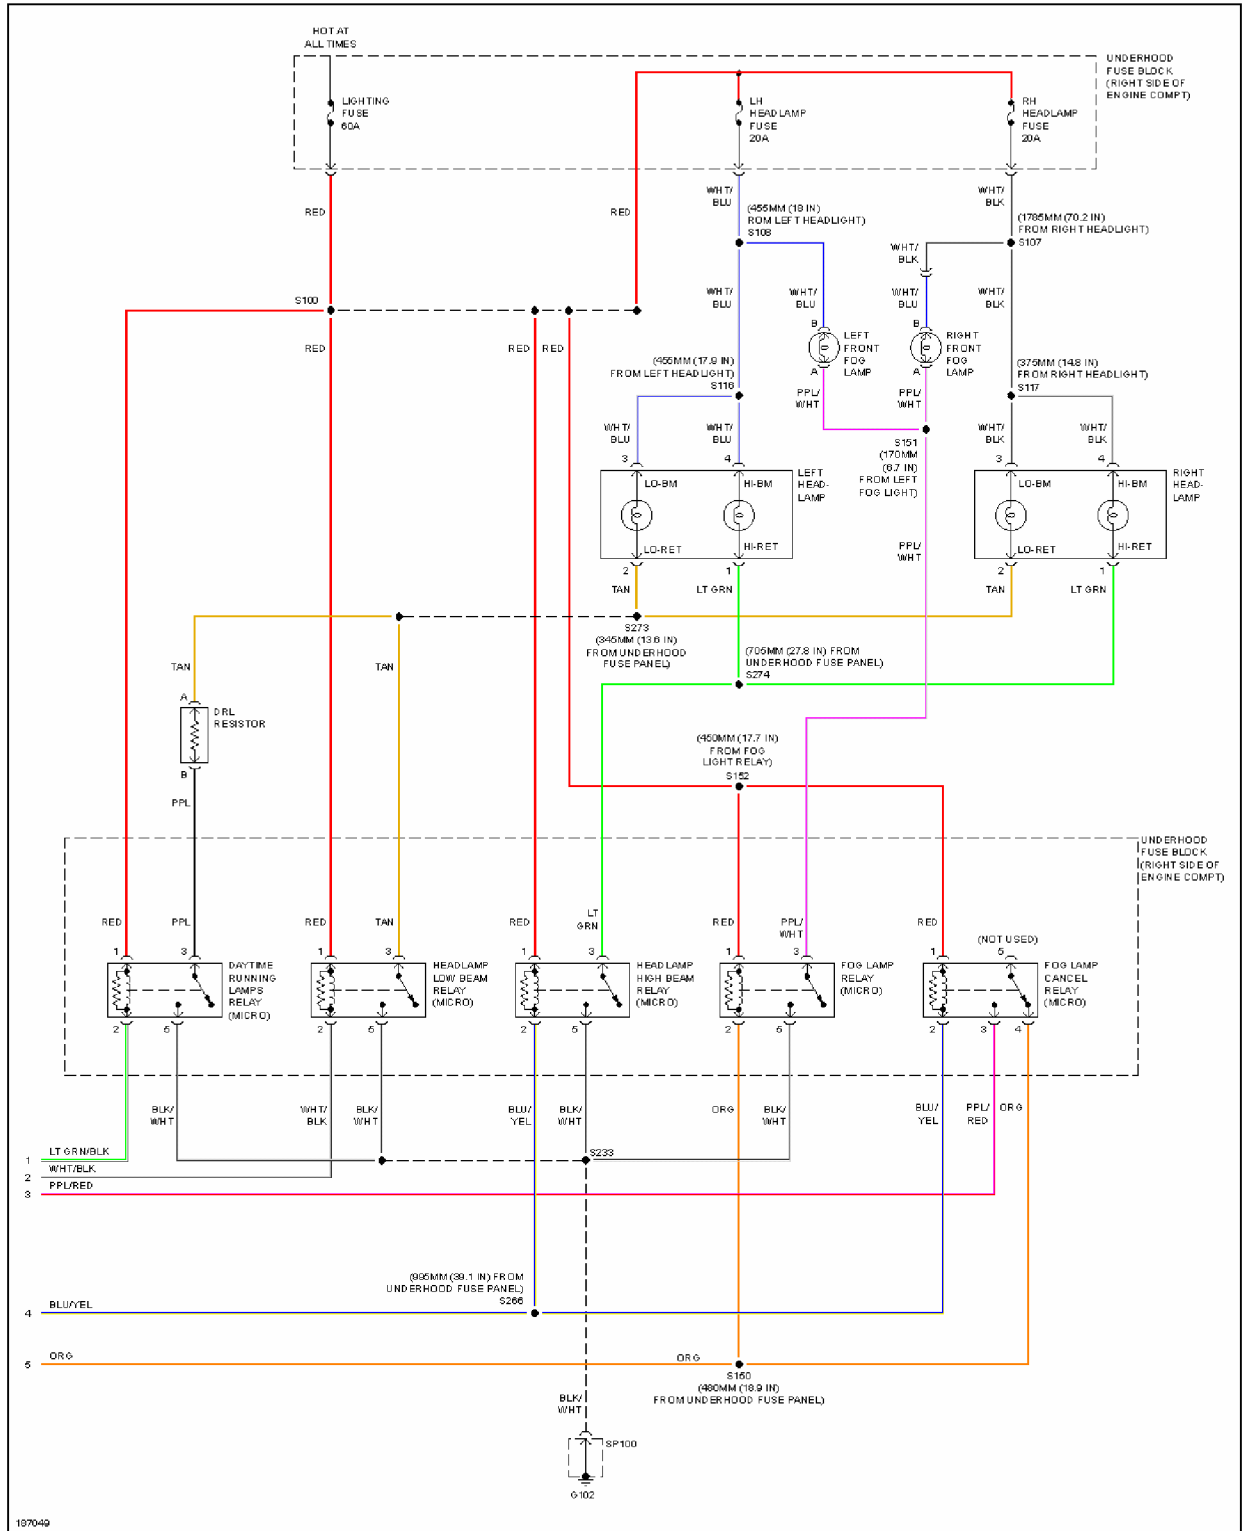


Fig. 23: Headlights Circuit (2 of 2)

HORN

2004 Pontiac GTO

SYSTEM WIRING DIAGRAMS Pontiac - GTO

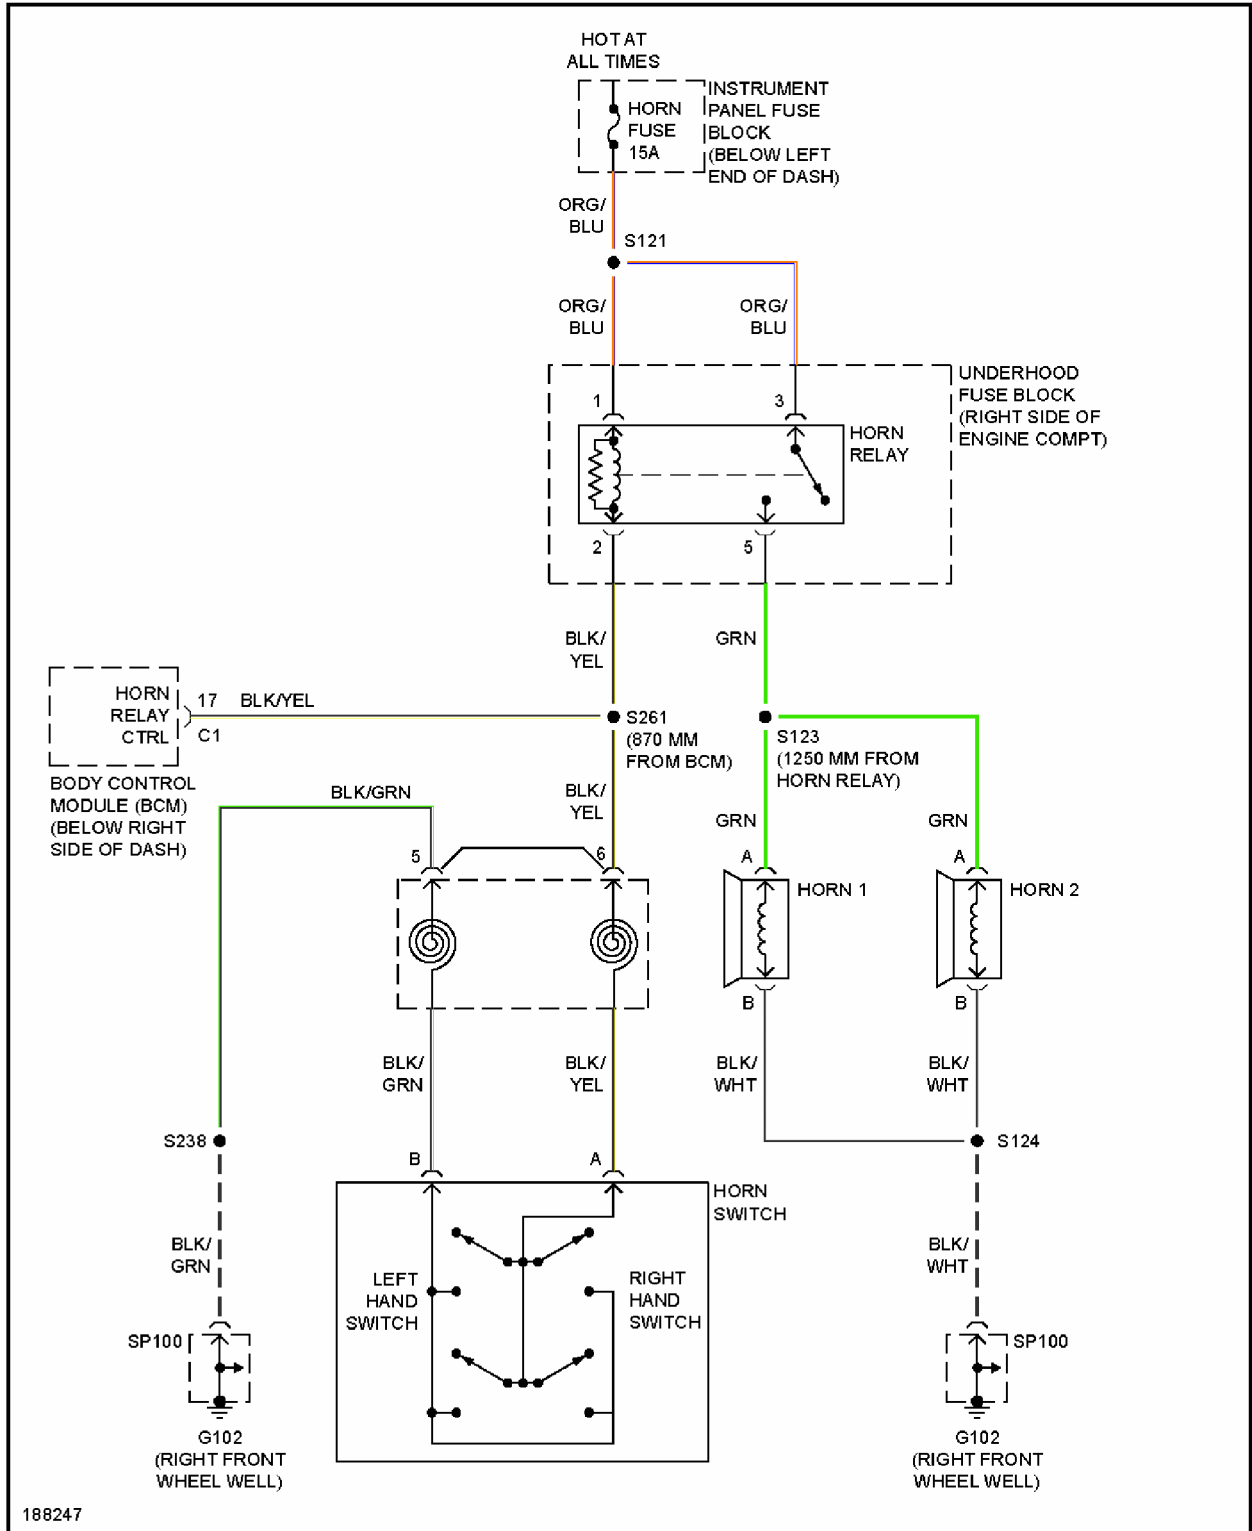


Fig. 24: Horn Circuit

INSTRUMENT CLUSTER

2004 Pontiac GTO

SYSTEM WIRING DIAGRAMS Pontiac - GTO

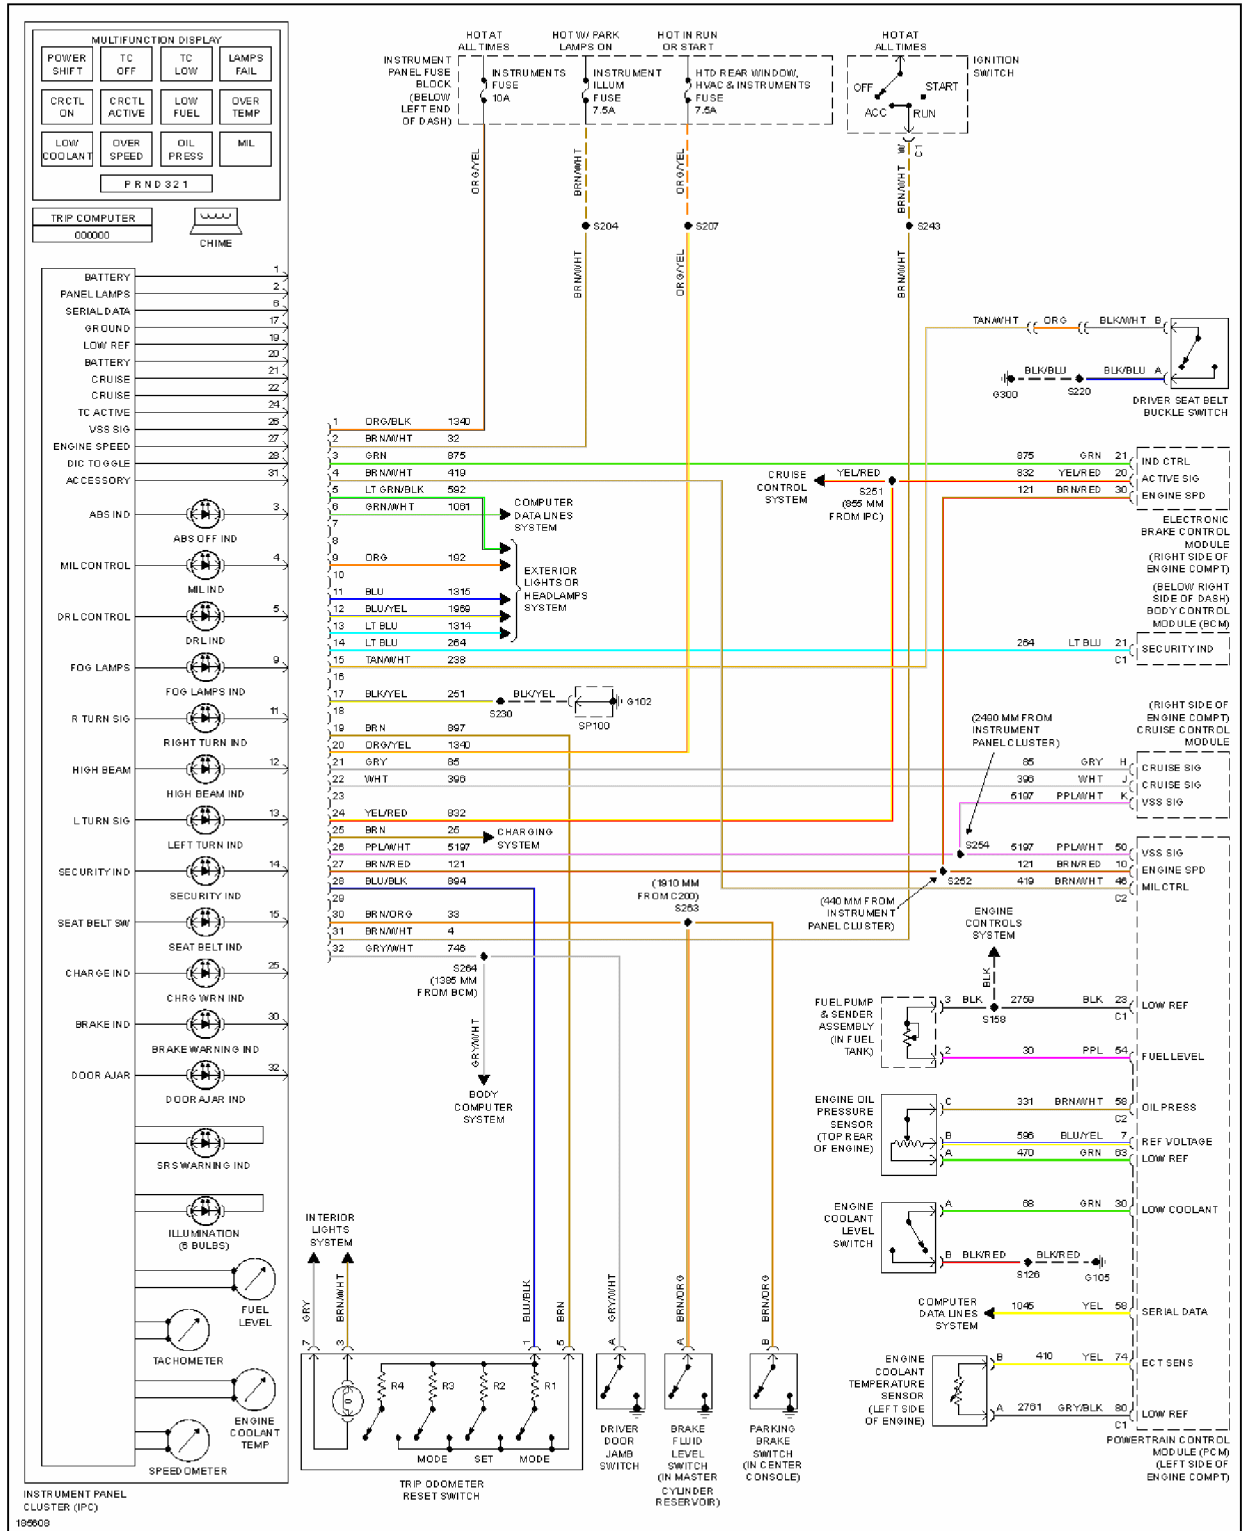


Fig. 25: Instrument Cluster Circuit

INTERIOR LIGHTS

2004 Pontiac GTO

SYSTEM WIRING DIAGRAMS Pontiac - GTO


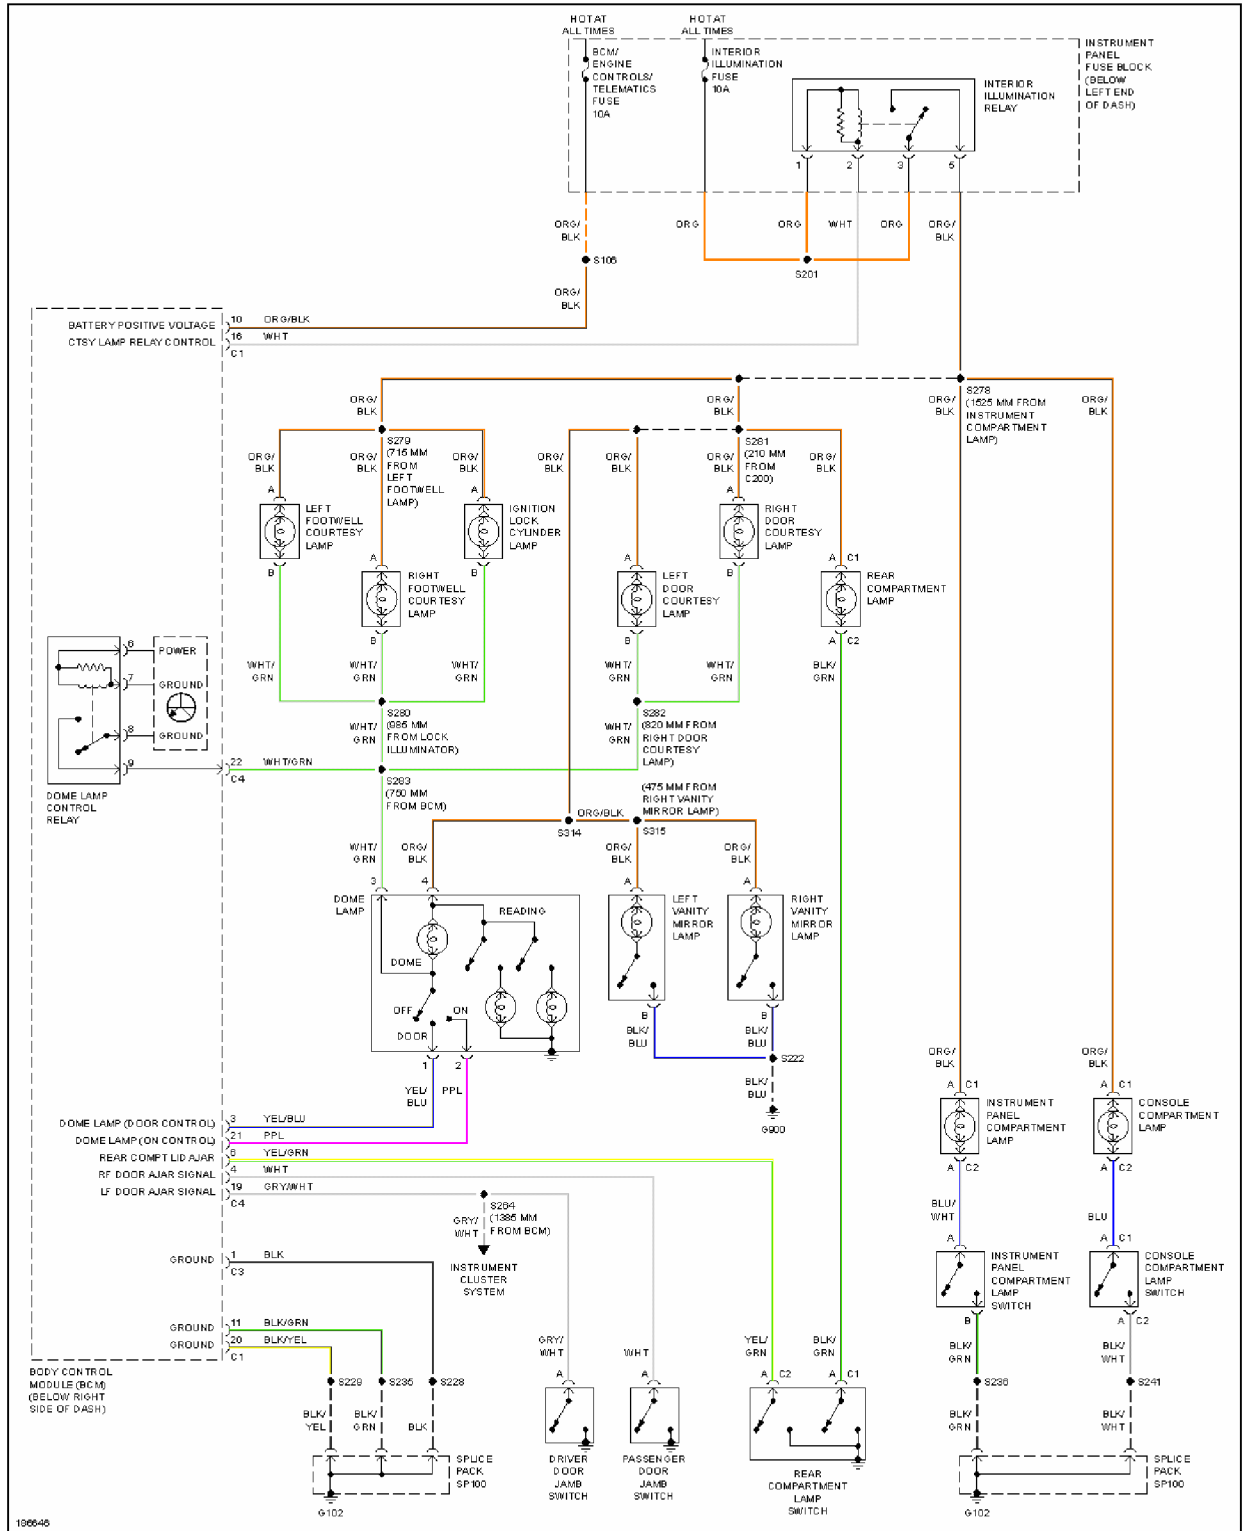


Fig. 26: Courtesy Lamps Circuit

2004 Pontiac GTO

SYSTEM WIRING DIAGRAMS Pontiac - GTO

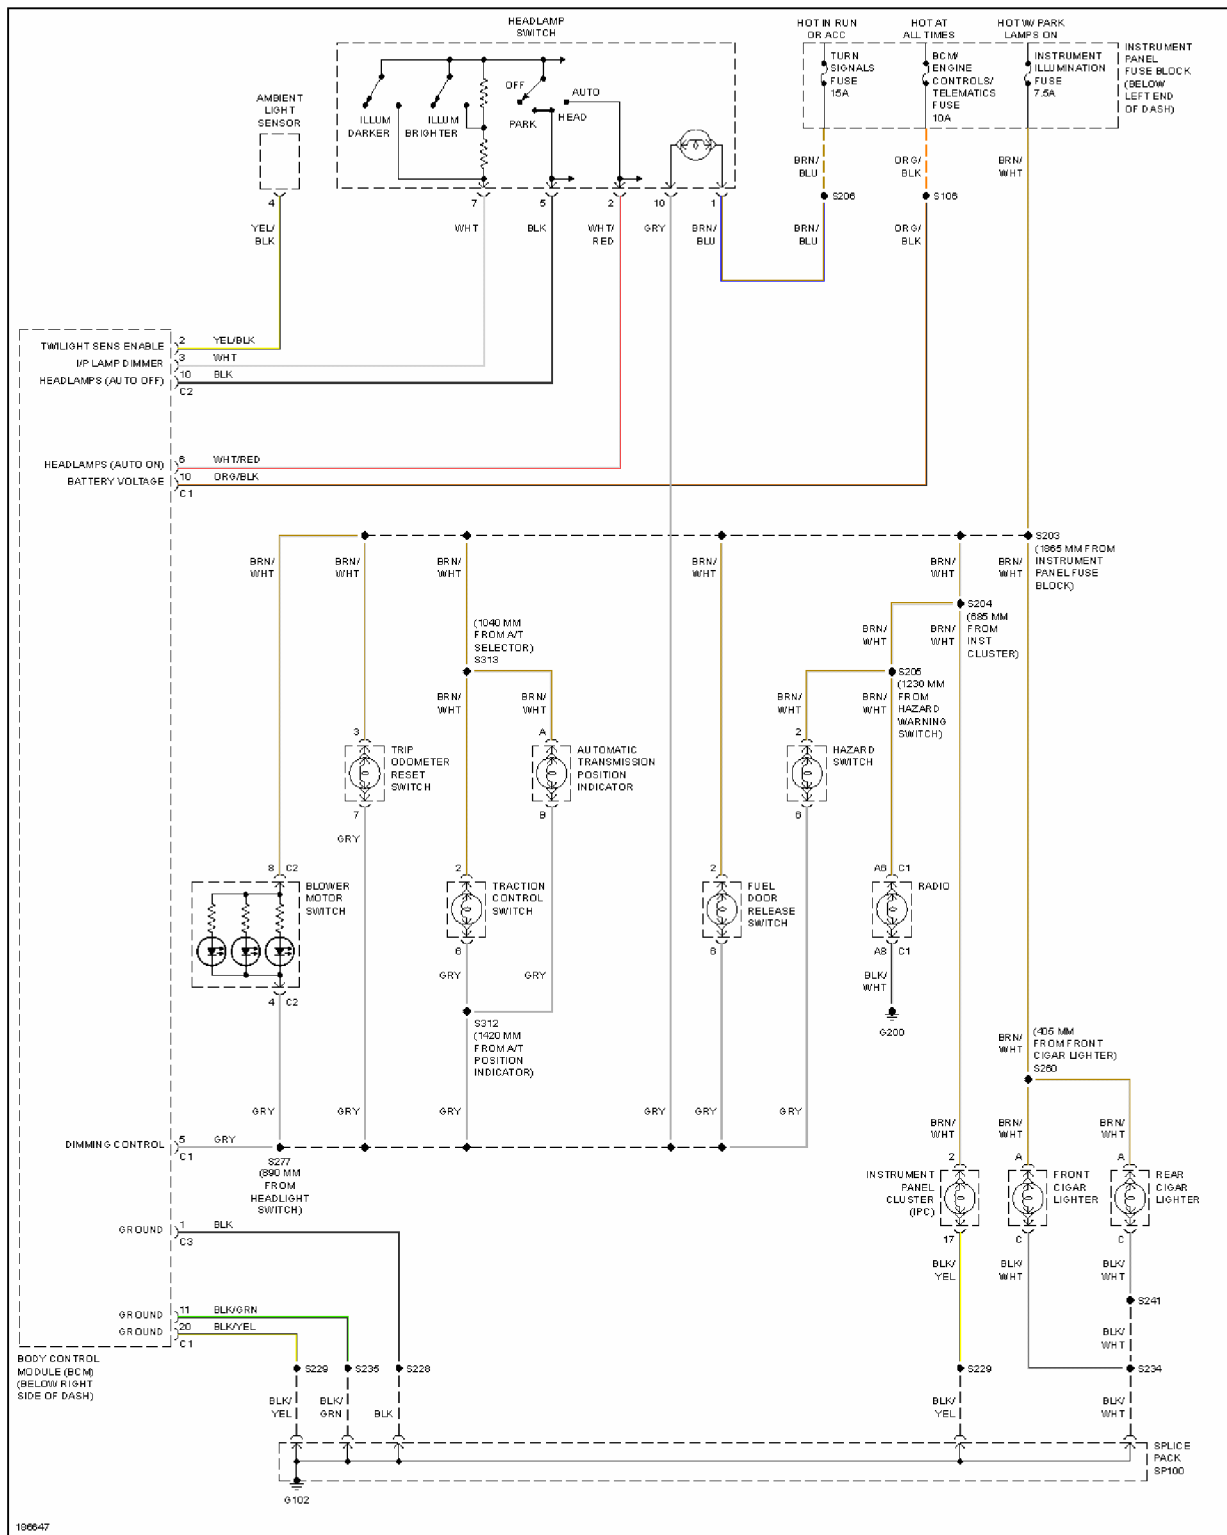

196647

Fig. 27: Instrument Illumination Circuit

MEMORY SYSTEMS

2004 Pontiac GTO

SYSTEM WIRING DIAGRAMS Pontiac - GTO

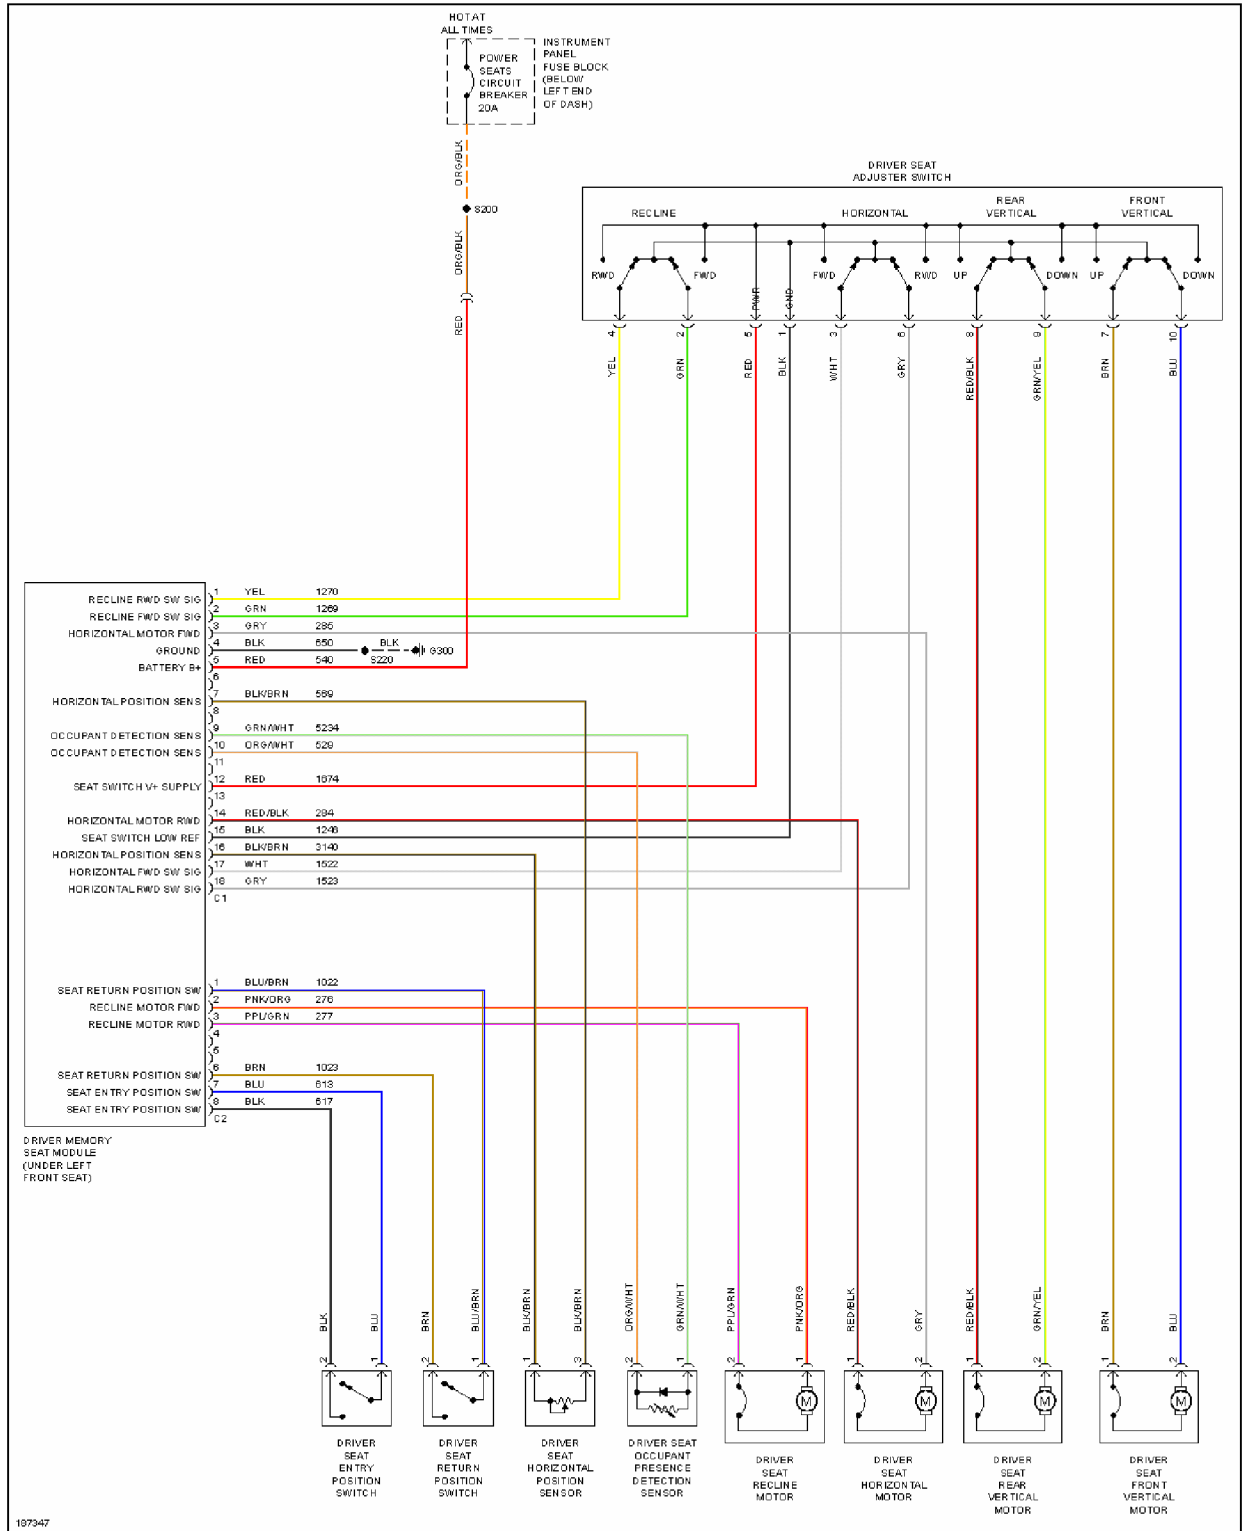


Fig. 28: Driver's Memory Seat Circuit

2004 Pontiac GTO

SYSTEM WIRING DIAGRAMS Pontiac - GTO

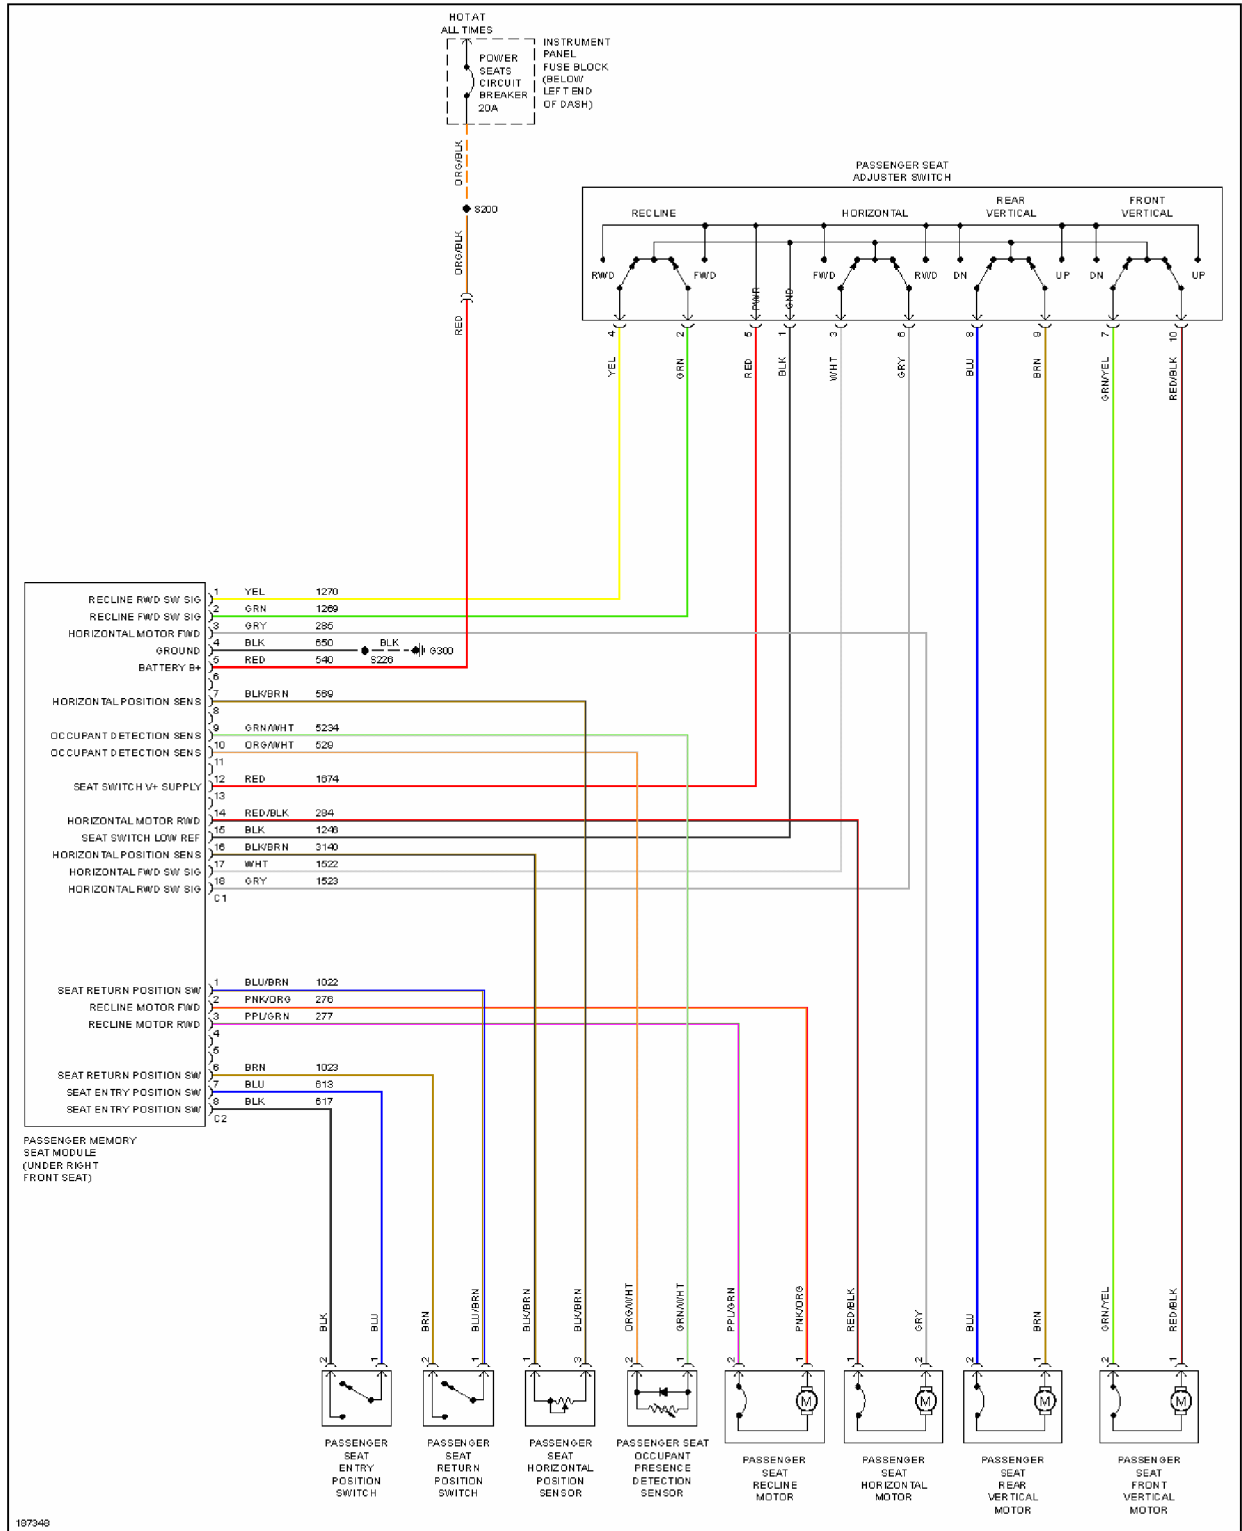


Fig. 29: Passenger's Memory Seat Circuit

POWER DISTRIBUTION

2004 Pontiac GTO

SYSTEM WIRING DIAGRAMS Pontiac - GTO

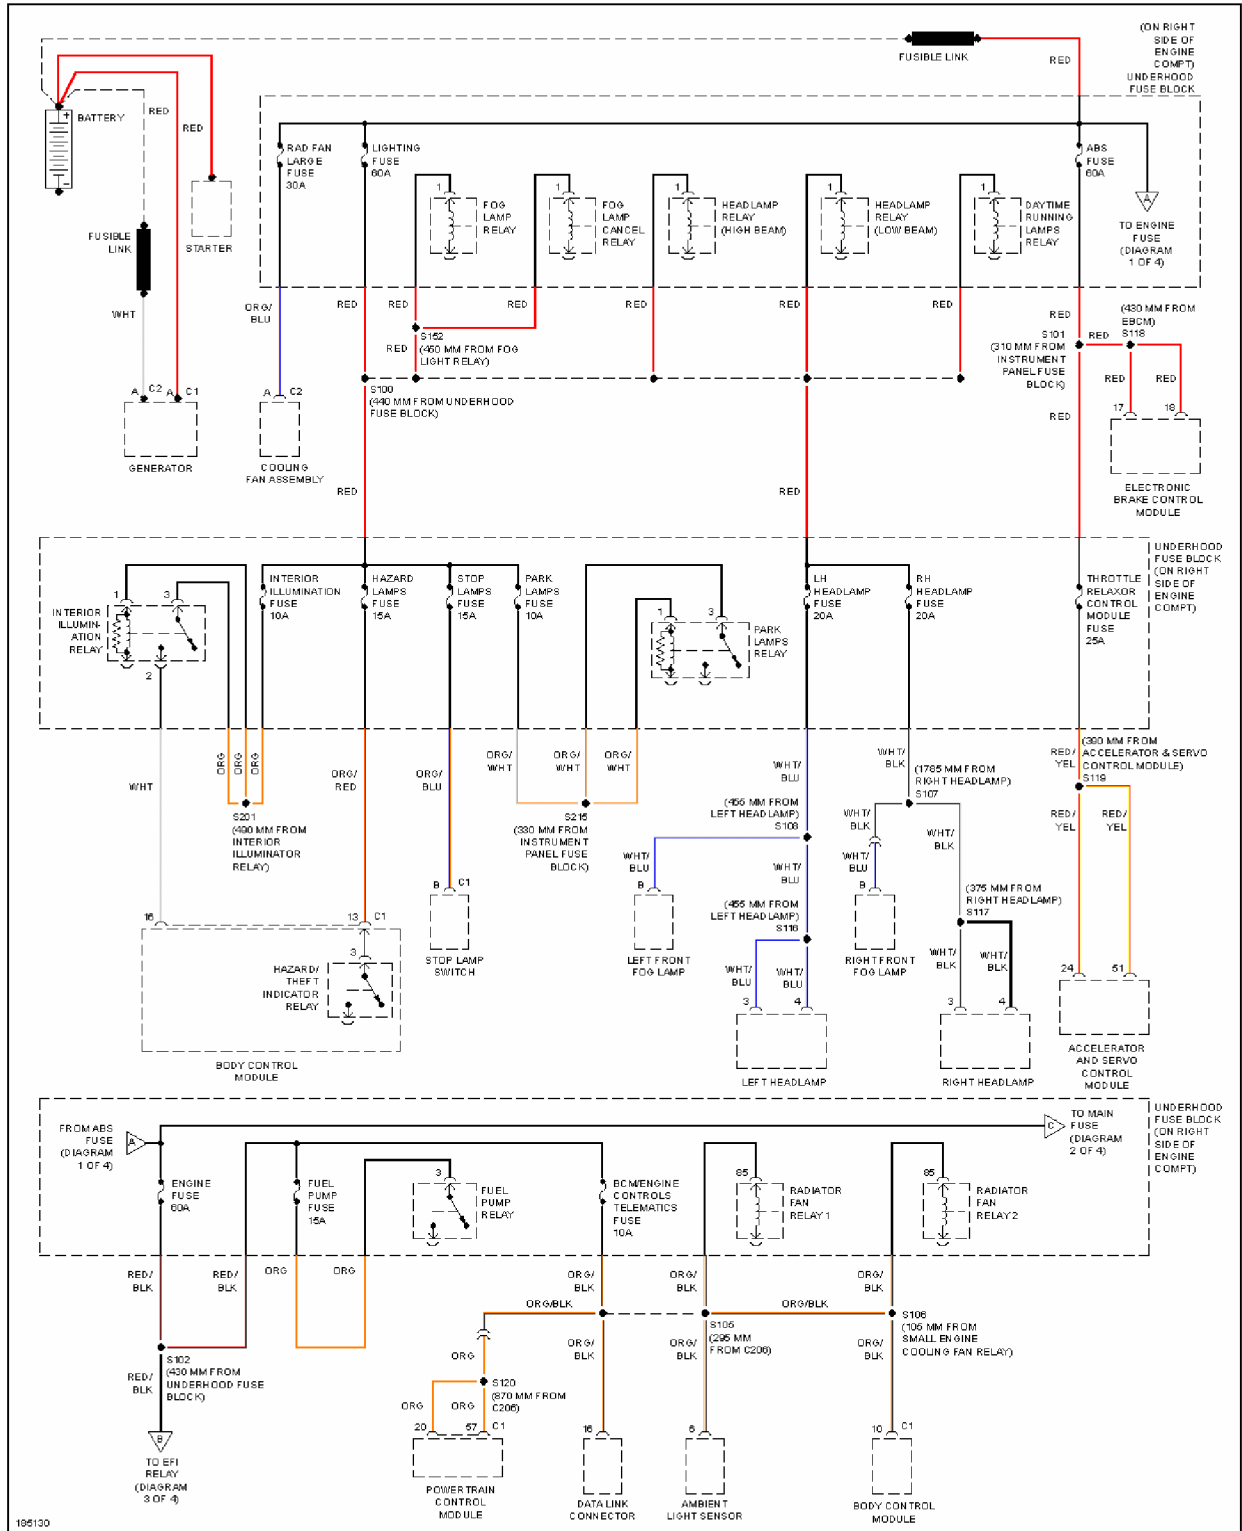


Fig. 30: Power Distribution Circuit (1 of 4)

2004 Pontiac GTO

SYSTEM WIRING DIAGRAMS Pontiac - GTO

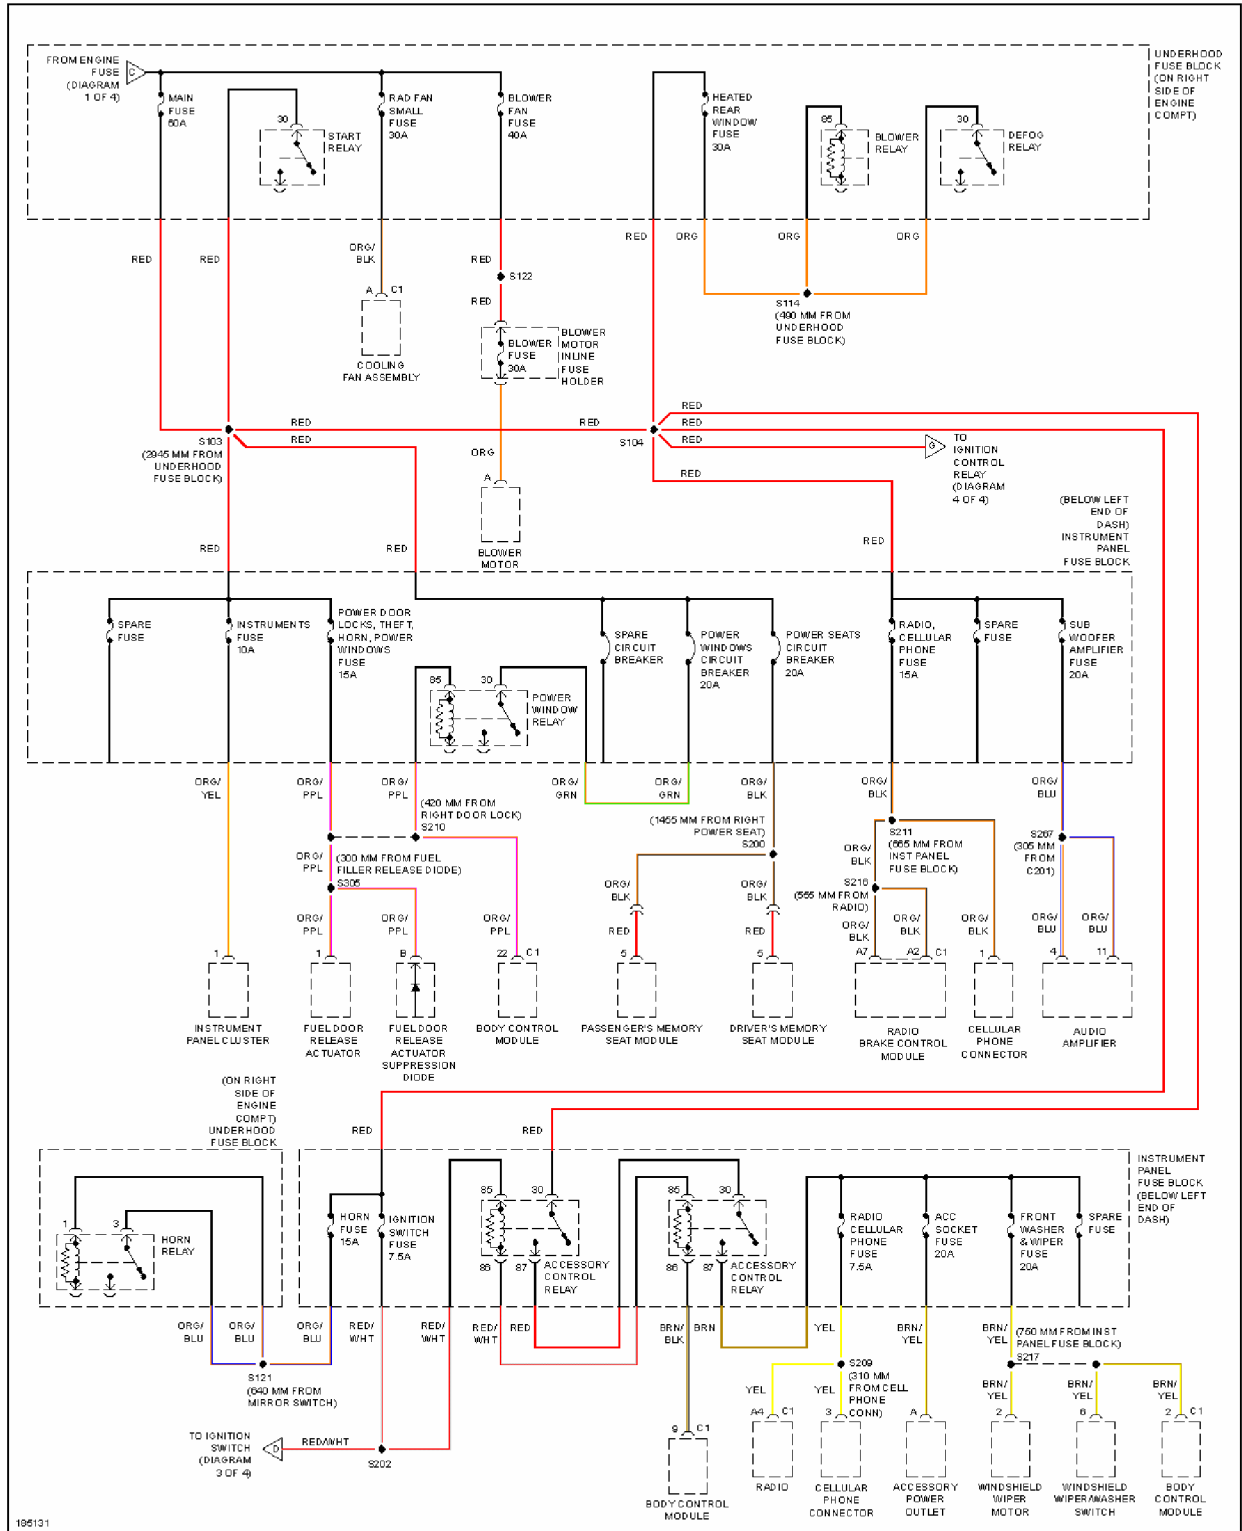


Fig. 31: Power Distribution Circuit (2 of 4)

2004 Pontiac GTO

SYSTEM WIRING DIAGRAMS Pontiac - GTO

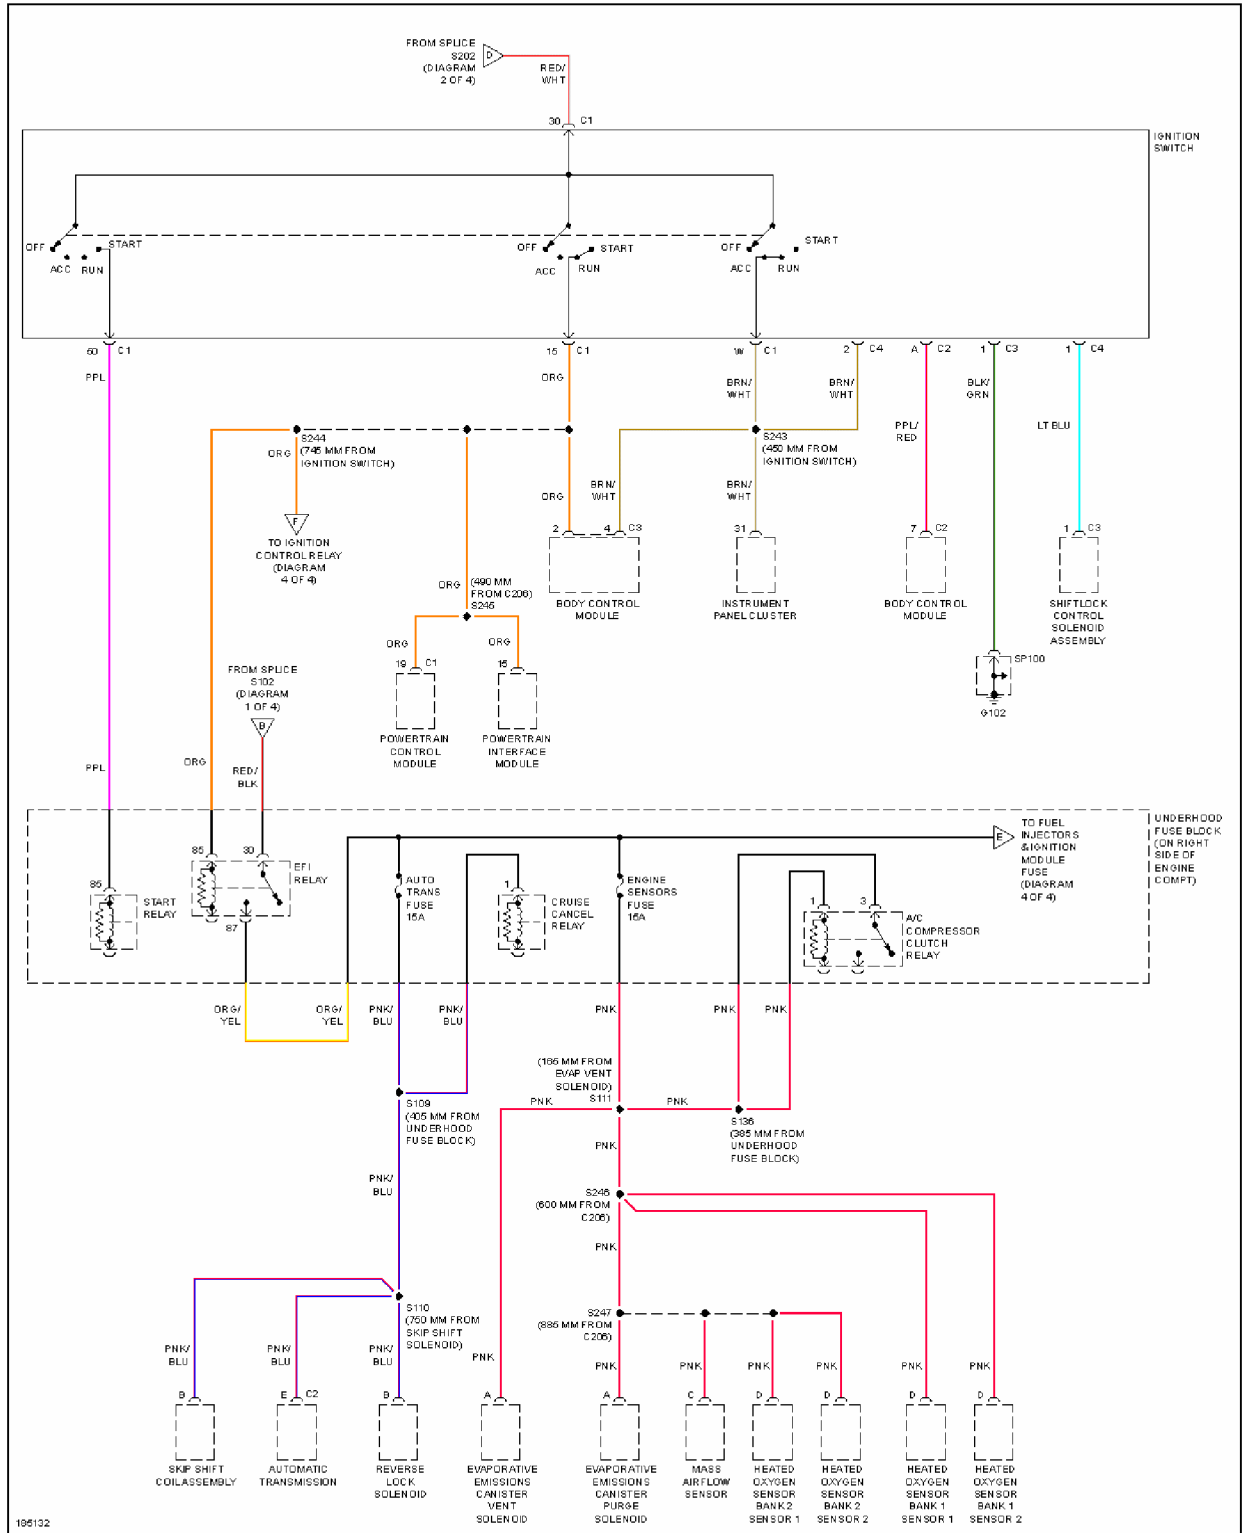


Fig. 32: Power Distribution Circuit (3 of 4)

2004 Pontiac GTO

SYSTEM WIRING DIAGRAMS Pontiac - GTO

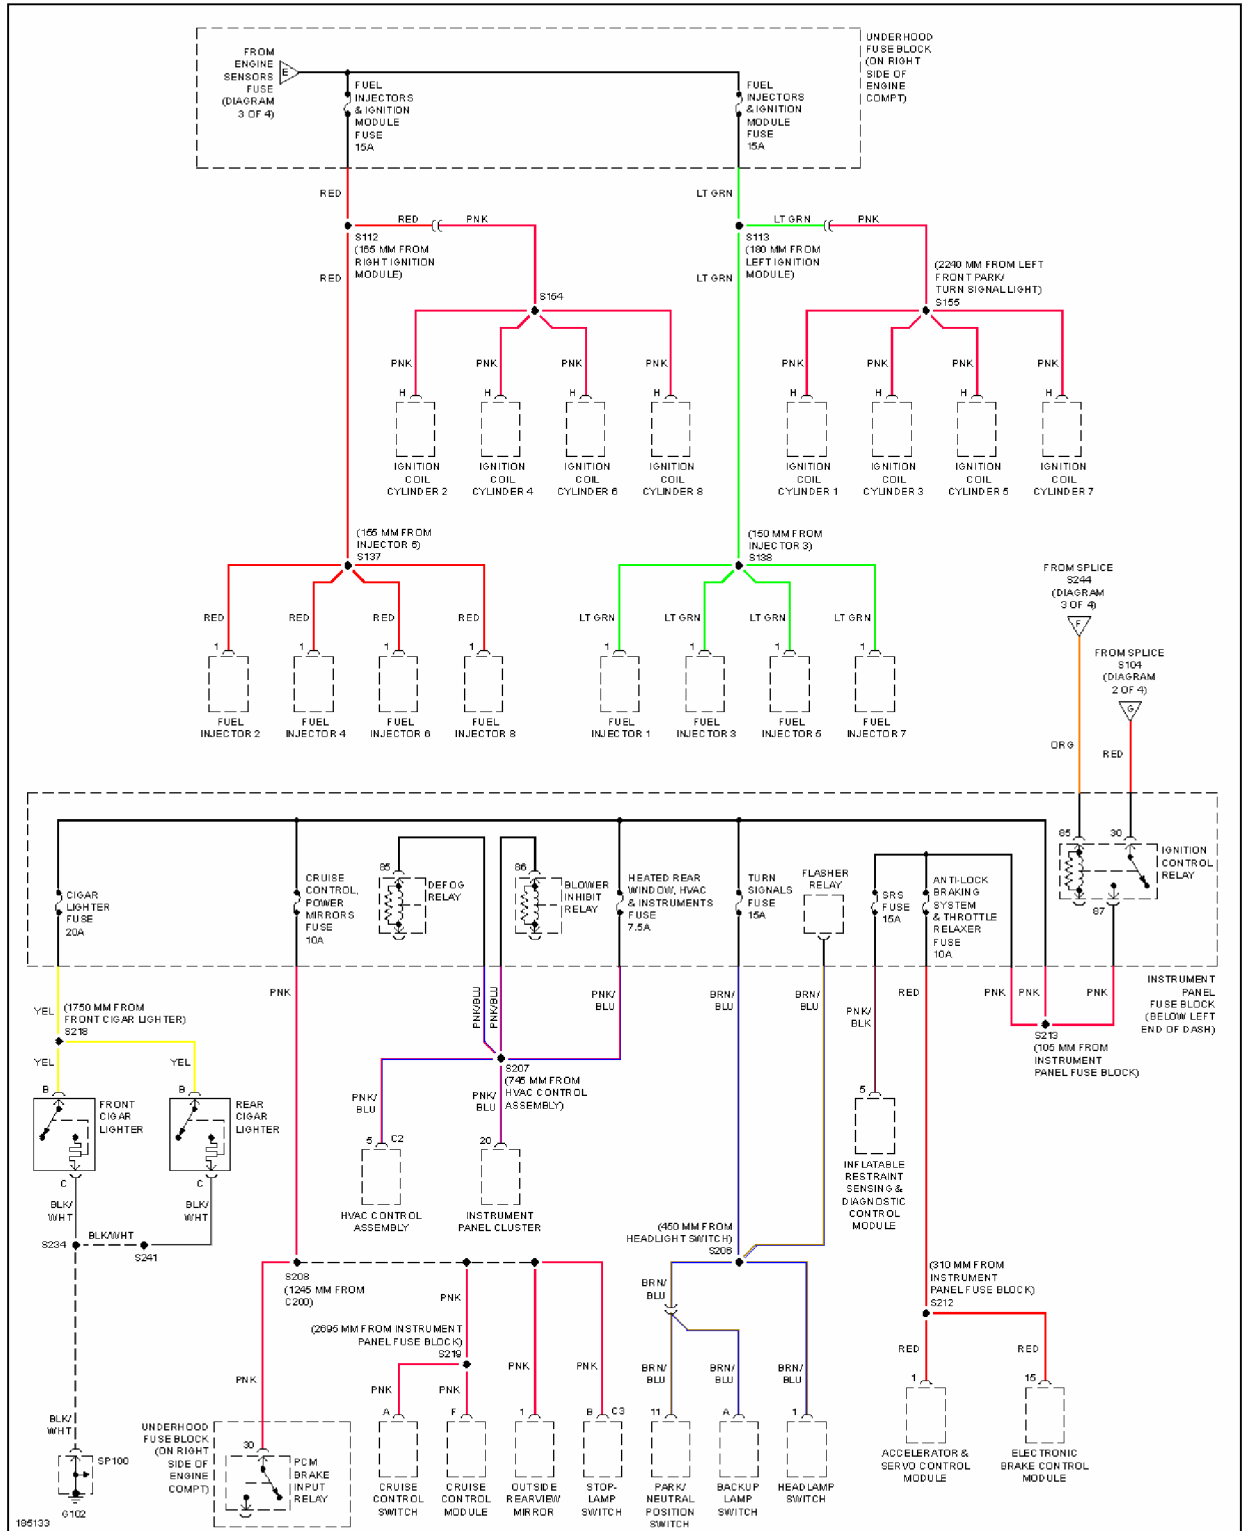


Fig. 33: Power Distribution Circuit (4 of 4)

POWER MIRRORS

2004 Pontiac GTO

SYSTEM WIRING DIAGRAMS Pontiac - GTO

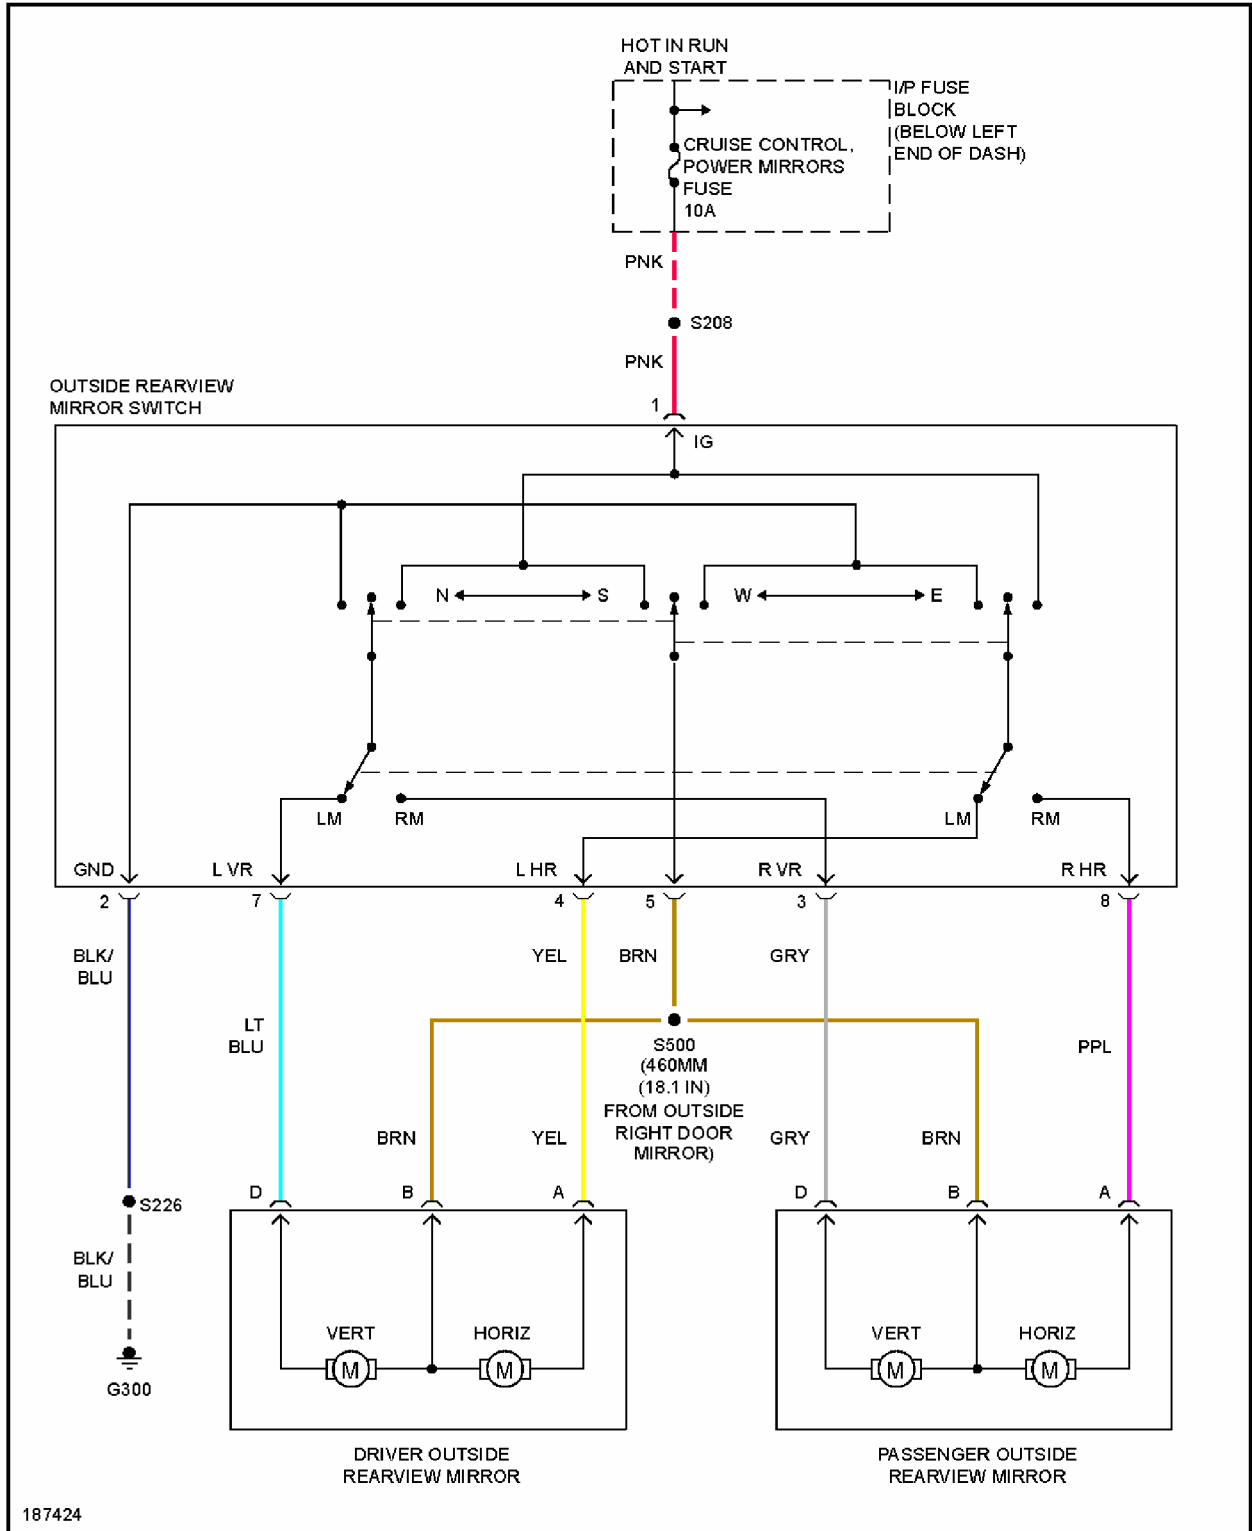


Fig. 34: Power Mirrors Circuit

POWER SEATS

2004 Pontiac GTO

SYSTEM WIRING DIAGRAMS Pontiac - GTO

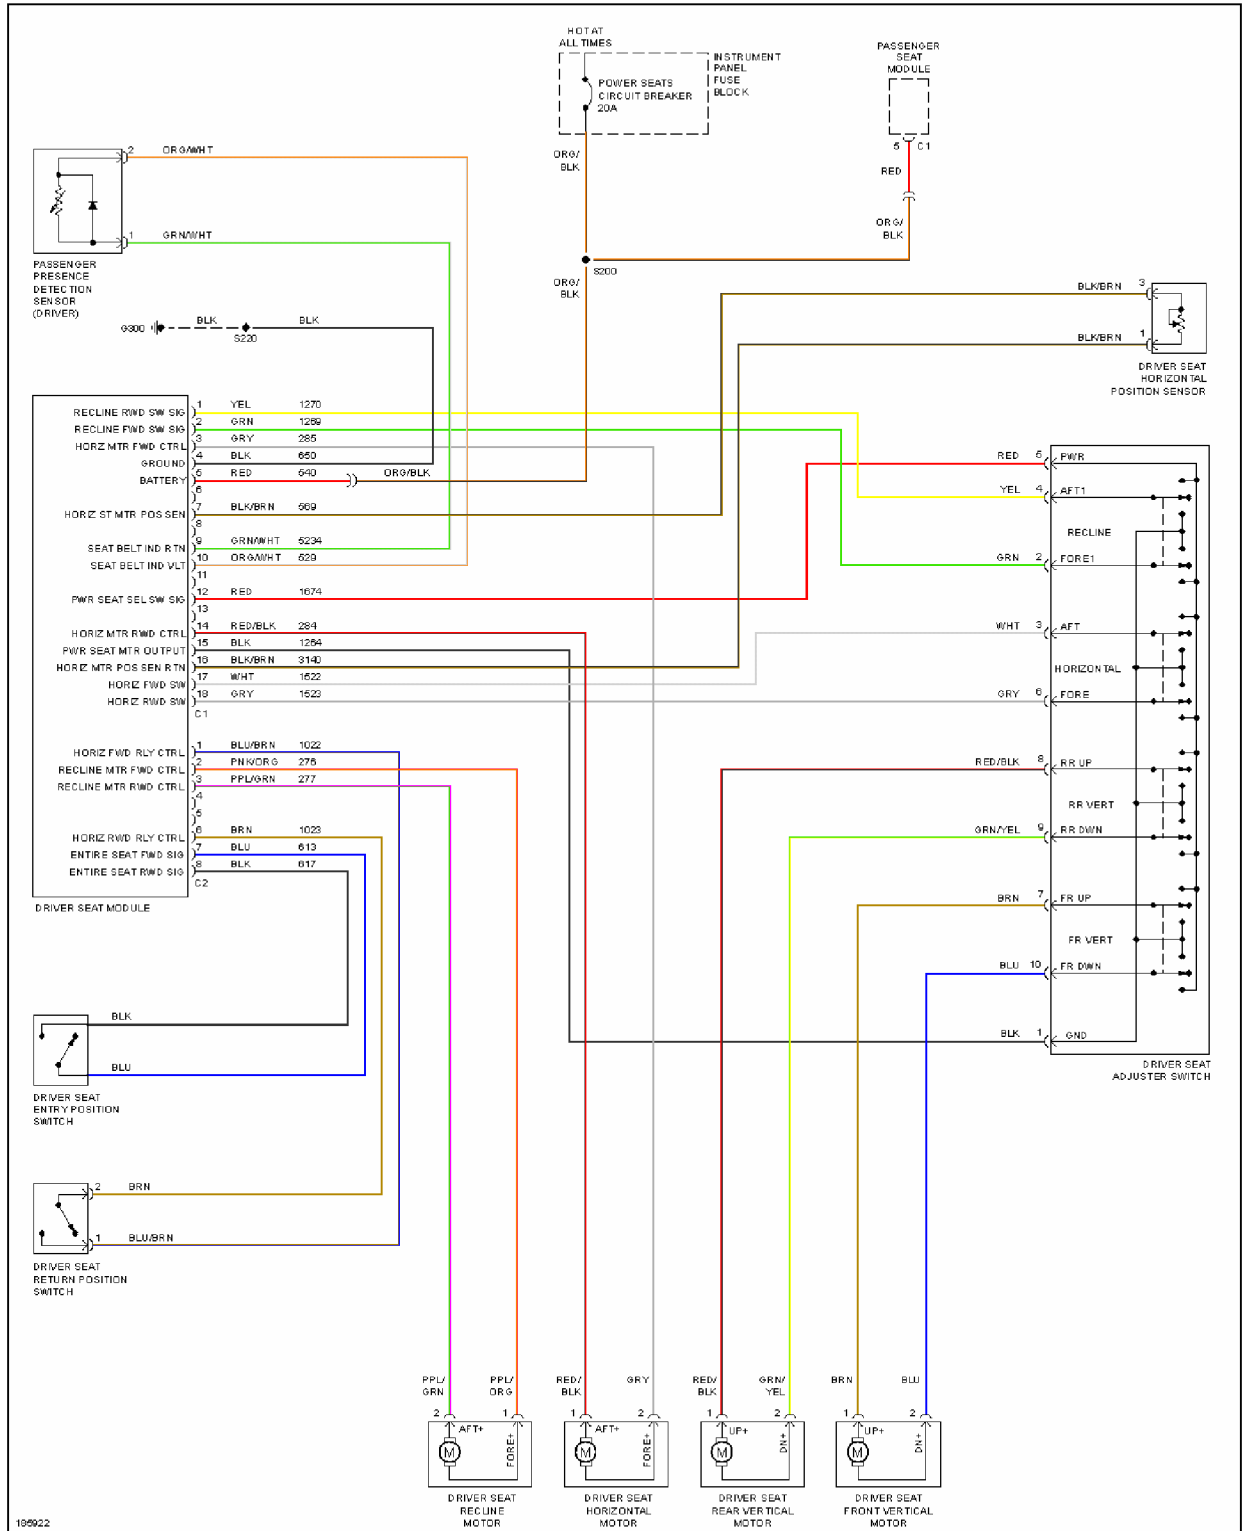


Fig. 35: Driver Power Seat Circuit

2004 Pontiac GTO

SYSTEM WIRING DIAGRAMS Pontiac - GTO

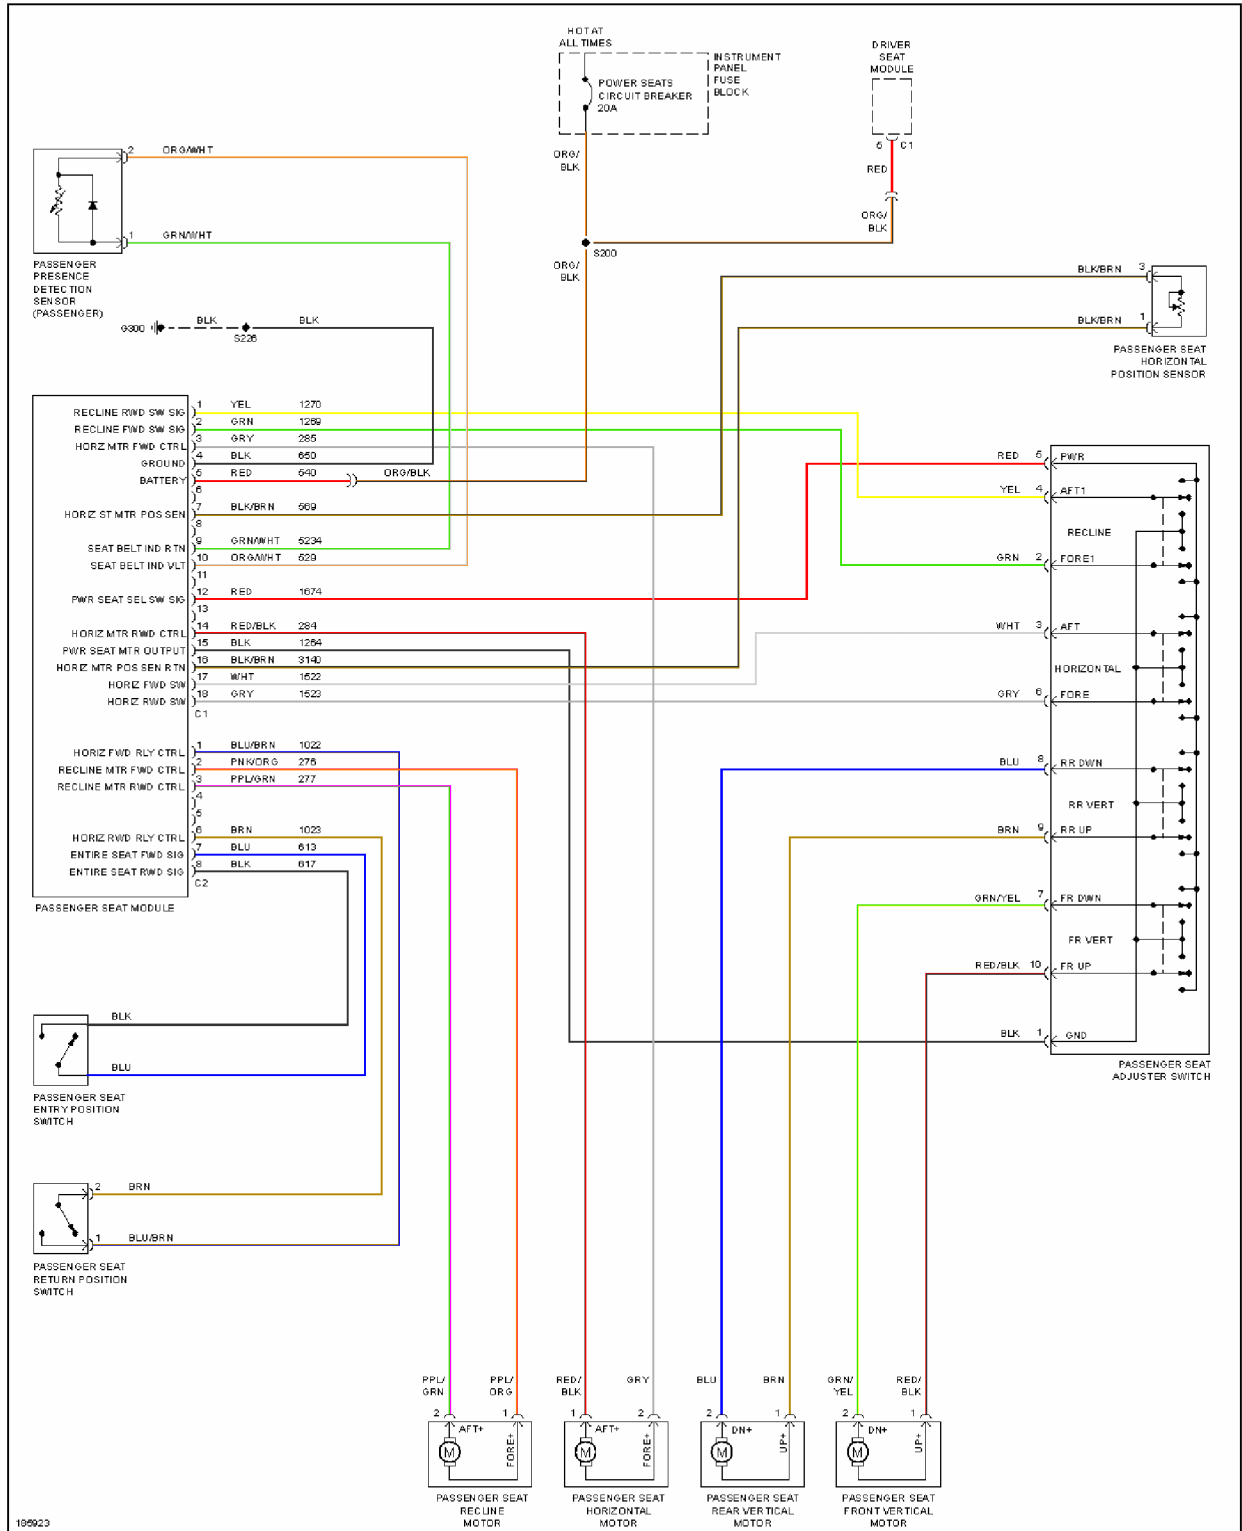


Fig. 36: Passenger Power Seat Circuit

POWER WINDOWS

2004 Pontiac GTO

SYSTEM WIRING DIAGRAMS Pontiac - GTO

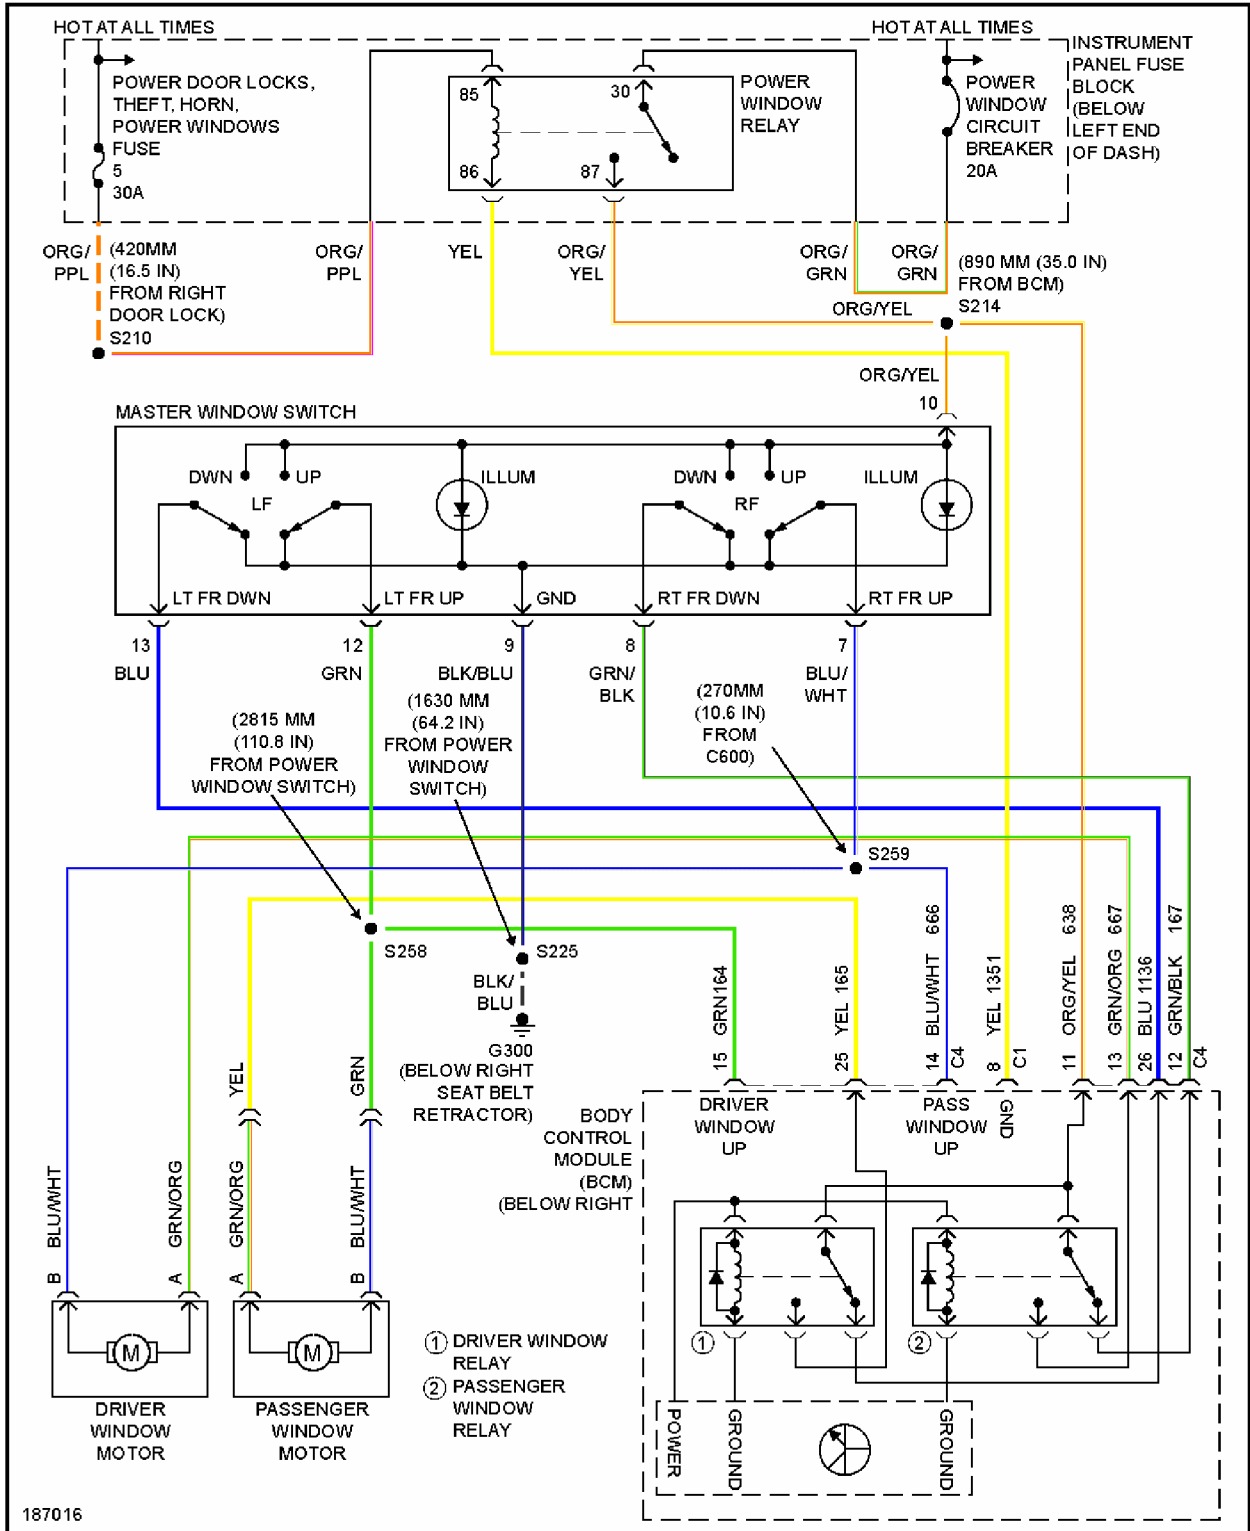


Fig. 37: Power Windows Circuit

RADIO

2004 Pontiac GTO

SYSTEM WIRING DIAGRAMS Pontiac - GTO

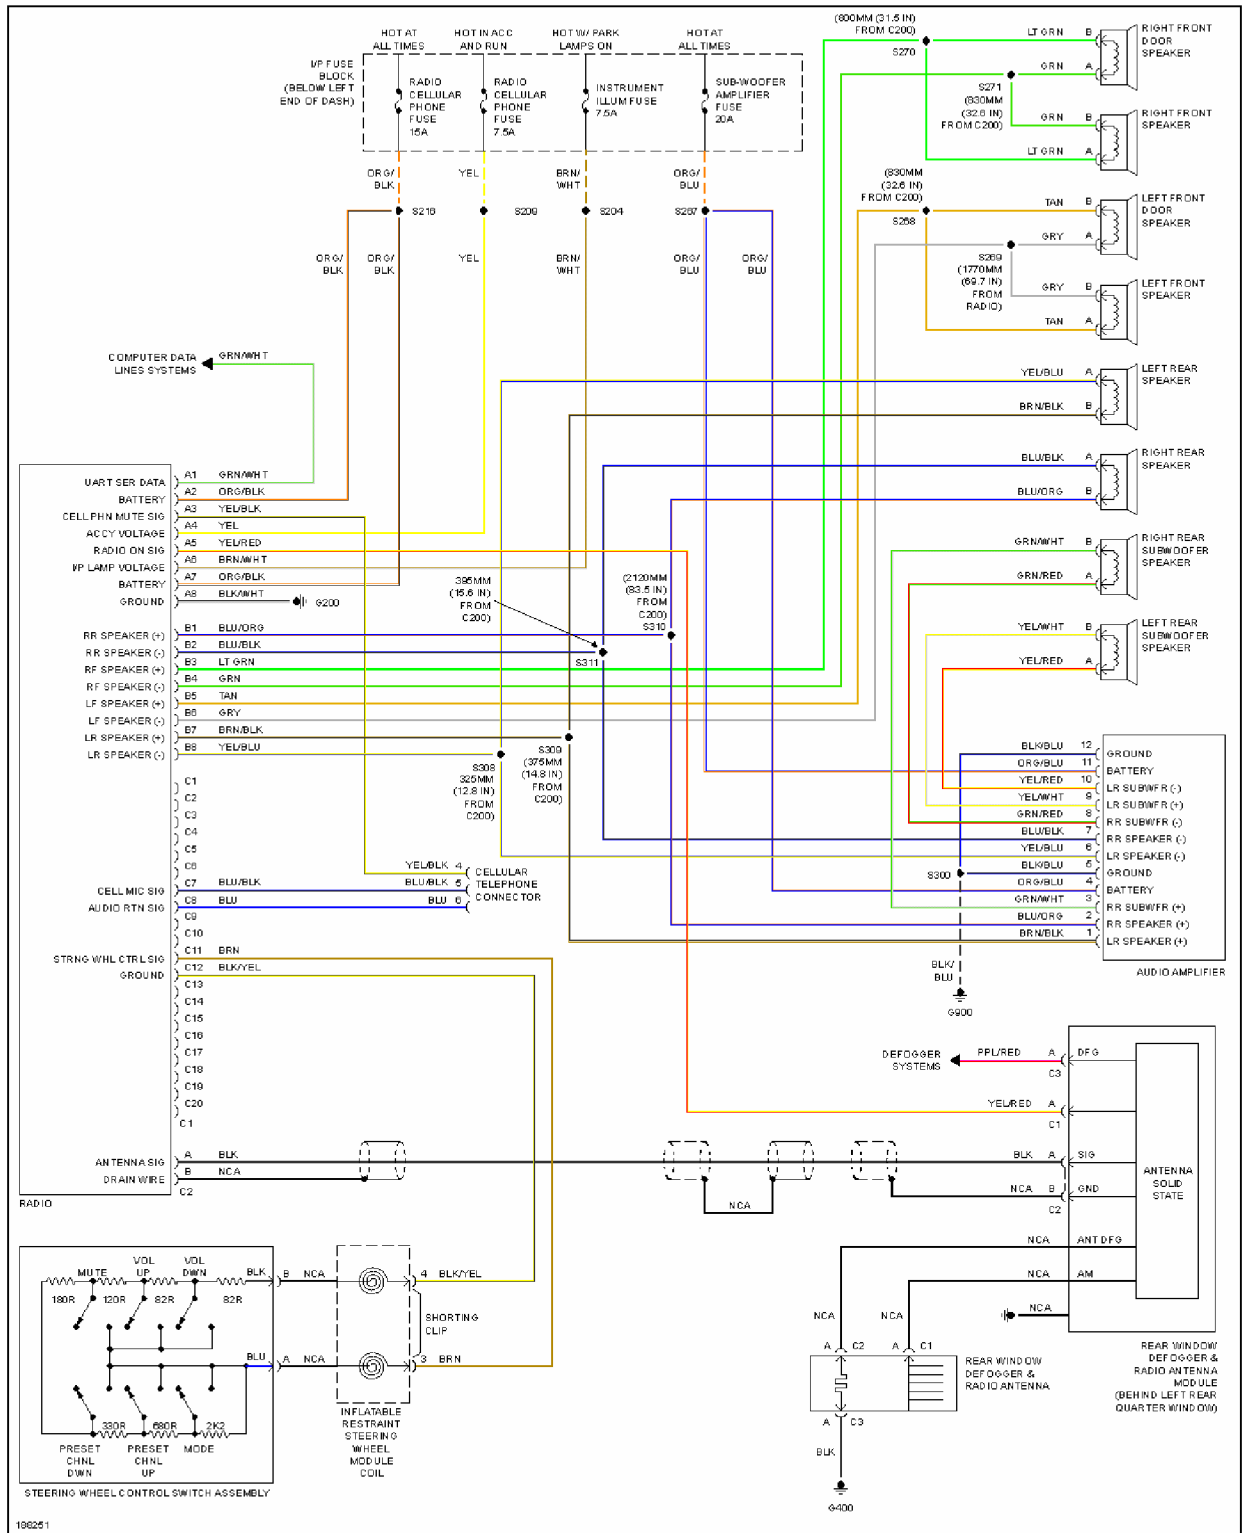


Fig. 38: Radio Circuit

SHIFT INTERLOCK

2004 Pontiac GTO

SYSTEM WIRING DIAGRAMS Pontiac - GTO

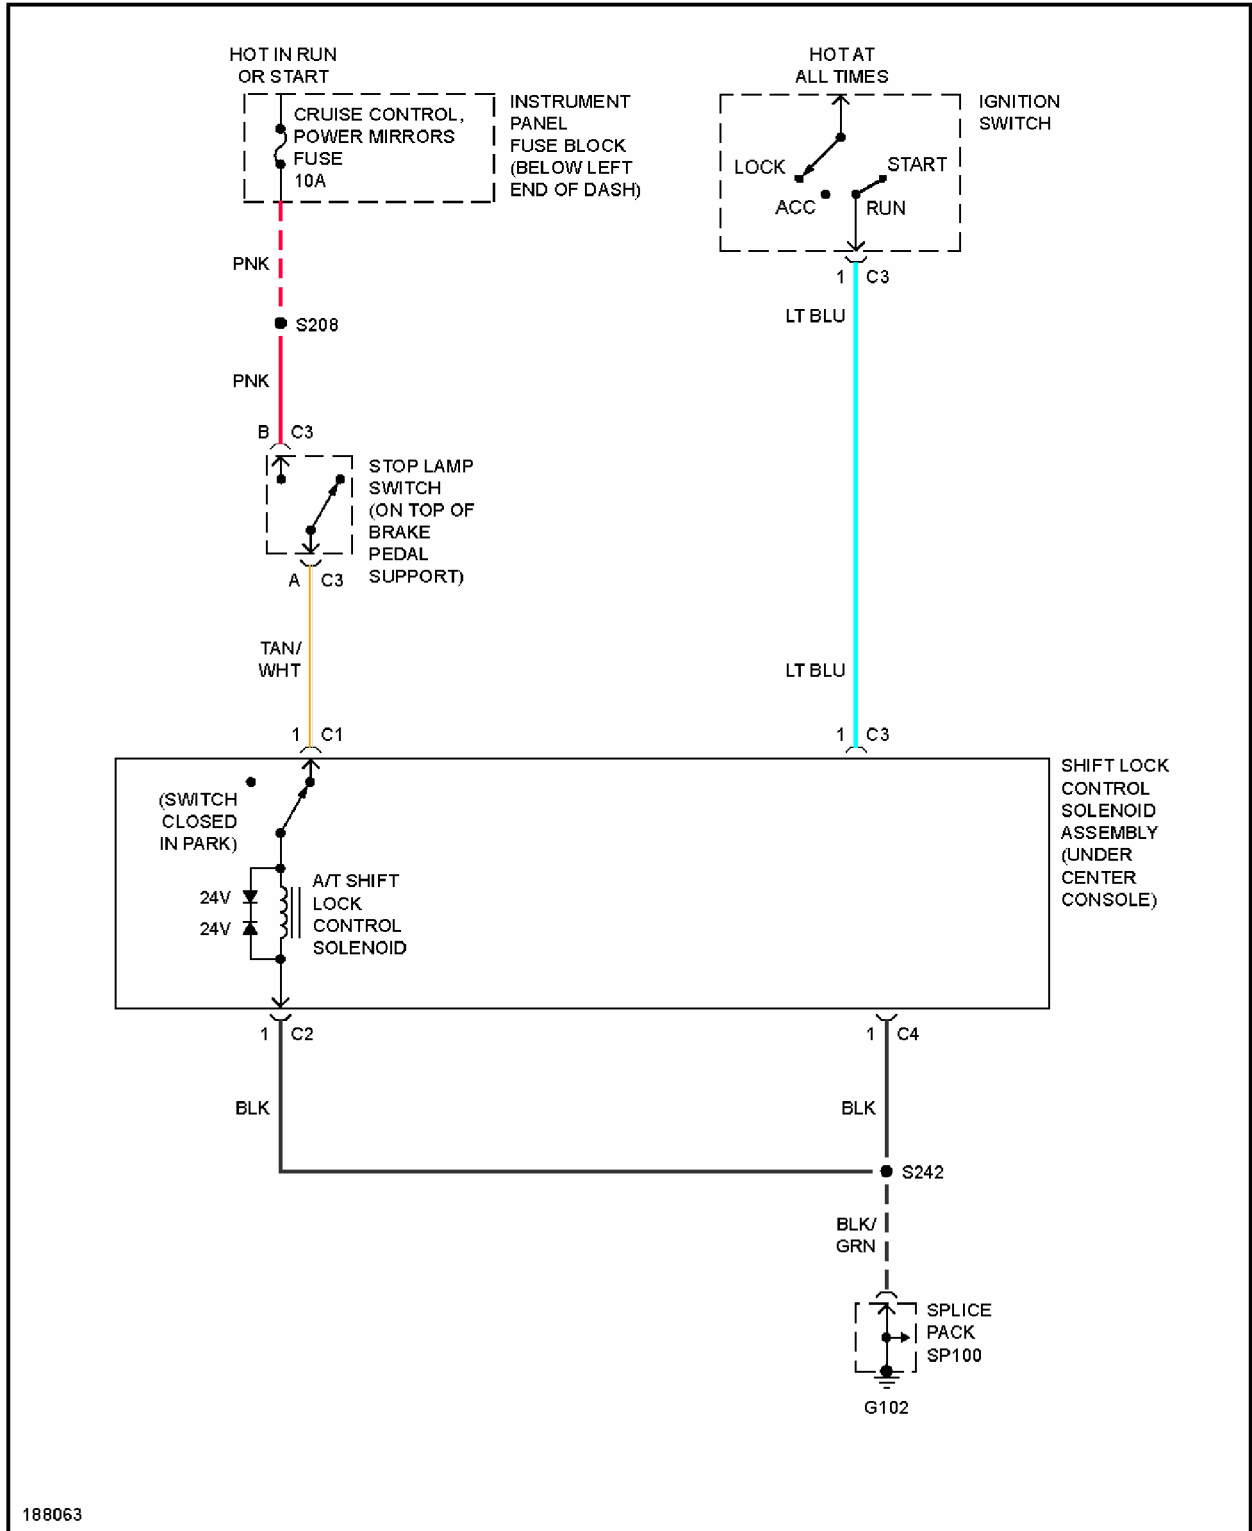


Fig. 39: Shift Interlock Circuit

STARTING/CHARGING

2004 Pontiac GTO

SYSTEM WIRING DIAGRAMS Pontiac - GTO

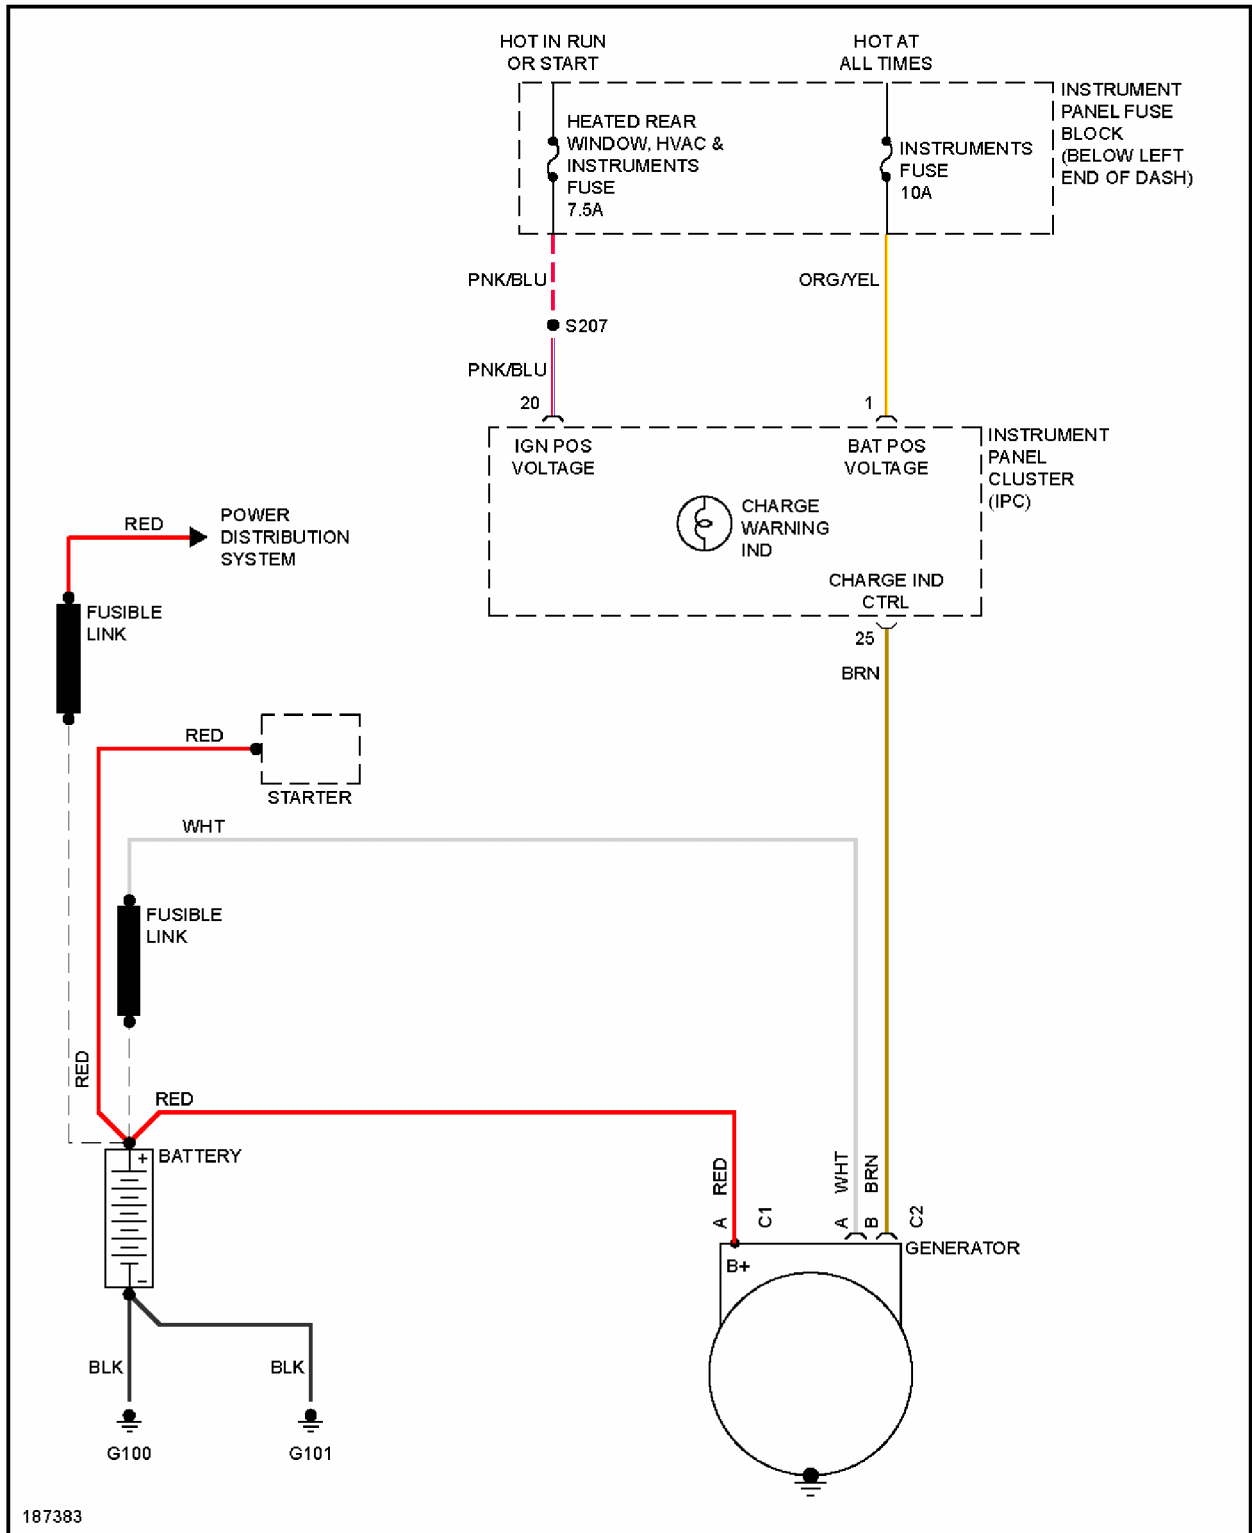


Fig. 40: Charging Circuit

2004 Pontiac GTO

SYSTEM WIRING DIAGRAMS Pontiac - GTO

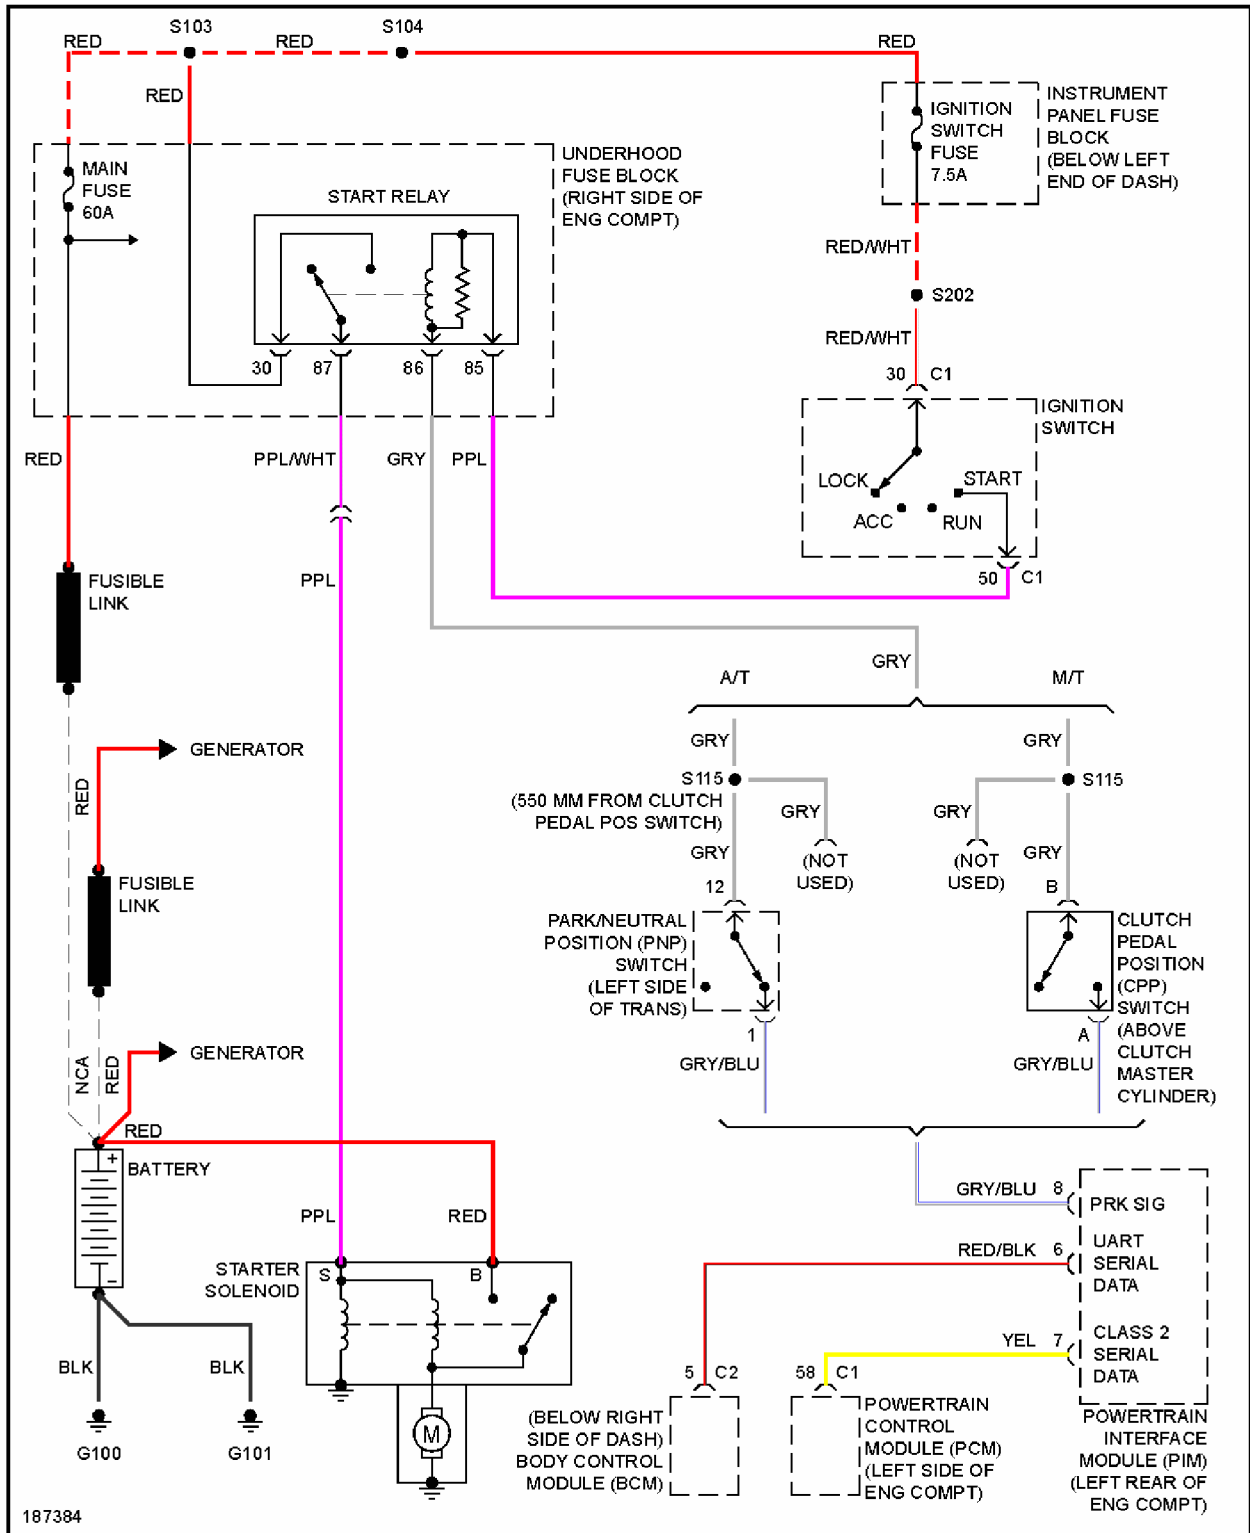


Fig. 41: Starting Circuit

SUPPLEMENTAL RESTRAINTS

2004 Pontiac GTO

SYSTEM WIRING DIAGRAMS Pontiac - GTO

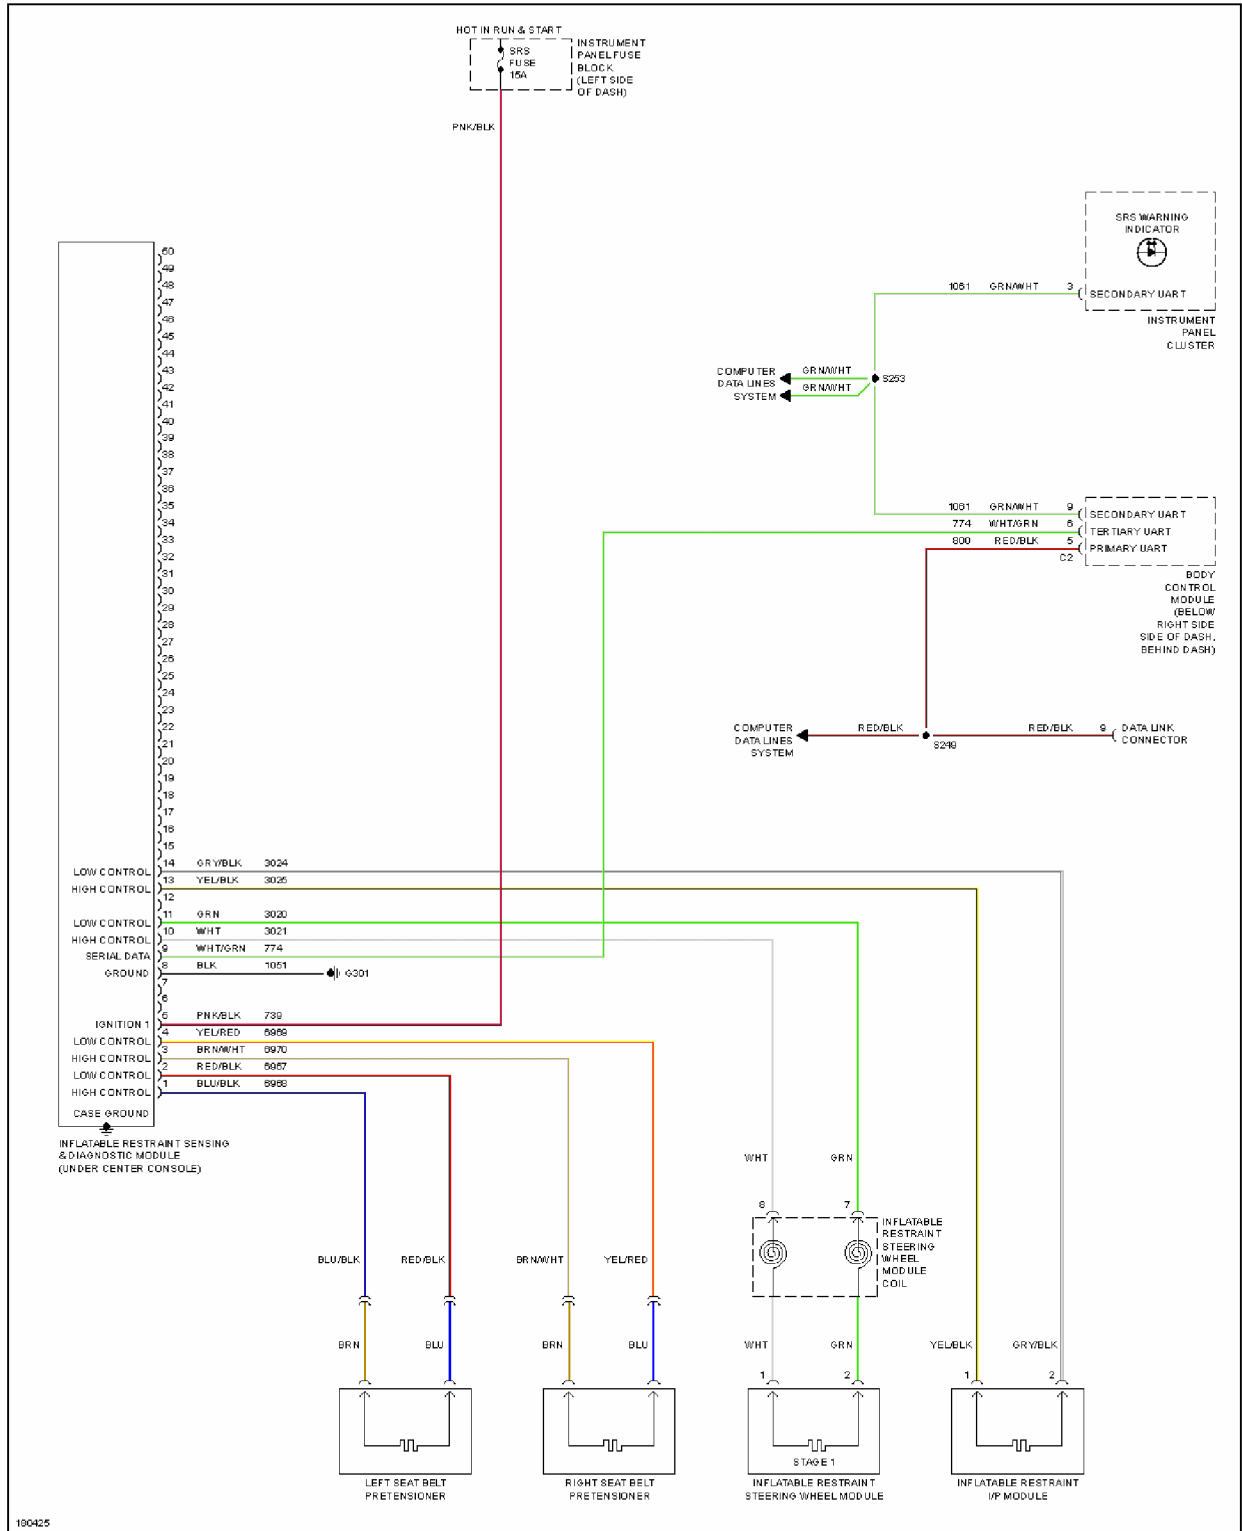


Fig. 42: Supplemental Restraints Circuit

TRANSMISSION

2004 Pontiac GTO

SYSTEM WIRING DIAGRAMS Pontiac - GTO

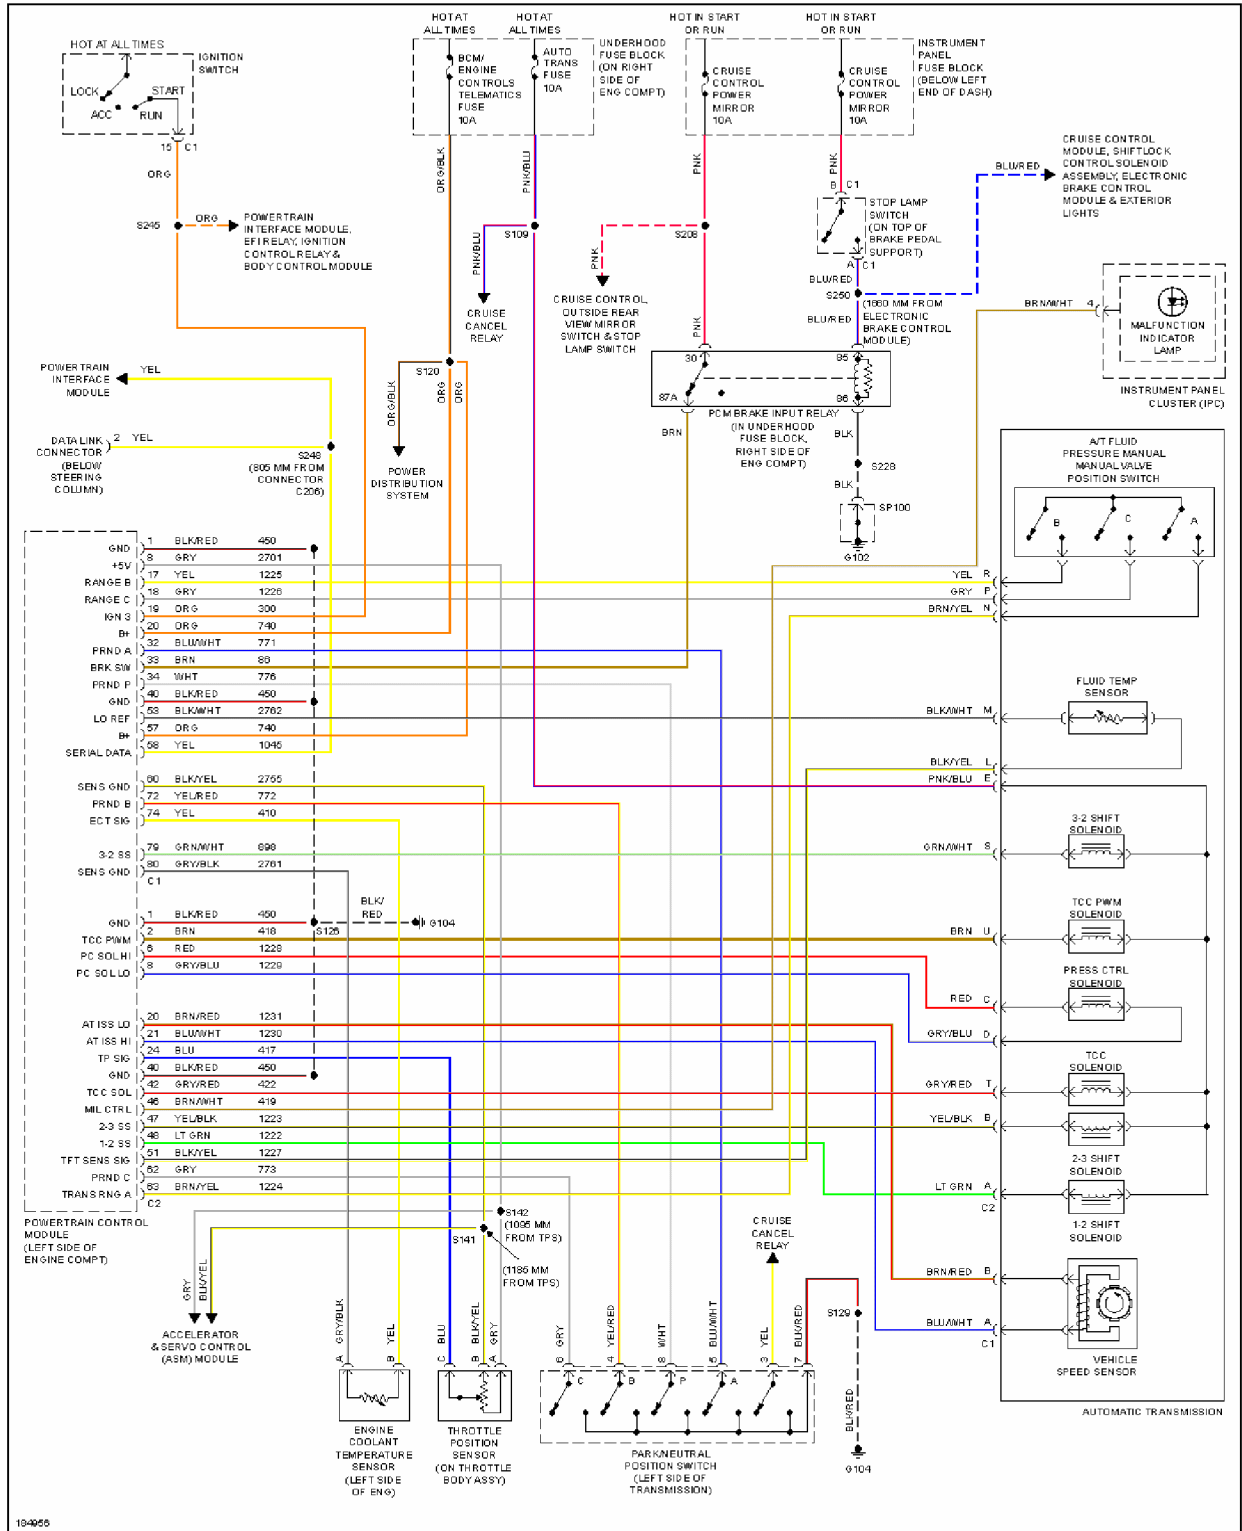


Fig. 43: A/T Circuit

2004 Pontiac GTO

SYSTEM WIRING DIAGRAMS Pontiac - GTO


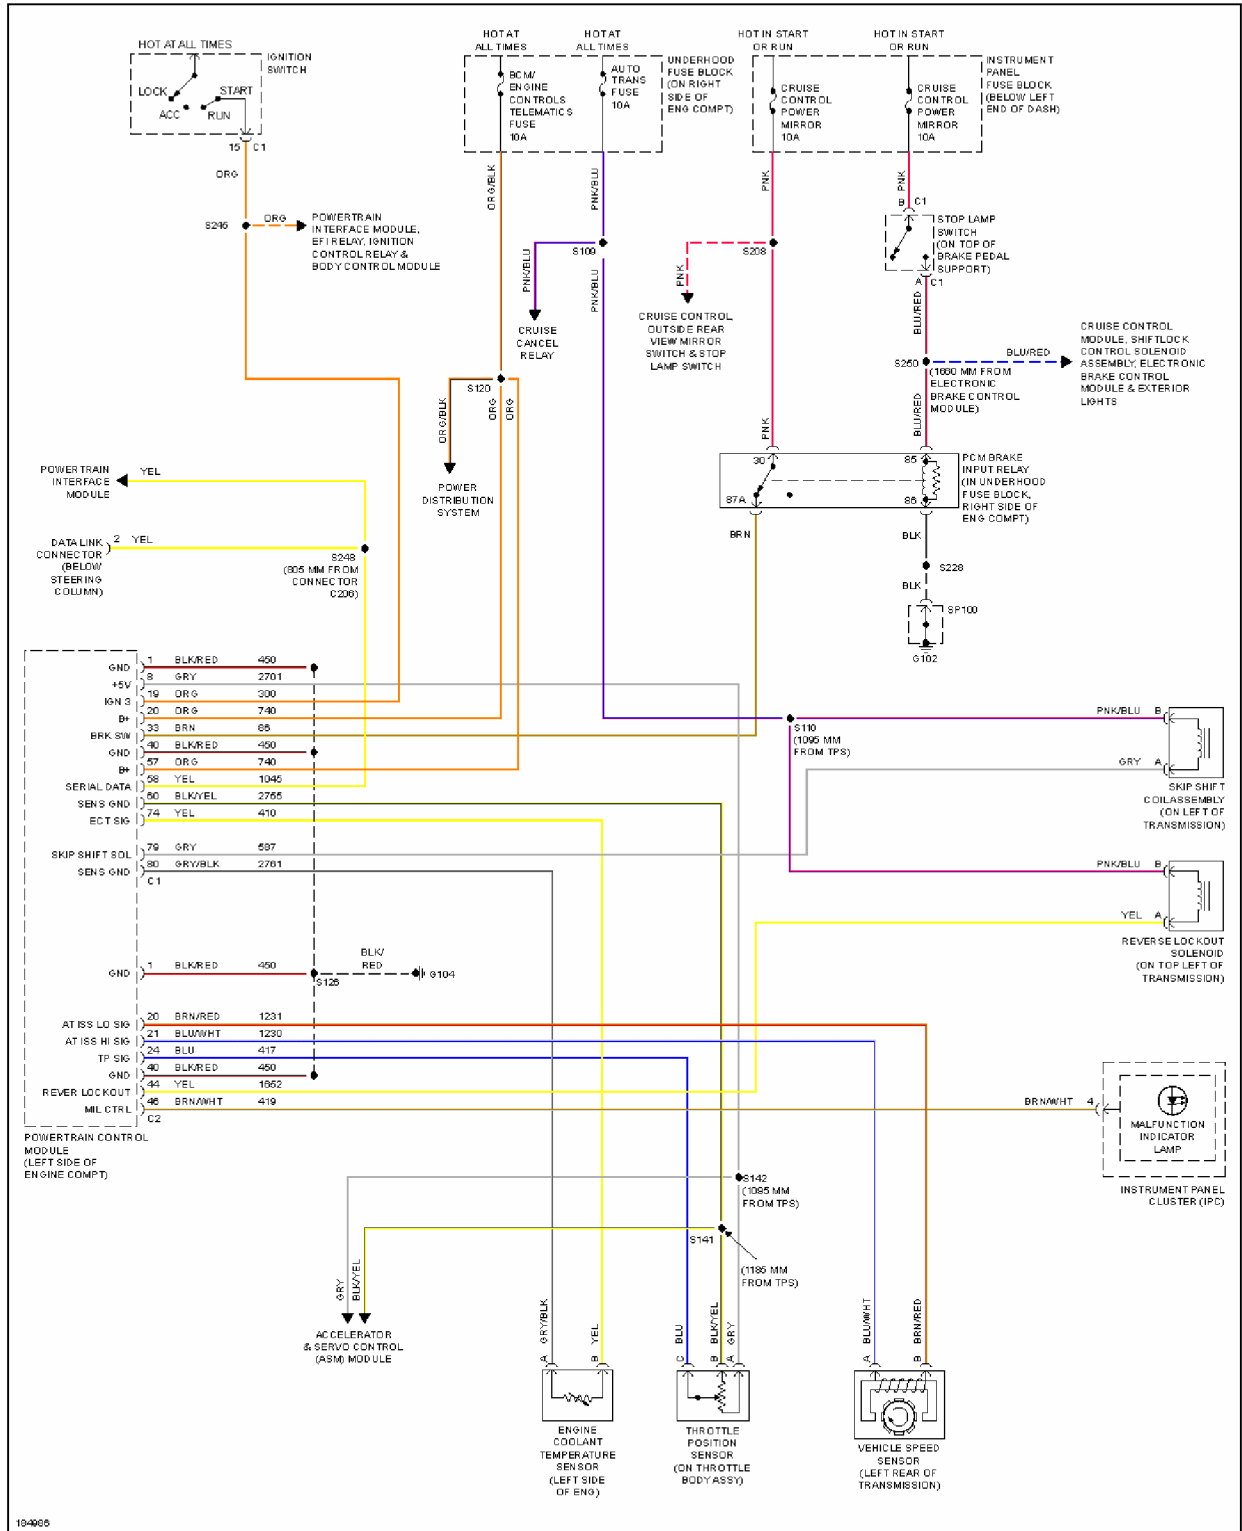


Fig. 44: M/T Circuit

TRUNK, TAILGATE, FUEL DOOR

2004 Pontiac GTO

SYSTEM WIRING DIAGRAMS Pontiac - GTO

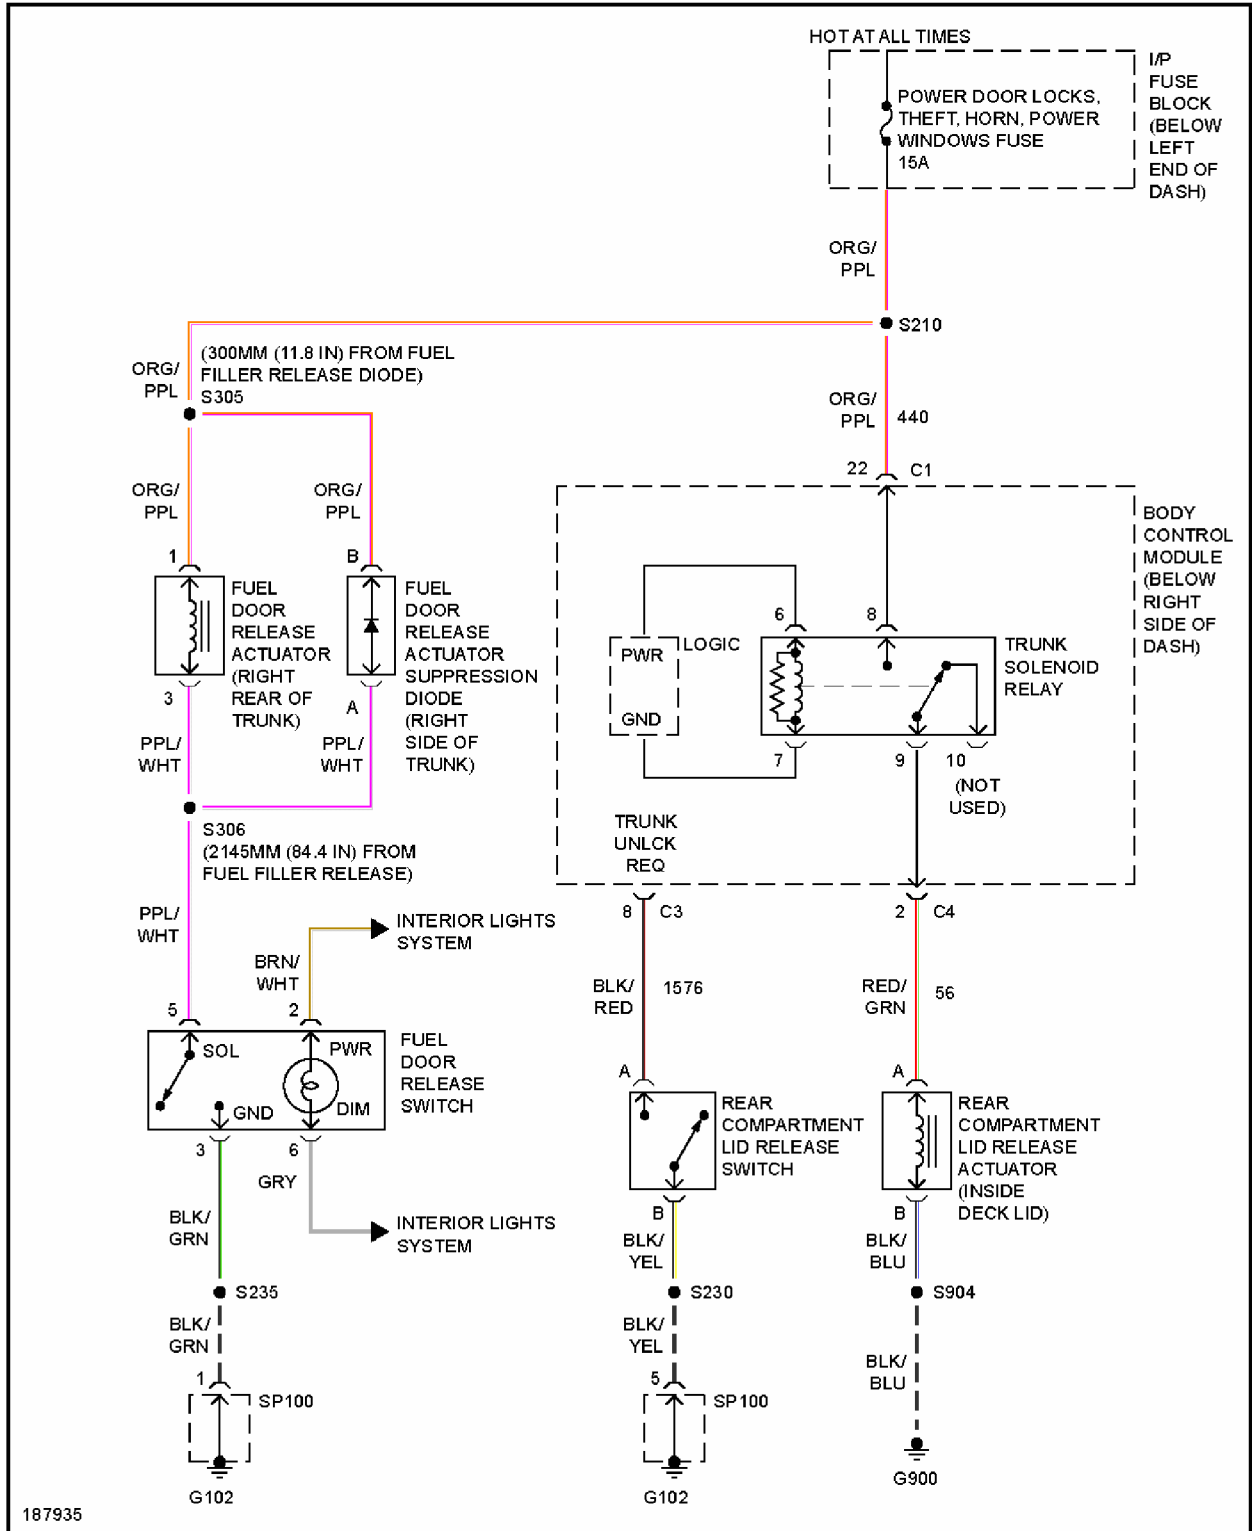


187935

Fig. 45: Trunk, Tailgate, Fuel Door Circuit

WARNING SYSTEMS

2004 Pontiac GTO

SYSTEM WIRING DIAGRAMS Pontiac - GTO

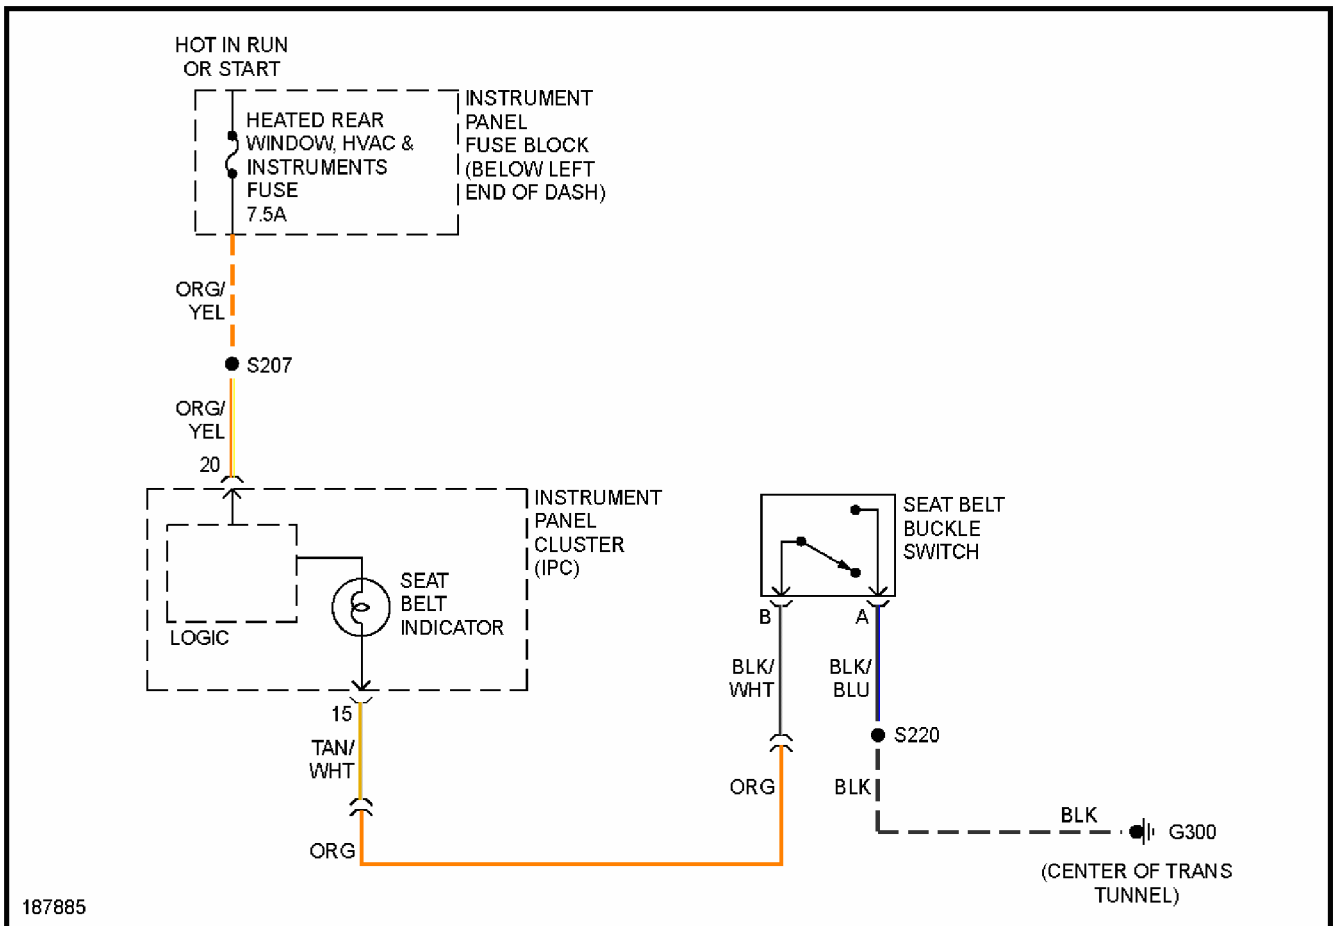

187885

Fig. 46: Warning Systems Circuit

WIPER/WASHER

2004 Pontiac GTO

SYSTEM WIRING DIAGRAMS Pontiac - GTO

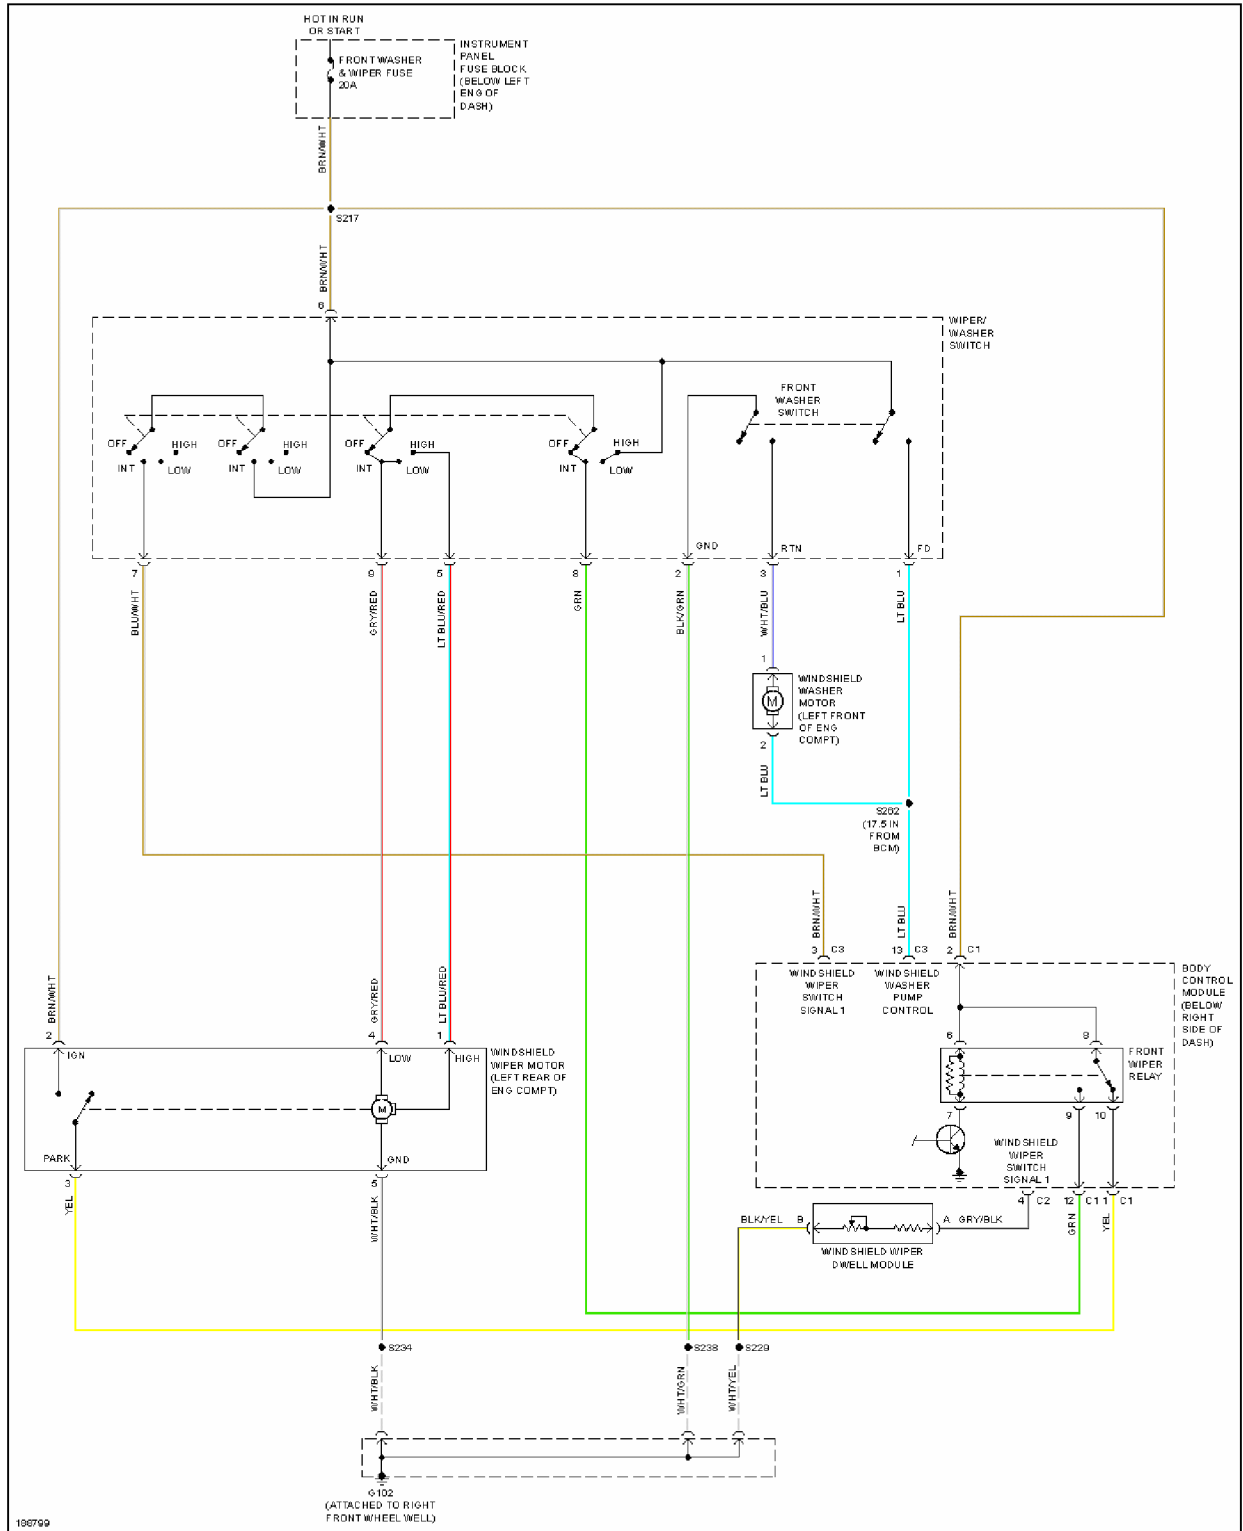


Fig. 47: Wiper/Washer Circuit