



Fuse Block: Application and ID

Fuse Block - Underhood (Bottom) Fuse Application



| | | |
|------------|-----|---|
| A/C CRUISE | 15A | <ul style="list-style-type: none"> A/C compressor clutch relay Cruise control cancel switch Cruise control module (CCM) Cruise control release switch Multifunction turn signal lever |
| ENG CTRL | 15A | <ul style="list-style-type: none"> Automatic transmission (V6 VIN K) Ignition control module (ICM) Evaporative emission (EVAP) canister purge solenoid Evaporative emission (EVAP) canister vent solenoid |
| ENG SEN | 20A | <ul style="list-style-type: none"> Heated oxygen sensor (HO2S) Manual transmission (V8 VIN G) Mass air flow (MAF) sensor Stop lamp switch |
| INJ 1 | 15A | <ul style="list-style-type: none"> Fuel injectors (V6 VIN K) Fuel injectors, bank 1 (V8 VIN G) Ignition coils/modules, bank 1 (V8 VIN G) |
| INJ 2 | 15A | <ul style="list-style-type: none"> Fuel injectors, bank 2 (V8 VIN G) Ignition coils/modules, bank 2 (V8 VIN G) |
| PCM IGN | 15A | Powertrain control module (PCM) |
| STRTR | 15A | <ul style="list-style-type: none"> Clutch pedal position (CPP) switch Park/Neutral position (PNP) switch Instrument panel cluster (IPC) Powertrain control module (PCM) |