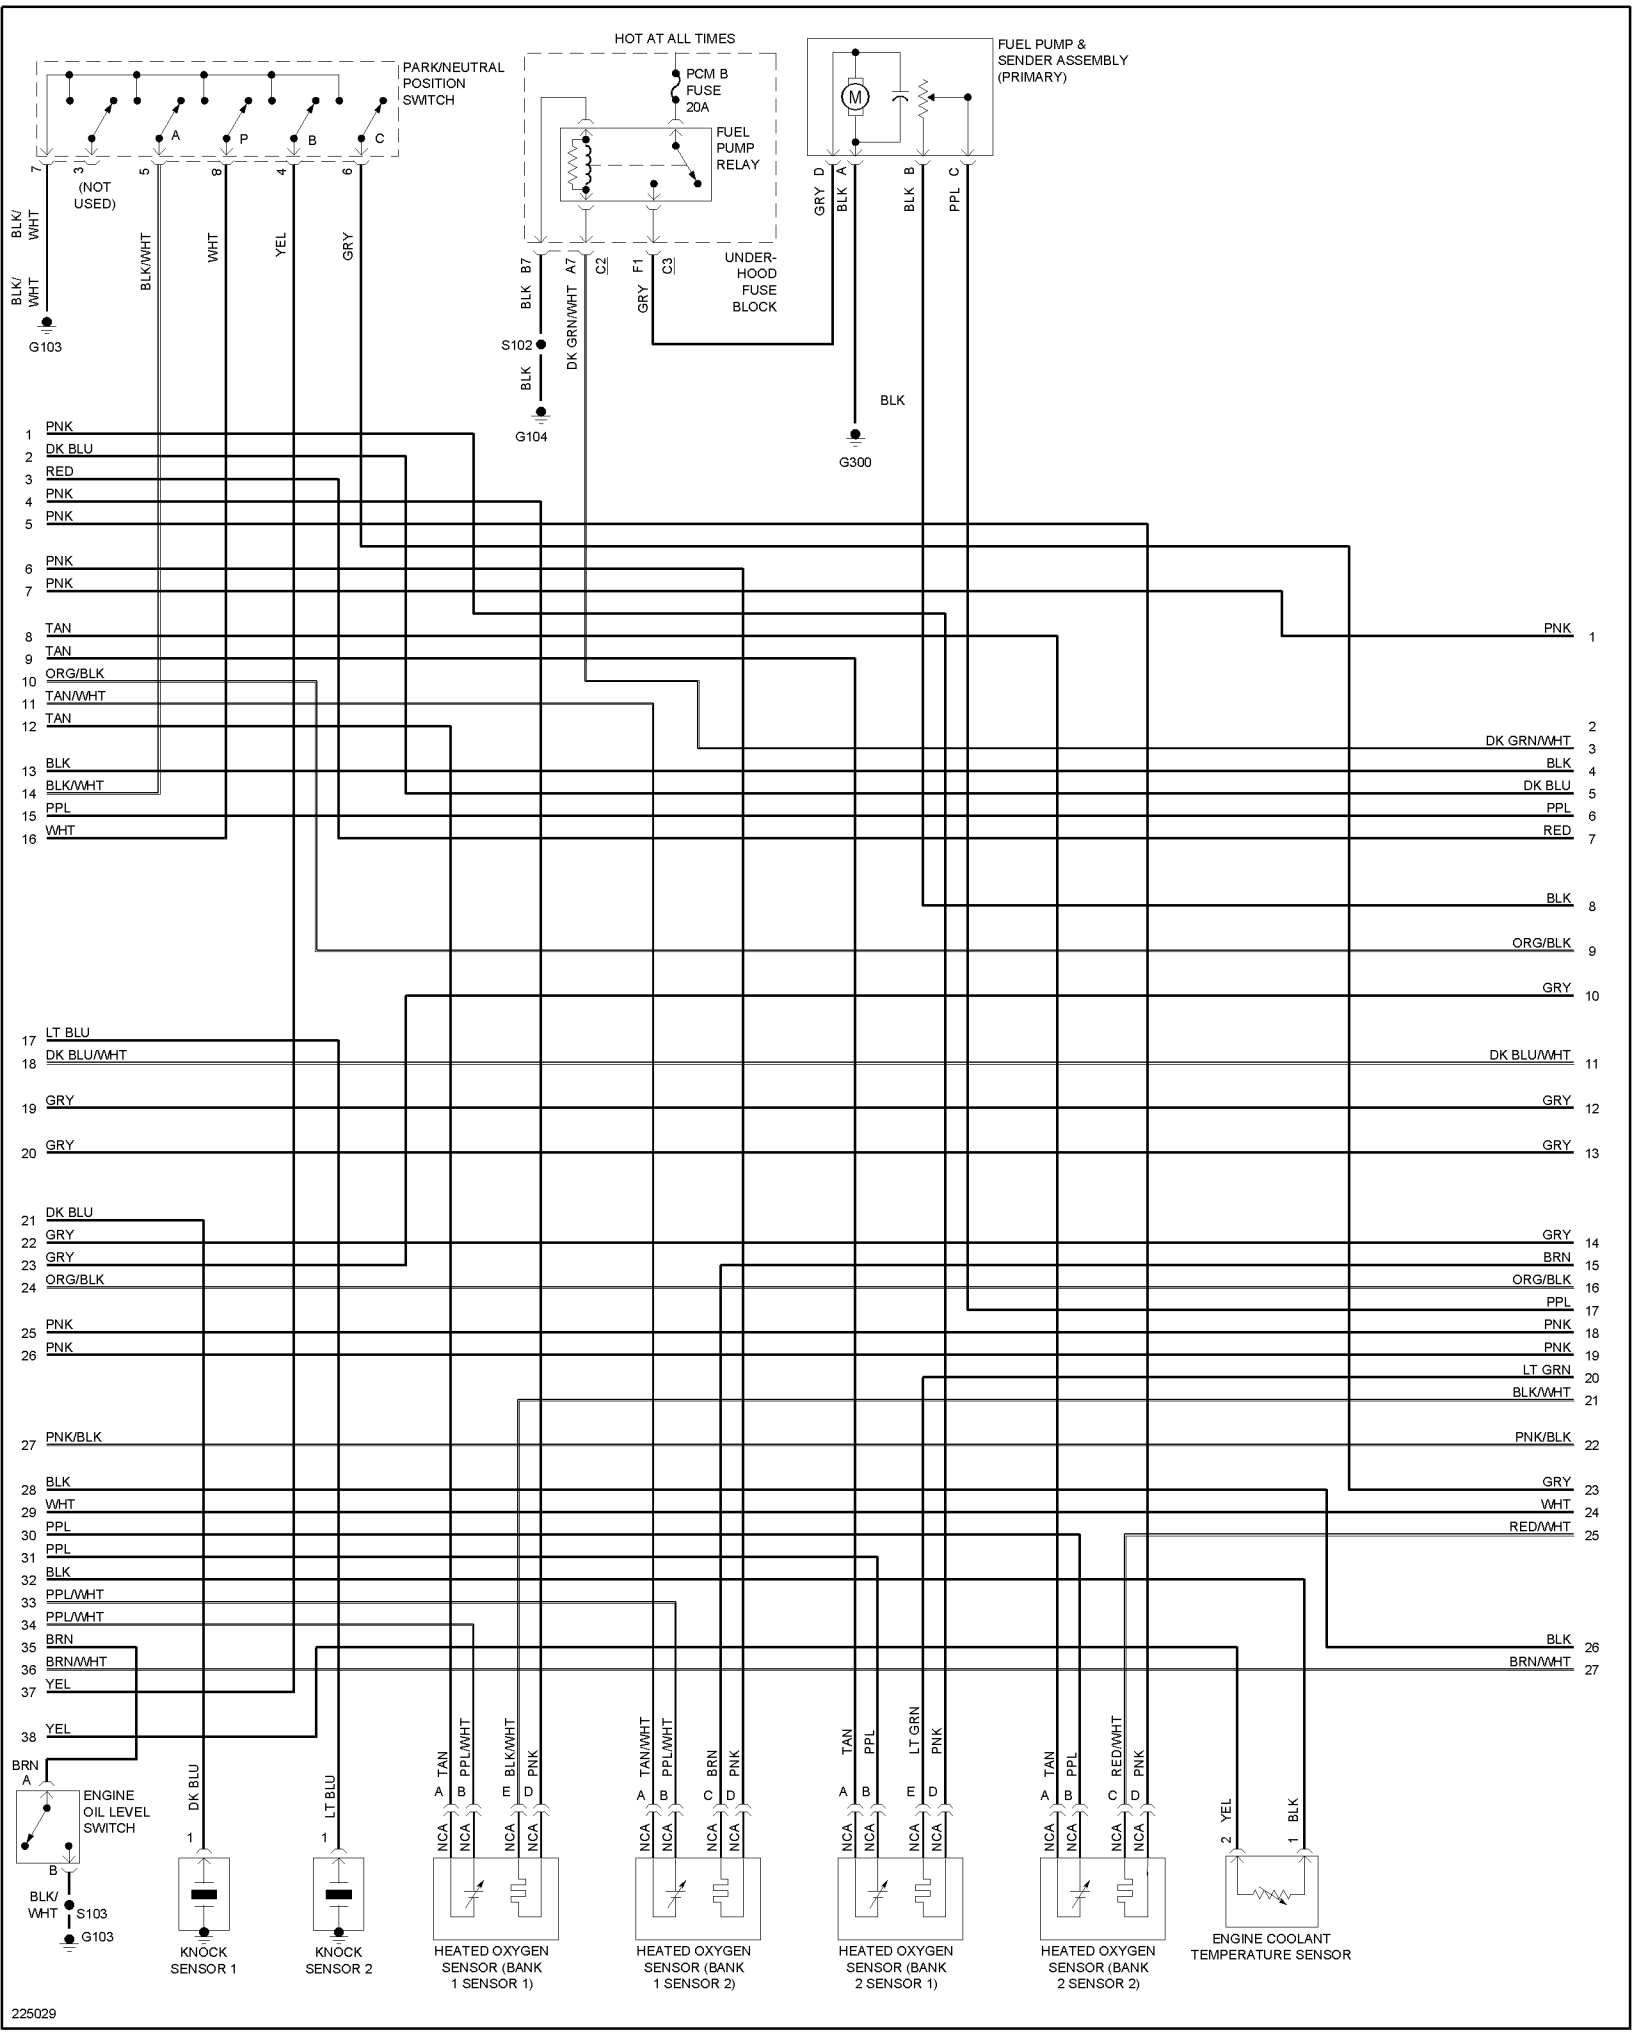
PARK/NEUTRAL POSITION SWITCH
A
P
B
C
(NOT USED)
HOT AT ALL TIMES
PCM B FUSE 20A
FUEL PUMP RELAY
UNDER-HOOD FUSE BLOCK
FUEL PUMP & SENDER ASSEMBLY (PRIMARY)
M
G103
S102
G104
G300
BLK/WHT
BLK/WHT
BLK/WHT
WHT
YEL
GRY
BLK B7
DK GRN/WHT A7
C2
GRY F1
C3
GRY D
BLK A
BLK B
PPL C
BLK
1 PNK
2 DK BLU
3 RED
4 PNK
5 PNK
6 PNK
7 PNK
8 TAN
9 TAN
10 ORG/BLK
11 TAN/WHT
12 TAN
13 BLK
14 BLK/WHT
15 PPL
16 WHT
17 LT BLU
18 DK BLU/WHT
19 GRY
20 GRY
21 DK BLU
22 GRY
23 GRY
24 ORG/BLK
25 PNK
26 PNK
27 PNK/BLK
28 BLK
29 WHT
30 PPL
31 PPL
32 BLK
33 PPL/WHT
34 PPL/WHT
35 BRN
36 BRN/WHT
37 YEL
38 YEL
PNK 1
DK GRN/WHT 2
BLK 3
BLK 4
DK BLU 5
PPL 6
RED 7
BLK 8
ORG/BLK 9
GRY 10
DK BLU/WHT 11
GRY 12
GRY 13
GRY 14
BRN 15
ORG/BLK 16
PPL 17
PNK 18
PNK 19
LT GRN 20
BLK/WHT 21
PNK/BLK 22
GRY 23
WHT 24
RED/WHT 25
BLK 26
BRN/WHT 27
BRN
ENGINE OIL LEVEL SWITCH
BLK/WHT
S103
G103
DK BLU
KNOCK SENSOR 1
LT BLU
KNOCK SENSOR 2
TAN
PPL/WHT
BLK/WHT
PNK
HEATED OXYGEN SENSOR (BANK 1 SENSOR 1)
TAN/WHT
PPL/WHT
BRN
PNK
HEATED OXYGEN SENSOR (BANK 1 SENSOR 2)
TAN
PPL
LT GRN
PNK
HEATED OXYGEN SENSOR (BANK 2 SENSOR 1)
TAN
PPL
RED/WHT
PNK
HEATED OXYGEN SENSOR (BANK 2 SENSOR 2)
YEL
BLK
ENGINE COOLANT TEMPERATURE SENSOR
NCA
225029