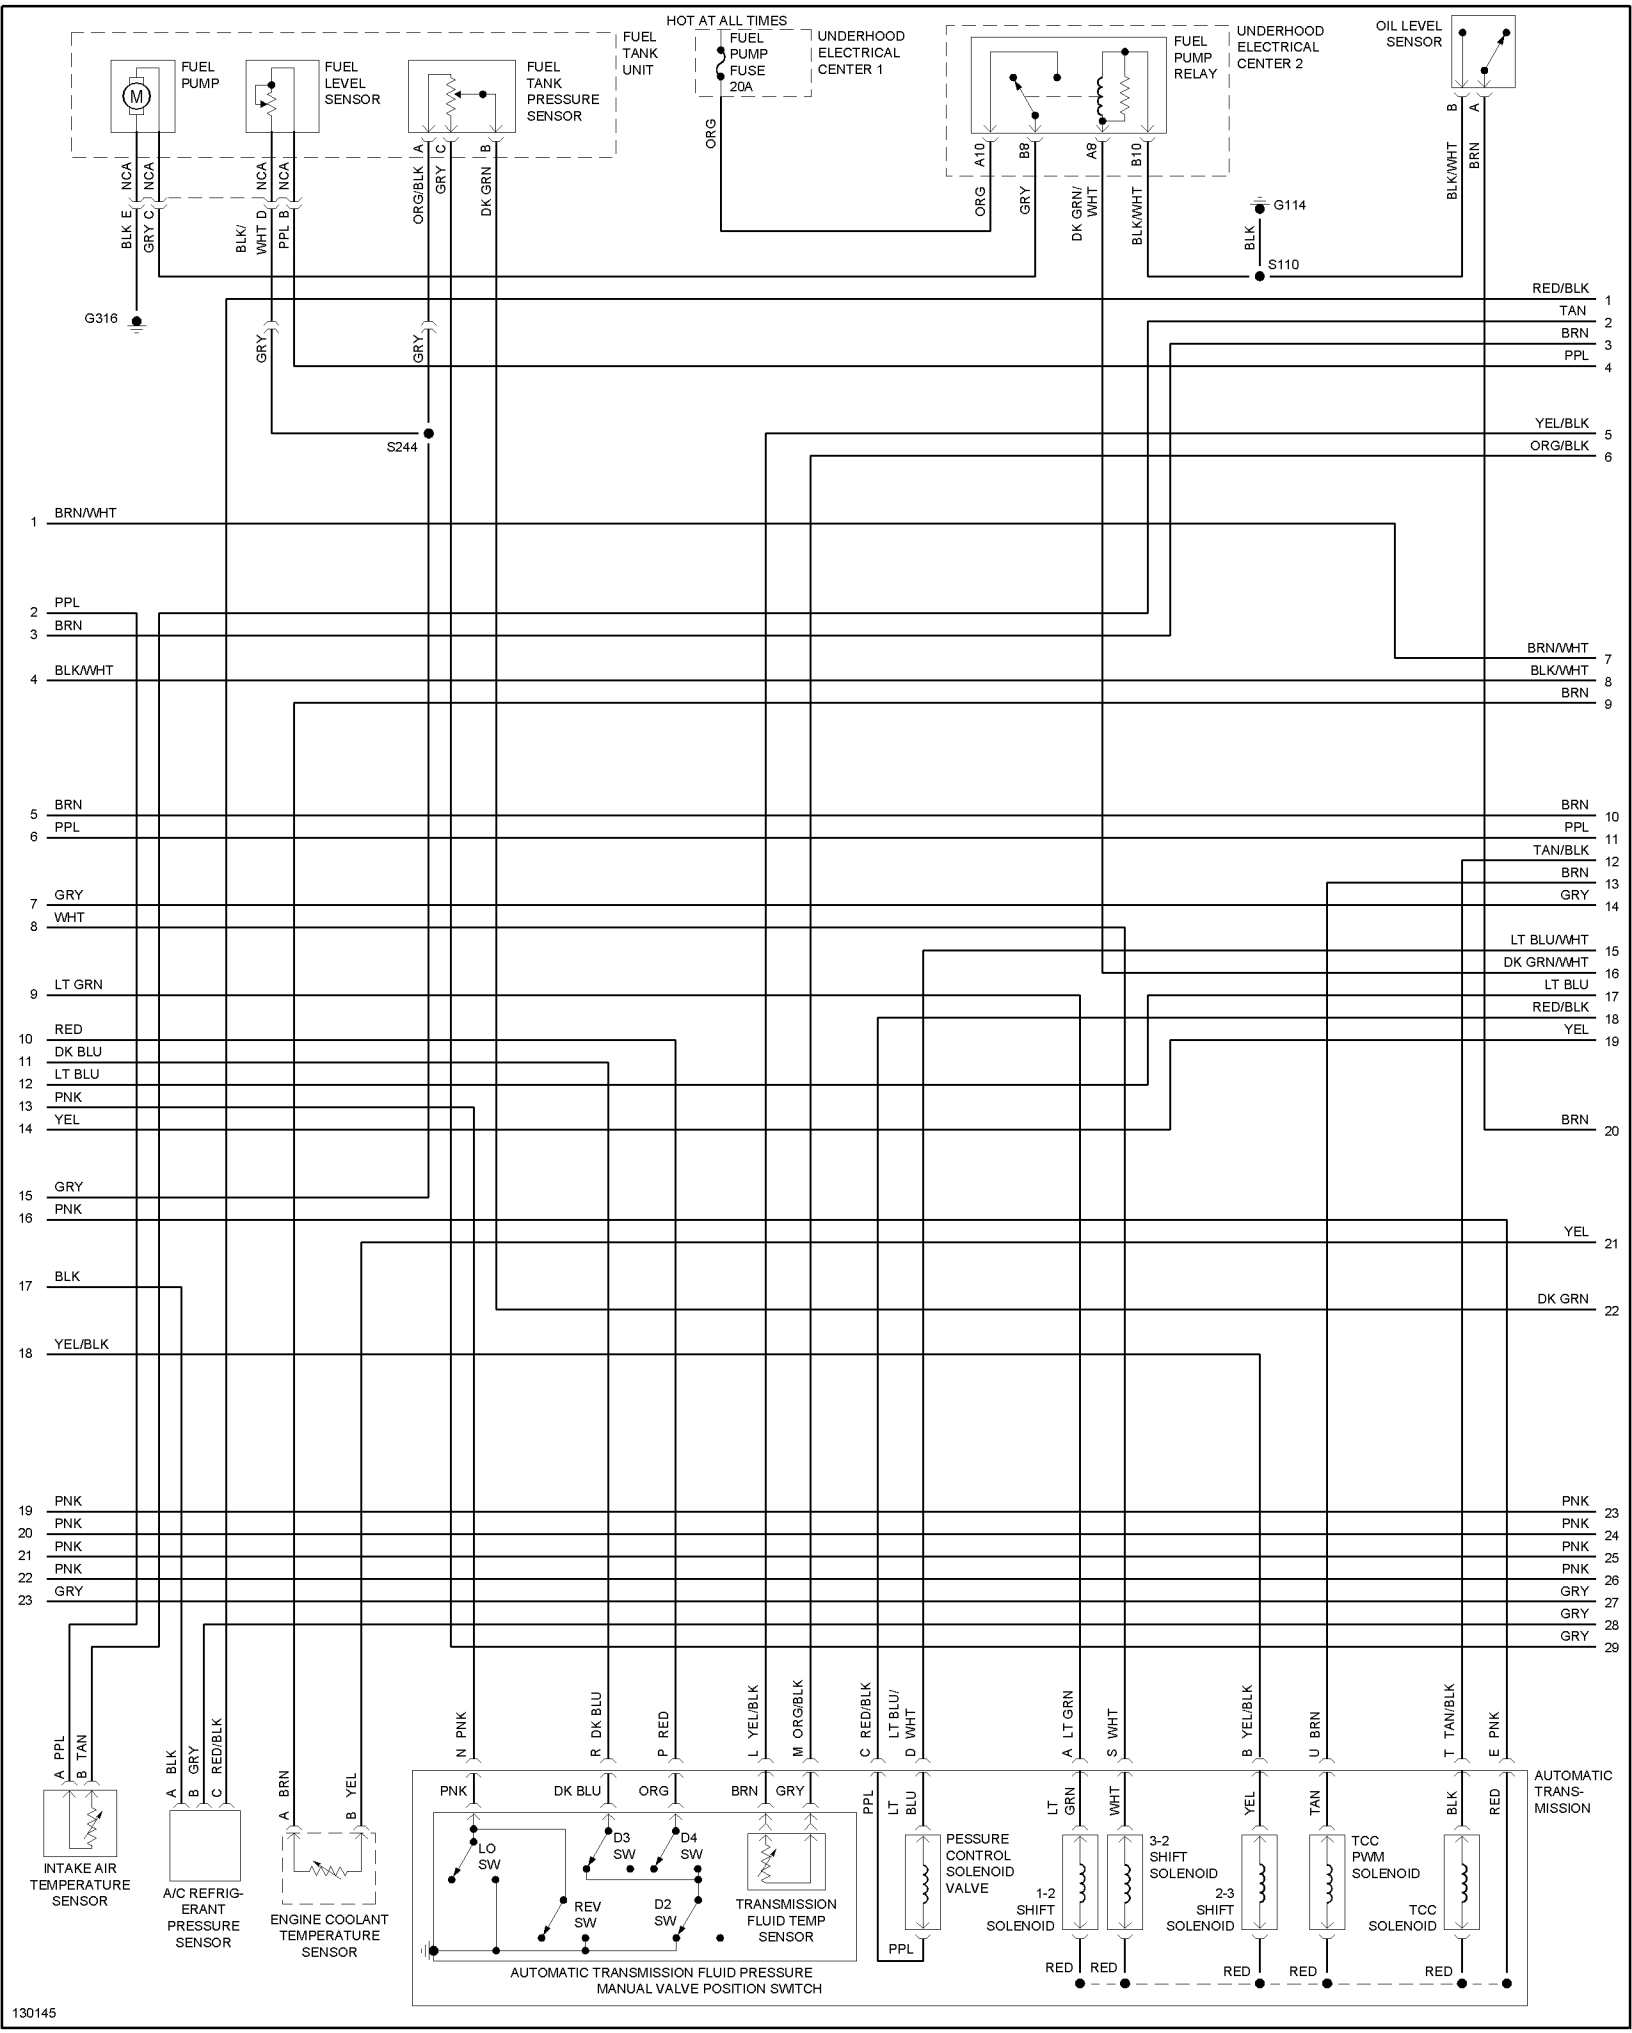
FUEL PUMP
FUEL LEVEL SENSOR
FUEL TANK PRESSURE SENSOR
FUEL TANK UNIT
HOT AT ALL TIMES
FUEL PUMP FUSE 20A
UNDERHOOD ELECTRICAL CENTER 1
FUEL PUMP RELAY
UNDERHOOD ELECTRICAL CENTER 2
OIL LEVEL SENSOR
G316
S244
G114
S110
INTAKE AIR TEMPERATURE SENSOR
A/C REFRIG-ERANT PRESSURE SENSOR
ENGINE COOLANT TEMPERATURE SENSOR
LO SW
D3 SW
D4 SW
REV SW
D2 SW
TRANSMISSION FLUID TEMP SENSOR
AUTOMATIC TRANSMISSION FLUID PRESSURE MANUAL VALVE POSITION SWITCH
PESSURE CONTROL SOLENOID VALVE
1-2 SHIFT SOLENOID
3-2 SHIFT SOLENOID
2-3 SHIFT SOLENOID
TCC PWM SOLENOID
TCC SOLENOID
AUTOMATIC TRANS-MISSION
130145