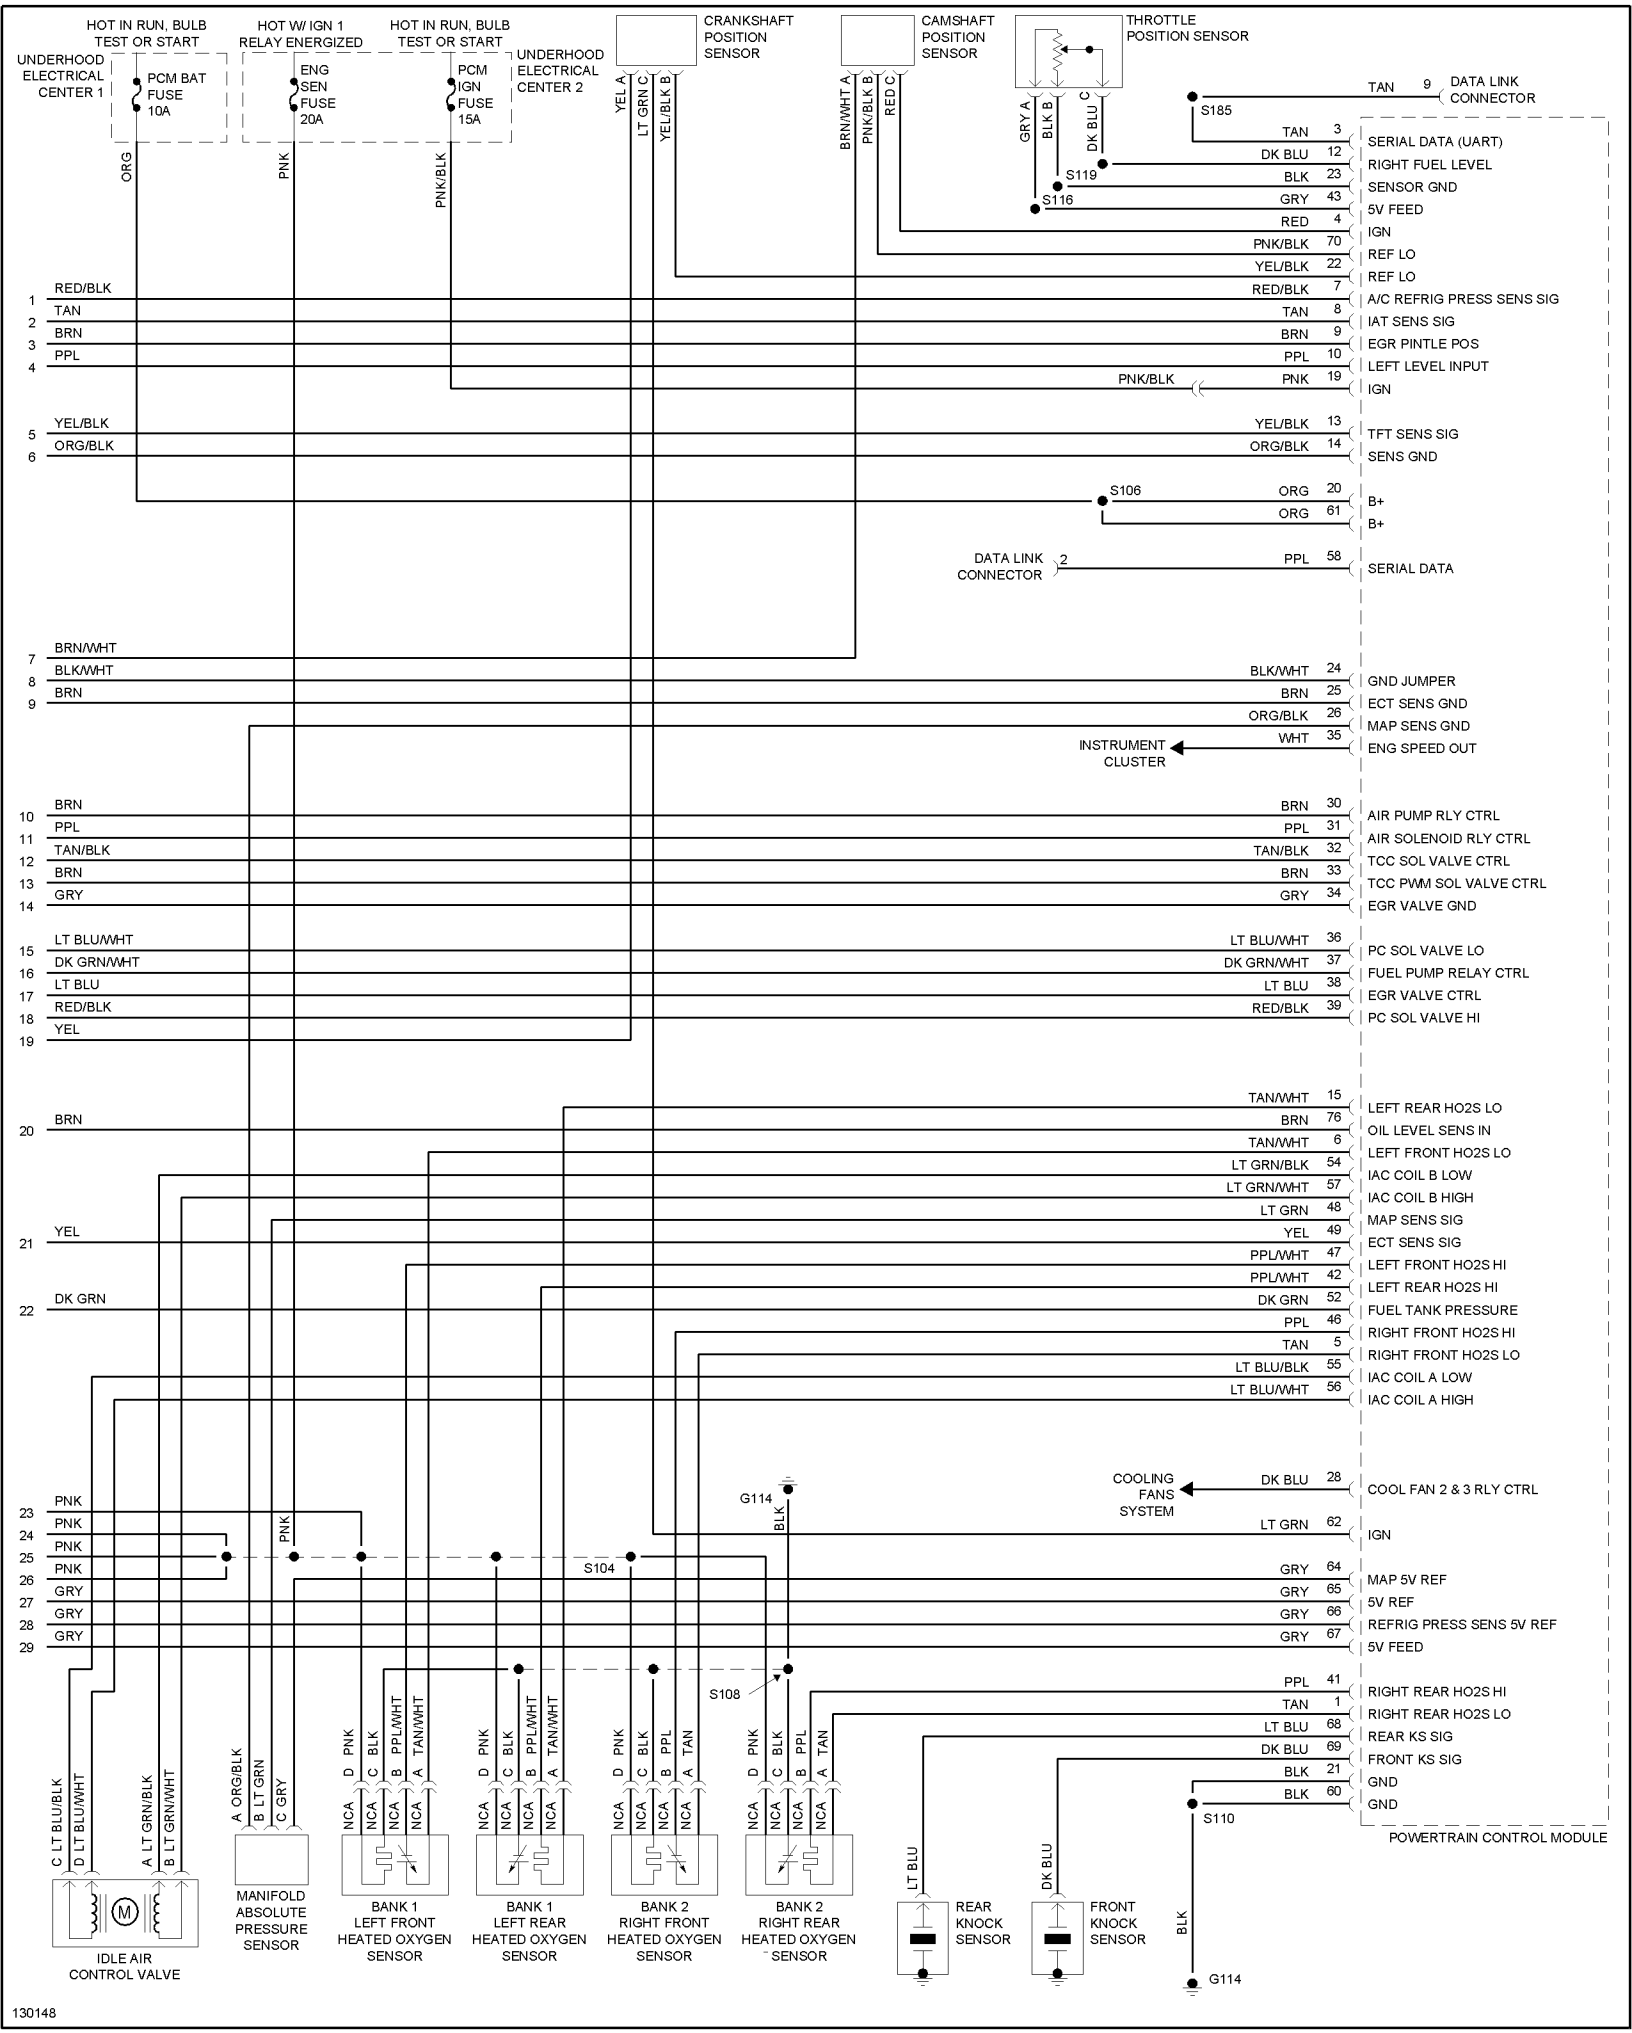
HOT IN RUN, BULB TEST OR START
HOT W/ IGN 1 RELAY ENERGIZED
HOT IN RUN, BULB TEST OR START
UNDERHOOD ELECTRICAL CENTER 1
PCM BAT FUSE 10A
ENG SEN FUSE 20A
PCM IGN FUSE 15A
UNDERHOOD ELECTRICAL CENTER 2
CRANKSHAFT POSITION SENSOR
CAMSHAFT POSITION SENSOR
THROTTLE POSITION SENSOR
DATA LINK CONNECTOR
SERIAL DATA (UART)
RIGHT FUEL LEVEL
SENSOR GND
5V FEED
IGN
REF LO
REF LO
A/C REFRIG PRESS SENS SIG
IAT SENS SIG
EGR PINTLE POS
LEFT LEVEL INPUT
IGN
TFT SENS SIG
SENS GND
B+
B+
SERIAL DATA
GND JUMPER
ECT SENS GND
MAP SENS GND
ENG SPEED OUT
INSTRUMENT CLUSTER
AIR PUMP RLY CTRL
AIR SOLENOID RLY CTRL
TCC SOL VALVE CTRL
TCC PWM SOL VALVE CTRL
EGR VALVE GND
PC SOL VALVE LO
FUEL PUMP RELAY CTRL
EGR VALVE CTRL
PC SOL VALVE HI
LEFT REAR HO2S LO
OIL LEVEL SENS IN
LEFT FRONT HO2S LO
IAC COIL B LOW
IAC COIL B HIGH
MAP SENS SIG
ECT SENS SIG
LEFT FRONT HO2S HI
LEFT REAR HO2S HI
FUEL TANK PRESSURE
RIGHT FRONT HO2S HI
RIGHT FRONT HO2S LO
IAC COIL A LOW
IAC COIL A HIGH
COOL FAN 2 & 3 RLY CTRL
COOLING FANS SYSTEM
IGN
MAP 5V REF
5V REF
REFRIG PRESS SENS 5V REF
5V FEED
RIGHT REAR HO2S HI
RIGHT REAR HO2S LO
REAR KS SIG
FRONT KS SIG
GND
GND
POWERTRAIN CONTROL MODULE
IDLE AIR CONTROL VALVE
MANIFOLD ABSOLUTE PRESSURE SENSOR
BANK 1 LEFT FRONT HEATED OXYGEN SENSOR
BANK 1 LEFT REAR HEATED OXYGEN SENSOR
BANK 2 RIGHT FRONT HEATED OXYGEN SENSOR
BANK 2 RIGHT REAR HEATED OXYGEN SENSOR
REAR KNOCK SENSOR
FRONT KNOCK SENSOR
S185
S119
S116
S106
S104
S108
S110
G114
130148