




DW301 vs. OE Gen1 CTS-V Pump
Installed in Assembly Flow Test

PSIG	OE Pump		DW301		% Increase
	LPH	AMPS	LPH	AMPS	LPH
30	171	11.2	250	12.0	46%
40	160	11.8	232	12.4	45%
50	129	12.5	218	12.8	69%
60	98	13.2	207	13.3	113%
70	85	14.1	189	13.8	121%
80	*	*	171	14.1	
90	*	*	153	14.6	
100	*	*	134	15.1	

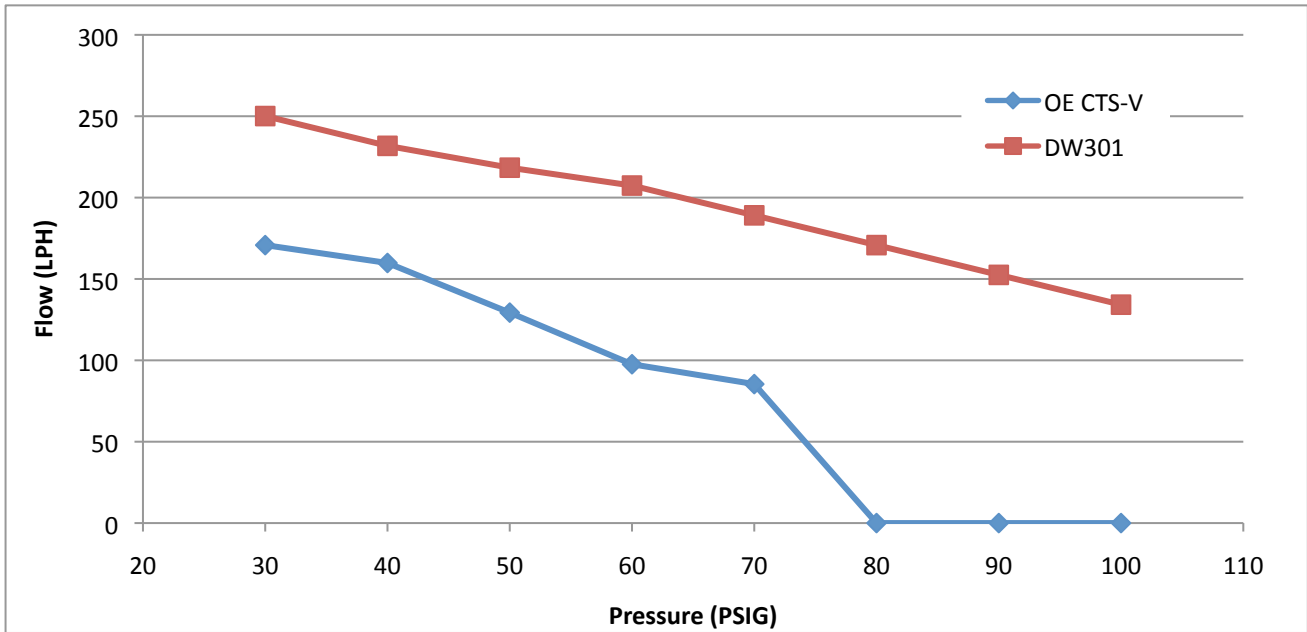

* The OE pump would not exceed 70psi in our testing equipment.